



BRISTOL '405' 1955-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Terminal block	1955-58	37101B	Windshield wipers—cont'd		
Boot lamp	1955-58	31175A	Warning lights			Outer casing	1955	745054
Dipper	1955-58	31284A	Direction indicator ..	1955-58	*38106A	Motor to wheelbox ..	1955-58	744099
Flasher	1955-58	031046	Ignition	1955-58	38104A	" " " " ..	1955	740963
Fog and driving lamp ..	1955-58	31113A/D	Main beam	1955-58	*38105A	Wheelbox to wheelbox ..	1955-58	745179
Ignition and lighting ..	1955-58	31270A/B	Petrol reserve	1955-58	38103A	End tube	1955-58	740746
Knob	—	316285	Windshield wipers			Ferrule, casing retaining	1955-58	740715
Panel	1955-58	*78312A	Motor	1955-56	*75280A	Arm	1955-58	741839
Petrol reserve	1955-58	*31261D	" " " " ..	1957-58	*75232A	Blade	1955-58	*738735
Knob	—	317463	Wheelbox	1955	72635B	Overdrive equipment		
Solenoid, starting motor	1955-58	*76411E	Crosshead and rack assy.	1955-58	72683A	Switches		
Solenoid operating ..	1955-58	*31282A	Cut to 37 $\frac{1}{2}$ "	1955-58	741263	Control	1955-58	31500A
Stop lamp	1955-58	31082D/E				Interrupter	1955-58	*31077E
Windshield wiper ..	1955-58	*31302D						

BRISTOL '406' 1958-60

Ammeter	1958-60	36242A	Relay, horn	1958-60	*33116B	Windshield wipers		
Battery	1958-60	GT9A	Starting motor	1958-60	25026E	Motor	1958-60	75310A
Coil, ignition	1958-60	*45054H/K	Steering column control			Wheelbox	1958-60	72686B
Control box	1958-60	*37187A/L	Stop bracket	1958-60	323736	Crosshead and rack assy.	1958-60	744256
Distributor	1958-59	*40592A	Contact	1958-60	323738	Outer casing		
" " " "	Later	40629A	Bracket and contact plate	1958-60	*324338	Motor to wheelbox ..	1958-60	54710550
Flasher unit	1958-60	35010A	SWITCHES			Wheelbox to wheelbox ..	1958-60	54710551
Fuse box	1958-60	033239	Boot lamp	1958-60	31175F	End tube	1958-60	740746
Generator	1958-60	22258E/F	Courtesy	1958-60	*31302D	Arm	1958-59	744133
Horn			Dipper	1958-60	31284A	" " " " ..	1960	54711538
Low note	1958-60	69046F	Door pillar	1958-60	31175F	Blade	1958-60	*737907
High note	1958-60	69047F	Flasher	1958-60	031046	" " " " ..	1960	54711283
LAMPS			Ignition and lighting ..	1958-60	31270B	Overdrive equipment		
Boot	1958-60	53343A	Knob	—	316285	Solenoid, transmission	1958	*76505B
Flasher, front and rear ..	1958-60	*52272D	Panel	1958-60	*78312A	gear	1959-60	76515A
Flasher, repeater	1958-60	52326B	Reverse lamp	1958-60	*31077E	ditto		
Front grille illumination ..	1958-60	39006A	Solenoid, starting motor	1958-60	*76411E	Switches		
Number plate illumination	1958-60	53518A	Solenoid operating ..	1958-60	*31282A	Interrupter	1958-60	*31077E
Reverse	1958-60	*52246B	Stop lamp	1958-60	31082E/J	Manual control	1958-60	31500B
Stop tail and reflex ..	1958-60	53377B	Windshield wiper ..	1958-60	31847A			
Petrol reserve valve ..	1958-60	78037A	Terminal block	1958-60	37101B			
Relay, foglamp	1958-60	33093A						

BRUSH ELECTRIC Battery Vehicle 1951-55

Fuse box	1951-55	37104A	LAMPS			Windshield wipers		
Horn	1951-55	*069213	Roof lamp	1951-55	*56017A	Motor	1951-55	*75126A
Horn push	1951-55	76205A	Mirror	1951	62515A	Arm	1951-55	*735049
			Reflex reflector	1952-55	*062562	Blade	1951-55	727802

CITROEN 15 h.p. 1946-55

Ammeter	1946-54	36033D	LAMPS, Head, Home—			Trafficators	1946-52	*54017B
Coil, ignition	1946-54	*45020A/B	<i>continued</i>			" " " " ..	1953-55	54044A/D
" " " "	1955	*45012B	R.H.D., dip left			Warning lights		
Control arm	1946	*310518	(L.H. and R.H.) ..	1951-52	*50718F	Flasher	1951-54	*38069A
" " " "	Later	31110A	ditto	1953-55	51473A	Main beam	1949-54	*38069A
Control box	1947-50	31129A	Head, Export			Windshield wipers		
" " " "	1946-48	*37031A/B	R.H.D., dip left ..	1950-52	*50718F	Motor	1946-48	75066A
" " " "	1949-50	37057E	L.H.D., dip right ..	1950-52	*50775E	" " " " ..	1949-50	*75055K
" " " "	1951-52	37065E	Number plate illumination			" " " " ..	1951	*75055L
" " " "	Later	*37138A/D	and boot	1954-55	53308A	" " " " ..	1952-55	75152A
Distributor	1946-49	40100E	Side	1949-50	52030A	" " " " ..	1946-48	735691
" " " "	Later	*40219A/B	(U.S.A.)	1953-55	*52162B/D	Clutch housing		
" " " "	1950	*40219D	Stop tail and number plate	1946	*53028B	Wheelbox		
" " " "	Later	1950	" " " " ..	1947-52	*53063B	With switch	1949-50	72608A/D
" " " "	1951-52	*40236B/D	Stop tail (Export) ..	1949-50	*53151B/D	" " " " ..	1951-55	72567A/H
" " " "	Later	*40332A/E	Tail and flasher (U.S.A.)	1953-54	53200A	Less switch	1949-50	72607A/B
Flasher unit	1953-54	*35003A	Reflex reflector (U.S.A.)	1953-54	*57035D	" " " " ..	1951-55	72568A/E
Flasher relay	1953-54	33117A	Starting motor	1946	*255273	Bracket, shaft, short	1946-48	737243
Fuse box	1952-55	033239	" " " " ..	1946-48	25502A	Bracket coupling ..	1946-48	729036/S
Generator	1946	*228199	" " " " ..	1949-55	25531A/D	Link, primary	1946-48	734756
" " " "	1947-50	22416B	SWITCHES			" " " " ..	1946-48	737281
" " " "	1951-52	*22250E/F	Ignition	1951-55	31287A	Crosshead and rack assy.		
" " " "	Later	22258D	Ignition and lighting ..	1946-50	*34025B	Cut to 34 $\frac{1}{2}$ "	1949-52	736177
Horn			Solenoid, starting motor	1946-48	76022B	Crosshead and rack assy.	1953-55	738764
Low note	1946-48	*69021A	Solenoid operating ..	1949-55	*76411D/E	Outer casing		
" " " "	1949-50	*69011F	" " " " ..	1946-54	317063	Motor to wheelbox ..	1949-55	739870
" " " "	1955	69046A	Starting motor	1955	31363A	Wheelbox to wheelbox ..	1949-52	*739943
High note	1946-48	*69022A	Stop lamp	1946	*764150	" " " " ..	1953-55	739937
" " " "	1949-50	*69012F	Spring	1946-53	*31281B	3", offside wheelbox ..	1949-55	740031
" " " "	1955	69047A	Stop lamp	1954-55	31571A	Grommet	1946-52	734874
LAMPS			Trafficator	1951	31440A	Housing or wheelbox	1953-55	733695
Head, Home			" " " " ..	1951-52	31190A	Wheelbox	1946-54	*735076
R.H.D., dip left (L.H.)	1946	*50253B	" " " " ..	1953-55	031046	Arm	1955	*735098
" " non-dip (R.H.)	1946	*50254B	Knob	1953-55	311156	Blade	1946-55	727707
" " dip left (L.H.)	1947-50	*50716D						
" " non-dip (R.H.)	1947-50	*50717D						

* See Supersession Chart L.H.D. .. Left hand drive † No longer available—refer to Wiper Conversion Set Section. L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



CITROEN 23 h.p. 1946-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-53	36033D	LAMPS—continued			Trafficators	1949-52	*54017B
Coil, ignition	1949-53	*45020A/B	Side	1949	52164A	" Later	1952-55	54044A/D
"	1954-55	*45012B	"	1950-52	52134A/B	Warning lights		
Control arm	1949-50	31129A	"	1953-55	52030A	Flasher	1951-53	*38069A
Control box	1946-55	37057E	" (U.S.A.)	1949-50	52134A/B	Main beam	1949-53	*38069A
Distributor	1946-55	40173A/E	"	1953	*52162B/D	Windshield wipers		
Flasher unit	1953	*35003A	Stop tail and number plate	1949-50	*53029A	Motor	1949-50	*75055K
Flasher relay	1953	33117A	"	1951-52	*53063B	"	1951	*75055L
Generator	1946-55	22430E	Tail and flasher indicator			" Later	1951-55	75152A
Horn			(U.S.A.)	1953	53200A	Wheelbox		
Low note	1949-51	*69019A	Reflex reflector (U.S.A.)	1953	*57035D	With switch	1949-50	72608A/D
"	1955	69046A	Starting motor	1949-55	25513A/D	"	1951-55	72567A/H
High note	1949-51	*69020A	SWITCHES			Less switch	1949-50	72607A/B
"	1955	69047A	Ignition	1951-55	31287A	"	1951-55	72568A/E
LAMPS			Ignition and lighting	1949-50	*34025B	Crosshead and rack assy.		
Head, Home			Solenoid, starting motor	1949-55	*76411D/E	Cut to 34 1/8"	1949-55	736177
R.H.D., dip left (L.H.)	1949-50	*50861A	Solenoid operating	1949-54	*317063	Outer casing		
" non-dip (R.H.)	1949-50	*50862A	Stop lamp	1955	31363A	Motor to wheelbox	1949-55	739870
" dip left			Spring	1949-53	31281B	Wheelbox to wheelbox	1949-52	*739943
(L.H. and R.H.)	1951-52	*50718F	Trafficator	1951	*31571A	"	1953-55	*739979
"	1953-55	51473A	" Later	1951-52	31190	3", offside wheelbox	1949-55	740031
Head, Export			Lever	1953-55	311156	Grommet, wheelbox	1949-53	733874
R.H.D., dip left	1951-52	*50718F				"	1954-55	733695
L.H.D., dip right	1951-52	*50775E				Arm	1949-54	*735076
Number plate illumination						"	1955	*735098
and boot	1955	53308A				Blade	1949-55	727707

CITROEN 2CV 1954-60

Ammeter	1954-60	*36113A	SWITCHES			Warning light, petrol		
Coil, ignition	1954-60	45057A/B	Ignition	1954-60	31287A/B	Van	1954-60	38094A
Horn	1957-60	*70146A/B	Trafficator	1954-60	31250A/H	Windshield wipers		
LAMPS			Lever	—	311156	Arm	1956-60	*735096
Number plate illumination			Trafficators	1954-60	54053A	Blade	1956-60	727802
(Van)	1954-60	A53101						
		E/H						

CITROEN DS19 1956-60: ID19 1959-60: 'Safari' 1960

Ammeter	1957-59	36233B/D	LAMPS—continued			Warning lights		
Bulb holder, panel light	1960	863511	Stop	1958-60	53686A/E	High pressure	1960	38158A
Bulb	—	987	" ("Safari" only)	1960	53600A/E	Ignition	1960	38185A
Coil, ignition (ID19 only)	1959-60	*45053K	Tail	1956-60	*53533A/B	Main beam	1960	38210A
Control box	1956	37183H	" ("Safari" only)	1960	*53902A/B	Oil	1960	38209A
"	1957-60	*37187K/L	Reflex reflector	1956-60	57111A	Windshield wipers		
Fuse box	1956-60	033239	Starting motor	1956-60	25553B	Motor	1958-60	75330A
Generator	1956	*22483B	SWITCHES			Wheelbox	1958-60	72704A
"	1957-60	22258E/F	Dimmer and demister	1956-59	78311A	Crosshead and rack assy.	1958-60	743955
Horn			"	1960	78346A	Outer casing		
Low note	1956-60	69046B/F	Knob, dimmer	1956-60	768972	Motor to wheelbox		
High note	1956-60	69047B/F	" demister	1956-60	768973	Left hand	1958-60	745678
LAMPS			Ignition	1956-60	768972	Right hand	1958-60	745677
Flasher, rear	1956-60	*52272A/D	Interior light	1956-60	31126B	End tube	1958-60	740746
Head, Home			Knob	1956-60	316144	Ferrule, casing retaining	1958-60	740715
R.H.D., dip left	1956-60	51988A/D	Panel	1956-59	*78320A	Grommet, wheelbox	1958-60	740811
Number plate illumination	1956-59	53101H	Knob	—	768972	Arm, left hand	1958-60	745968
"	1960	53518A	Solenoid, starting motor	1956-60	*76411E	Arm, right hand	1958-60	745967
Reverse	1960	53378A	Solenoid operating (ID19 only)	1959-60	31363A	Blade	1958-60	737897

CLECCO ELECTRICS Battery Vehicle 1952-54

Fuse box	1952-54	*37137B	LAMPS—continued			Windshield wipers		
Horn	1952-54	*069213	Tail and number plate	1952-54	*53007B	Motor	1952-54	*75120A
Horn push	1952-54	76205A	SWITCHES			Arm	1952-54	*735049
LAMPS			Lighting	1952-54	34065A	Blade	1952-54	727802
Side	1952-54	52102A						

COMMER 8 cwt. Van 1946-52: Estate Car 1949

Battery	1946-47	SG9A	Control box	1946	*37003A	Generator	1946-47	22449A
"	1948-49	GT9A	"	1947	*37031A	"	1948	*22411A
"	1950-52	GT7A	"	1948	37057E	"	1949	*22250A
Coil, ignition	1946-52	*45020A/B	" Later	1949-51	37065E	"	1950-51	*22250E/F
			Distributor	1951-52	*37138B	" Later	1951-52	22258D
			"	1946	*40042B/D	Horn	1946-48	069344
			"	1947-52	*40050A/J	" Later	1948-52	*69011F

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued



COMMER 8 cwt. Van 1946-52: Estate Car 1949—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.	
LAMPS			LAMPS—continued			SWITCHES—continued			
Head, Home			Stop tail and number plate	1946	*524753	Windshield wiper	1948-52	31192A	
R.H.D., L.H. and R.H.	1946	50129A	" " " "	1947-48	*53060A	Knob	—	*315077	
" dip left (L.H.)	1947	50511A	Stop tail	1949	53131B	Trafficators	1946-48	*54009B	
" non-dip (R.H.)	1947	50512A	" " " " Later	1949	*53151B/D	" " " " Later	1948-50	*54018D	
" dip left (L.H.)	1948-49	*50792B	" " " " Later	1950-51	53178B/D	" " " " Later	1950-52	*54048A	
" non-dip (R.H.)	1948-49	*50578E	Mirror	1946	620511	Warning light (main beam)	1950-52	38052B	
" dip left (L.H.)	1950	50572F	Rear reflector (U.S.A.)	1950-52	65424A	Windshield wipers			
" non-dip (R.H.)	1950	*50573F	Starting motor	1946-47	*250603	Motor	1946-47	75066A	
" dip left (L.H.)	Later	1950-51	" " " " Later	1948	25016A	" " " " Later	1948-50	*75053J	
" non-dip (R.H.)	Later	1950-51	" " " " Later	1949	*25022A	" " " " Later	1951	*75053K	
R.H.D., dip left	1951	*50954A	" " " " Later	1949-52	25022A/L	" " " " Later	1952	75150A	
(R.H. and L.H.)	Later	50941A	Steering column control			Clutch housing	1946-47	737357	
" " " "	1952		Home	1946-47	323801	Wheelbox	1948-52	*72548A/K	
" " " "			Export	1946-47	323821	Bracket, with shaft and coupling	1946-47	735395	
Head, Export			Steering column control	1947-48	32724B/D	Bracket, shaft, short	1946-47	737243	
R.H.D., L.H. and R.H.	1947-48	50519A	" " " " Later	1949-50	32786E	Bracket coupling	1946-47	729036/S	
" dip left	1949	*50792B	" " " " Later	1951	32862B/F	Link	1946-47	733813	
(L.H. and R.H.)	1950-51	*50445K	" " " " Later	1951-52	32856B/F	Crosshead and rack assy.	1948	736177	
" " " " Later	1951	*50954A	SWITCHES			ditto Cut to 42 1/2"	Later	1948-52	736307
" " " " Later	1952	50941A	Dipper	1951-52	31284A	Outer casing			
L.H.D., dip right	1950-51	*A50445K	Heater	1950-52	*78245A	Motor to wheelbox	1948	739868	
(L.H. and R.H.)	1951-52	*50804D	Knob	1946-47	*768548	ditto Later	1948-52	*739832	
" " " " Later			Ignition and lighting	1946-47	*344924	Wheelbox to wheelbox	1948	739937	
Head, Export Europe	1950-51	*B50445K	" " " "	1948	*34023B	ditto Later	1948-51	*739957	
(not France)	1951-52	*50963A	" " " "	1949-52	*34050A	Grommet, housing or wheelbox	1952	*739982	
ditto	Later		Panel	1948	*31108A	ditto	1946-48	733874	
Head, Export France	1948-49	50664E	Knob	1949-51	*315059	ditto	1948-52	735349	
" " " " Later	1950-51	*50790E	Panel	1948	*31192A	Grommet, scuttle	1946-47	729378	
" " " " Later	1951-52	*50962A	Knob	1949-51	*315077	Arm	1946-47	*735098	
Head, Export U.S.A.	1949-50	50806A	Starting motor	1946-48	*76404B	" R.H.D.	1948	*737425	
" " " " Later	1951-52	50811A	" " " " Later	1949-52	*764401	" L.H.D.	Later	1948-52	*737524
Number plate illumination	1949-52	53093E	Coupling	1946-52	764428	Blade	1946-47	727707	
Side	1946	52036A	Stop lamp	1946-47	*31281B	" " " " Later	1948	737424	
" " " " Later	1947	*52066A	Spring	1948	*315723	" " " " Later	1948-50	*737433	
" " " " Later	1950-52	52139B	" " " " Later	1949-52	*315714	" " " " Later	1951-52	738724	
" (U.S.A.)	1949	52139B							

COMMER 'Express' Delivery Van and Pick-up Truck 1953-60

Ammeter (special orders)	1955-57	36197A	LAMPS—continued			SWITCHES—continued		
Battery	1953-58	GT7A	Head, Export France	1953	*50962A	Solenoid operating	1955-60	31447A
" " " "	1959-60	BT7A	" " " " Later	1953-55	*51341A	Starting motor	1953-54	76423A
Bulb holder, speedometer	1955-57	39007A	" " " " Later	1956-59	51739B	Coupling	1953-60	764428
Coil, ignition	1953-56	*45020A/B	" " " " Later	1959-60	58271A	Stop lamp	1953-60	31281B
" " " " Later	1957-59	*45053H/J	Head, Export Sweden	1953	58610A	Spring	1953-56	*315714
" " " " Later	1960	*45054M	Head, Export U.S.A.	1953	50811A	" " " " Later	1957-60	315774
Control box	1953-55	*37138B/D	" " " " Later	1953-55	51343A	Windshield wiper	1953-60	*31261A/D
" " " " Later	1956-59	37182A/H	" " " " Later	1956-60	51741B	Knob	1953-58	317456
" " " " Later	1959-60	37182J	Number plate illumination	1960	58493A	Trafficators	1959-60	54330754
" " " " Later	1960	37182K	Roof	1953-60	53093E/H	" " " " Later	1953-54	*54048A
Distributor			Side	1953-54	*56051A	Warning lights		
S.V. Engine	1953-56	*40050A/J	Side and flasher (U.S.A.)	1953-54	52139E	Flasher	1953-54	*38092A
O.H.V. Engine — from	1956	*40428A/B	" " " " (all models)	1953-54	*52162F	" " " " Later	1955-60	38119A
Chassis No. F460001	1956-58	40492A	" " " " Later	1957	*52240B	Main beam	1953-54	*38069A
O.H.V. Engine	1959-60	40492B	" " " " Later	1958-60	*52372A/B	" " " " Later	1955-60	38118A
Distributor	1960	40492D/E	Stop tail	1953-54	52403A/D	Windshield wipers		
" " " " Later	1956	35004A	Stop tail and flasher	1953-54	53178B/D	Motor	1953-54	75150A
Flasher unit	1953-55	*35003A	U.S.A.	1953-54	53178E/J	" " " " Later	1955-56	*75200B
" " " " Later	1956	*35004A	All models	1955-60	65424A	" " " " Later	1957-58	75296A/B
" " " " Later	1957-60	35011A	Rear reflector	1953-54	*57035A	" " " " Later	1959-60	75296E
Flasher relay	1953-60	33117A/D	Reflex reflector	1955-56	57095A	Wheelbox	1953-54	*72548A/K
Fuse box	1953-60	033239	" " " " Later	1957-59	57122A	ditto	1955-60	72663D/JF
Generator	1953-56	22258D	Starting motor	1960	25022A/L	Crosshead and rack assy.		
" " " " Later	1957-60	22258E/F	" " " " Later	1953-60	25022M	Cut to 42 1/2"	1953-54	736307
Horn			" " " " Later	1960	25022N/Q	" " 42 1/2"	1955	*743231
Low note	1953-54	69011F	Steering column control	1953	32868J/L	" " 42 1/2"	1956-60	743235
" " " " Later	1955-60	69046A/F	ditto	1953-60	32888A/B	Outer casing		
High note (optional)	1953-54	*69012F	SWITCHES			Motor to wheelbox	1953-54	*739832
" " " " Later	1955-60	69047A/F	Dipper	1953-60	31284A	" " " " Later	1955	745029
Horn relay (when twins fitted)	1955-60	*33116B	Heater	1953-54	*78245A	" " " " Later	1956-60	745138
LAMPS			Knob	—	*768548	Wheelbox to wheelbox	1953-54	*739982
Head, Home			Ignition	1953-60	31187D	" " " " Later	1955	740814
R.H.D., dip left	1953	50941A	Knob, choke control	1955	32662A	End tube	1953-54	745139
" " " " Later	1953-55	51336A	Lighting	1953-55	*31200A	" " " " Later	1955-60	740716
" " " " Later	1956-60	51736B	" " " " Later	1956	31126B	Ferrule, casing retaining	1955-60	740715
Head, Export			" " " " Later	1957-60	31200E	Grommet, wheelbox	1953	735349
L.H.D., dip right	1953	50973A	Knob	1953-58	316128	Arm, left hand drive	1953-54	*737576
" " " " Later	1953-54	*51337A	" " " " Later	1959-60	54330753	" " right hand drive	1955-60	745074
" " " " Later	1955-56	*51737B	Solenoid, starting motor	1955-60	*76411E	" " " " Later	1953-54	*737524
Head, Export Europe						Blade	1955-60	745073
(not France)	1953	50967A				" " " " Later	1953-60	738724
ditto	1953-55	51339A						
ditto	1956-59	51738B/D						
(except France & Sweden)								
Later	1959-60	58270A						

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 'Cob' Light Van 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-58	GLTW7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1959-60	BT7A	Head, Export France ..	1957	51739B	Stop lamp	1957	31281B
Coil, ignition	1957-60	*45053	" " " Later	1958-59	51990D/E	Spring	—	315774
Control box	1957-59	37182H	Head, Export Sweden ..	1959-60	58366A	Stop lamp	1958-60	31082E/H
" " " Later	1959	37182J	Head, Export U.S.A. ..	1957	51741B	Cap	—	316072
" " " " "	1959-60	37182K	" " " " "	1958-60	51991D/E	Windshield wiper ..	1957	31192D
Distributor	1957	*40050J	Number plate illumination	1957-60	53278B	Knob	—	317453
" (high compression)	1958-59	*40562A	Side and flasher	1957	52240B	Warning light (main beam)		
" " " " "	1960	40530A/D	" " " " Later	1957-58	*52372A/B	(U.S.A.)	1959-60	38118A
" " " " " Later	1960	40530E	Stop tail and flasher ..	1959-60	52403B	Windshield wipers		
" (low compression)	1958	40492A	Stop tail, flasher and reflex	1957	53178F	Motor	1957-58	75296A/B
" " " " " Later	1959-60	40492B	ditto (N. America) ..	1958-60	53640A/D	" " " " "	1959-60	75296E
" " " " " " "	1960	40492D/E	ditto " Later	1958-59	53754A	" " " " "	1957-58	72663F
Flasher unit	1957-60	35011A	Reflex reflector	1960	53752F	Wheelbox	1959-60	72673A
Fuse box	1957	033239	Relay, horn (when twins fitted)	1957	*33116B	Crosshead and rack assy.		
" " " " "	1958-60	033277	Starting motor	1957-60	25022A/L	Cut to 43 1/2"	1957-60	743235
Generator	1957-60	22258E/F	" " " " Later	1960	25022M	Outer casing		
Horn			Steering column control ..	1957	25022N/Q	Motor to wheelbox ..	1957	745138
Low note	1957-60	69046E/F	" " " " "	1958-60	32940D	Wheelbox to wheelbox	1957	745139
High note (optional) ..	1957-60	69047E/F	SWITCHES		33508B	" " " " "	1958-60	743706
LAMPS			Dipper	1957-60	31284A/D	End tube	1957-60	740746
Head, home			Flasher	1957	31533A	Arm, left hand drive ..	1957	745074
R.H.D., dip left ..	1957	51736B/D	" " " " "	1958-60	31737A/B	" " " " "	1958-59	741845
" " " " "	1958-60	51971E/H	" (N. America) ..	1958-60	31738A	" " " " "	1960	54711558
Head, Export Europe			Housing		348539	" right hand drive ..	1957	745073
(not France)	1957	51738B	Ignition and lighting ..	1957-60	31270B	" " " " "	1958-59	741844
ditto	1958-59	51989D/F	Knob	—	316285	" " " " "	1960	54711557
(except France & Sweden)			Starting motor	1957-60	76423A	Blade	1957	738724
Later	1959-60	58365A	Coupling	1957	764428	" " " " "	1958-60	737897
			" " " " "	1958-60	764466			

COMMER 'Cob' Series II 1960

Battery	1960	BT7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1960	BT9A	Head, Export Europe			Starting motor	1960	76423A
Coil, ignition	1960	45102E	(except France & Sweden)	1960	58359A	Coupling	—	764466
Control box	1960	37290D/E	Head, Export France ..	1960	58360A	Stop lamp	1960	31802D
Distributor			Head, Export Sweden ..	1960	58657A/B	Warning light (main beam)		
High compression ..	1960	40681A	Head, Export U.S.A. ..	1960	51779A/H	(U.S.A.)	1960	38118A
" " " " " Later	1960	40641B	Number plate illumination	1960	53278B	Windshield wipers		
" " " " " " "	1960	40682A	Side and flasher	1960	52403D	Motor, left hand drive	1960	75389A
Flasher unit	1960	35011A	Stop tail, flasher and reflex	1960	*53648F	" right hand drive	1960	75388A
Fuse box	1960	033287	ditto (U.S.A.)	1960	53753F	Wheelbox	1960	72734A
Generator	1960	22700D	Starting motor	1960	25022Q	Crosshead and rack assy.		
" (temporary alternative)	1960	*22704A	Steering column control ..	1960	33508B	Cut to 44 1/2"	1960	744256
Horn	1960	69092D	SWITCHES			Outer casing		
LAMPS			Dipper	1960	31800A	Motor to wheelbox ..	1960	54711609
Head, Home			Cap, rubber	—	54331425	Wheelbox to wheelbox	1960	743706
R.H.D., dip left ..	1960	51777A/K	Flasher	1960	31737B	End tube	1960	740746
			Ignition and lighting ..	1960	31270F	Arm, left hand drive ..	1960	54711535
			Knob	—	316285	" right hand drive ..	1960	54711534
						Blade	1960	54711282

COMMER 15/25 cwt. 1946-48

Battery	1946-48	SG11A	LAMPS			SWITCHES—continued		
Coil, ignition	1946-48	*45020A/B	Head			Panel	1946-48	*314129
Control box	1946-48	*37032A/B	Left hand	1946-48	*50204A	Solenoid, starting motor	1946-48	76428A
Distributor	1946-48	*409624	Right hand	1946-48	*50205A	Stop lamp	1946-48	31281B
Fuse box	1946-48	*385175	Side	1946-48	*52074A	Spring	—	315543
Generator	1946-48	*22446A	Stop tail and number plate	1946-48	*53063B	Warning light	1946-48	*318505
Horn	1946-48	069344	Starting motor	1946-48	*255378	Windshield wipers		
			SWITCHES			Motor	1946-48	75129A
			Horn and dipper	1946-48	*380148	Arm	1946-48	*735096
			Ignition and lighting ..	1946-48	*34014B	Blade	1946-48	727802

COMMER 25 cwt. Lyons Van 1949-50

Battery	1949-50	SG11A	LAMPS			SWITCHES		
Coil, ignition	1949-50	*45020A/B	Head, Home			Horn and dipper	1949-50	*31061B
Control box	1949-50	37065E	Left hand	1949-50	*50583A	Ignition and lighting ..	1949-50	*34020B
Distributor	1949-50	409930A	Right hand	1949-50	*50584A	Starting motor	1949-50	76427B
Fuse box	1949-50	*385211	Side	1949-50	*52097A	Warning light	1949-50	*38015B
Generator	1949-50	*22446A	Tail and number plate ..	1949-50	*53007B			
" " " " " Later	1950	*22435A/B	Starting motor	1949-50	*255378			
Horn	1949-50	069344						

* See Supersession Chart R.H.D. . . . Right hand drive



COMMER 3/4 ton Forward Control Van and Passenger Chassis (Petrol & Diesel) 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (optional)	1960	36254A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery (Petrol)	1960	BT7A	Head, Export Europe			Starter and heater		
" (Petrol, Export)	1960	BTZ9A	(not France)	1960	58270A	(Diesel)	1960	31829A
" (Diesel)	1960	STXK13A	Head, Export France	1960	58271A	Escutcheon plate	—	54332117
Coil, ignition	1960	45102E	Head, Export U.S.A.	1960	58493A	Starting motor (Petrol)	—	76423A
Control box			Number plate illumination	1960	53630A	Coupling	—	764466
Petrol	1960	37290D/E	Side and flasher	1960	52403B	Warning light (main beam)		
Standard Diesel	1960	37299A/B	Stop tail, flasher and reflex	1960	53640A/D	(U.S.A.)	1960	38190A
Heavy duty Diesel	1960	37304A/B	ditto (U.S.A.)	1960	53754B	Bulb	1960	281
Distributor	1960	40682A	Relay, horn (when twins			Windshield wipers		
" Later	1960	40682B	fitted)	1960	*33116B	Motor	1960	75390A
Fuse box	1960	033287	Starting motor (Petrol)	1960	25022N/Q	(R.H.D., switch cover		
Generator			(Diesel)	1960	26170A/B	position 90°)		
Petrol and standard			Steering column control	1960	33554A	(L.H.D., switch cover		
Diesel (temporary	1960	22700D	Suppressor	1960	78106A	position 270°)		
ditto (alternative)	1960	*22704A	SWITCHES			Link set	—	54711523
Heavy duty Diesel	1960	22489B	Dipper	1960	31800A	Arm, left hand drive		
Horn			Cap	—	54331425	Bright finish	1960	54711532
Low note	1960	69092D	Flasher	1960	*31903B	Silver grey finish Later	1960	54712028
High note (optional)	1960	69091D	Housing	—	54332184	Arm, right hand drive		
LAMPS			Ignition and lighting			Bright finish	1960	54711533
Head, Home			(Petrol)	1960	*31288A/D	Silver grey finish Later	1960	54712029
R.H.D., dip left	1960	51736B/D	Knob	—	316285	Blade		
						Bright finish	1960	54711285
						Silver grey finish Later	1960	54711284

§ FUEL INJECTION EQUIPMENT (Perkins 4/99 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1960	DPA3246175	Filter	1960	F4B2
Nozzle holder	1960	BKB40S5003N	Thermostart	1960	285-2A
Nozzle	1960	BDN12SD6236			

COMMER 25 cwt. Forward Control 1946-56

Ammeter	1946-50	*369263	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
"	1951-54	36047D	Head, Export			Panel	1946-50	*31285A
Battery	1946-50	SG11A	L.H.D., dip right	1952-53	*51250A	"	1951-56	31248A
"	1951-56	GT11A	"	1954	*51337A	Knob	1951-52	*316365
Coil, ignition	1946-50	*45020A/B	"	1955	*51337B	" Later	1952-56	316493
"	1951-56	*45012A/D	"	1956	*51337D/E	Starting motor	1946-49	76428A
Control box	1946	*37002A	Head, Export Europe			"	1950	76404B
"	1947	*37032A	(not France)	1952-53	*51251A	"	1951-54	76427B
"	1948-52	*37065E	ditto	1954-55	51339A	"	1955-56	76423A
" Later	1952-54	*37138B	ditto	1956	51339B/H	Coupling	1955-56	764428
"	1955-56	37182A/H	Head, Export France	1952-53	*50962	Trafficator (when fitted)		
Distributor	1946-50	*40962A	Head, Export U.S.A.	1952-53	*51253A	Trafficators (special		
"	1951-53	40218A/D	Number plate illumination	1955-56	53343A	orders)	1955	*053830
"	1953	40070A/E	Side	1946	52036A	ditto Later	1955-56	*318596
"	1954-56	*40376A/B	"	1947-48	*52003A	Warning light	1947-50	*38015B
(from Engine No.			"	1949-51	52154A	"	1951-55	38059A
55P7950)	1956	40511A/B	"	1952-54	*52110A	Windshield wipers		
Fuse box	1946-52	*385175	"	1955-56	52139B/F	Motor	1946-50	*733068
"	1952-56	033240	Stop tail and number plate	1949-54	*53063B	"	1951-53	54050A
Generator	1946-48	22453D	Stop tail	1955-56	53178E/F	"	1954-56	75144A
"	1949-50	*22446A	Tail and number plate	1946-48	*53007B	Wheelbox	1954-56	72655A
"	1951-52	*22250E/F	Reflex reflector	1955-56	57073B	Crosshead and rack assy.		
" Later	1952-56	22258D	Starting motor	1946-50	*255378	Cut to 43 1/2"	1954-56	736307
Horn	1946-56	*069213	Suppressor	1951-56	25521B/D	Outer casing		
Inspection lamp sockets	1951-54	39507A		1955-56	78106A	Motor to wheelbox	1954-56	739844
LAMPS			SWITCHES			Wheelbox to wheelbox	1954-56	739972
Head, Home			Horn and dipper	1946-50	*380168/S	End tube	1954-56	740031
Non-dip	1946	50129A	"	1951-56	*31325A	Arm	1946-52	*735061
Vertical dip	1947-51	*50285A	"	1946	*344920	" left hand	1952-53	*735055
Dip left	1952-53	*51249A	Ignition and lighting	1946	*34014B	" right hand	1954-56	737496
R.H.D., dip left	1954-55	51336A	"	1947-50	*31288A	Blade	1946-52	727802
"	1956	51336B/J	Knob	1951-56	316285	" Later	1952-53	727801
Head, Export						"	1954-56	727803
R.H.D., dip left	1952-53	*51249A						
"	1954-55	51336A						
"	1956	51336B/J						

COMMER 1 1/4/1 1/2 ton Forward Control Mk. V 1956-60: 1 ton Forward Control 1959-60

Battery (Petrol)	1956-59	GT11A	Horn	1956-57	*069213	LAMPS— <i>continued</i>		
" (Diesel)	1960	BT11A	Low note	1957-60	69046E/F	Head, Export Europe		
Coil, ignition	1956-60	STXT19E	High note (optional)	1959-60	69047F	(not France)	1956-59	51339B/H
Control box	1956-59	*45054D/L	Horn relay (when twins			ditto Later	1959-60	58230A/E
"	1959-60	37182A/H	fitted)	1959-60	*33116B	Head, Export France	1960	58231A/E
" Later	1959-60	37182J	LAMPS			Number plate illumination	1956-60	53343A
"	1960	37182K	Head, Home			Side	1956-60	52639F
Distributor	1956-59	*40430A	R.H.D., dip left	1956-60	51336B/J	Stop tail	1956-60	53178F/H
"	1960	40491A/B	Head, Export			Reflex reflector	1956-60	57073B
" Later	1956-59	40667A/B	R.H.D., dip left	1956-60	51336B/J	Starting motor (Petrol)	1956-60	25521D
Fuse box	1957-60	033239	" (Diesel)	1957-60	*51337D/E	"	1957	26133A/B
"			R.H.D., dip left	1956-60	51336B/J	Steering column control	1956-60	26133D/E
" (Diesel starting			L.H.D., dip right	1956-59	*51337D/E	Suppressor	1956-60	32937A/B
aid, serviced by C.A.V.)	1957-60	1800020	"	1959	*51337F/K			78106A
Generator	1956	22258D	"					
"	1957-60	22258E/F						

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 1 1/4/1 1/2 ton Forward Control Mk. V 1956-60: 1 ton Forward Control 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Dipper	1956-60	31284A/D	Starting motor (Petrol)	1956-60	76423A	Motor	1956-60	75144A
Ignition and lighting	1956-60	*31288A	Coupling	1956-58	764428	Wheelbox	1956-60	72655A
Knob	—	316285	Trafficator	1959-60	764466	Crosshead and rack assy.	—	—
Panel	1956-58	31248B	1956	31564A	Cut to 43 1/2"	1956-60	736307
.. .. .	1959-60	*31515A	1957-60	31379A	Outer casing	—	—
.. .. . Later	1960	31869A	Windshield wiper	1956-60	31248B	Motor to wheelbox ..	1956-60	73984A
Knob	1956-60	*316365 Later	1960	34266A	Wheelbox to wheelbox	1956-60	739972
.. .. . Later	1960	316493	Knob	1956-60	312954	End tube	1956-60	740031
Solenoid operating	—	—	Terminal block	1959-60	37101B	Ferrule, casing retaining	1956-60	738410
(Diesel, serviced by	—	—	Trafficators	1956	54050A	Arm, left hand	1956-60	737496
C.A.V.)	1957-60	1823410	1957-60	54045E	" right hand	1956-60	737495
Starter/heater (Diesel,	—	—	Warning light (ignition) ..	1956-60	*38065A	Blade	1956-60	727803
serviced by C.A.V.) ..	1957-60	1823420						

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	DPA3246020	Nozzle	1956-60	BDN4SP6188
" " Later	1957-58	DPA3246070-1-2-3	Filter	1956-59	F4-1
" "	1959-60	DPA3246103	" "	1960	F4B-3
Nozzle holder	1956-60	BKB40S697	Thermostart	1956-60	285-2A

COMMER 25 cwt. 'Superpoise' Van 1949-56: Medium Pick-up Truck Mk. IV 1951-54

Battery	1949-50	SG11A	LAMPS—continued			Reflex reflector	1955-56	32886A/D
" "	1951-56	GT11A	Head, Export	—	—	Starting motor	1949-50	*255378
Coil, ignition	1949-56	*45012A/D	R.H.D., dip left	1950-51	*50445K	" "	1951-56	25521B/D
Control box	1949-52	37065E	R.H.D., dip left	—	—	Steering column control	—	—
" " Later	1952-54	*37138B	(L.H. and R.H.) Later	1951	*50954A	(Pick-up Truck)	1951-54	32886A/D
" "	1955-56	37182A/H	" " " "	1952-53	50941A	Suppressor	1955-56	78106A
Distributor	1949-50	*409624	" " " "	1954-55	51336A	SWITCHES		
" "	1951-53	40218A/D	" " " "	1956	51336B/J	Horn and dipper	1949-50	*380148
" " Later	1953	40070A/E	L.H.D., dip right	1950-51	*A50445K	" " " "	1951-56	*31325A
" "	1954-56	*40376A/B	" " " " Later	1951-53	*50804D	Ignition and lighting	1949-50	*34014B
(from Engine No.	—	—	" " " "	1954-56	*51337A	" " " "	1951-56	*31288A
SSP7950) Later	1956	40511A/B	" " " "	1955	*51337B	Knob	—	—
Fuse box	1949-52	*385175	" " " "	1956	*51337D/E	Panel	1949-50	*31285A
" " Later	1952-56	033240	Head, Export Europe	—	—	" " " "	1951-56	31248A
Generator	1949-50	*22446A	(not France)	1950	*B50445K	Knob	—	*316365
" "	1950	*22435A/B	ditto	1951-53	*50963A	Starting motor	1949	76428A
" "	1951-52	*22250E/F	ditto	1954-55	51339A	" " " "	1950	76404B
" " Later	1952-56	22258D	ditto	1956	51339B/H	" " " "	1951-56	76423A
Horn	1949-56	*069213	Head, Export France ..	1951-53	*50962A	Coupling " "	1951-56	764428
LAMPS			" " " "	1954	*51341A	Stop lamp	1949-50	31281B
Head, Home	—	—	Head, Export U.S.A.	—	—	Trafficator (when fitted)	1955-56	31379A
R.H.D., dip left (L.H.)	1949	*50583A	(Pick-up Truck)	1951-52	*50804D	Trafficators (special	—	—
" non-dip (R.H.)	1949	*50584A	" " " "	1953-54	51343A	orders)	1955	*053830
" dip left (L.H.)	1950	*50878A	Number plate illumination	1955-56	53343A	ditto Later	1955-56	54000A
" non-dip (R.H.)	1950	*50880A	ditto (Pick-up Truck)	1951-54	53101E	Warning light (ignition) ..	1949-50	*38015B
" dip left (L.H.)	1951	*50445K	Side	1949	52108A	ditto (except Pick-up	—	—
" non-dip (R.H.)	1951	*50446K	" " " "	1950	52154A	Truck)	1951-56	38059A
R.H.D., dip left	—	—	" " " "	1951-56	52139B/F	Windshield wipers	—	—
(L.H. and R.H.) Later	1951	*50954A	Stop tail and number plate	—	—	Motor	1949-56	75129A
" " " "	1952-53	50941A	(except Pick-up Truck)	1950-54	*53063B	Arm	1949-56	735065
" " " "	1954-55	51336A	Stop tail	1955-56	53178E/F	Blade	1949-56	727802
" " " "	1956	51336B/J	" " (Pick-up Truck)	1951-54	*53151B/D			

COMMER 3/4/1 1/2 ton 'Superpoise' Van and Medium Pick-up Truck Mk. V 1956-60

Battery (Petrol)	1956-57	GT11A	LAMPS—continued			SWITCHES—continued		
" " Later	1957-59	GT9A	Head, Export	—	—	Flasher (when fitted) ..	1956-60	31564A/D
" (Diesel)	1957-60	STX19E	R.H.D., dip left	1956-60	51336B/J	Ignition and lighting ..	1956-60	*31288A
Coil, ignition	1956-57	*45054D/H	L.H.D., dip right	1956-59	*51337D/E	Knob	—	316285
" "	1958	*45053J	" " " " Later	1959-60	*51337F/K	Solenoid operating	—	—
" "	1959-60	*45054K/L	Head, Export Europe	—	—	(Diesel, serviced by	—	—
Control box	1956-59	37182A/H	(not France)	1956-59	51339B/H	C.A.V.)	1957-60	1823410
" "	1956-59	37182J	ditto Later	1959-60	58230A/E	Starter/Heater (Diesel,	—	—
" " Later	1959-60	37182K	Head, Export France ..	1960	58231A/E	serviced by C.A.V.) ..	1957-60	1823420
Distributor	1956	*40430A	Number plate illumination	1956-60	53343A	Starting motor (Petrol)	1956-58	764428
" "	1956 59	40491A/B	Side	1956-60	52250B	Coupling	1959-60	764466
" " Later	1959-60	40667A/B	Side and flasher (optional)	—	—	Stop lamp	1956-60	31802B
Flasher unit (when fitted)	1956-57	*35003A	(alternative)	1956-59	*52162E/F	Windshield wiper	1956-60	31248B
" " " "	1958-60	35010A	ditto	1960	52240B	" " " " Later	1960	34266A
Fuse box	1956	033240	Rear flasher (optional) ..	1956-60	*52282A/B	Knob	1956-60	312954
" "	1957-60	033239	Stop tail	1956-60	53178E/J	Windshield wipers	—	—
" (Diesel starting	—	—	Reflex reflector	1956-60	57073B	Motor	1956-60	75289A
aid, serviced by C.A.V.)	1957-60	1800020	(Dutch Van)	1958-60	65424A	" " " " Later	1960	75398A
Generator	1956	22258D	Relay, horn (when twins	—	—	Wheelbox	1956-60	72660A
" "	1957-60	22258E/F	fitted)	1957-60	*33116B	Crosshead and rack assy.	1956-60	743722
Horn	1956	*069213	Starting motor (Petrol)	1956-60	25521D	Outer casing	—	—
Low note	1956-60	69046A/E	" " (Diesel)	1957	26133A/B	Motor to wheelbox	—	—
High note (optional) ..	1957-60	69047E/F	" " " "	1958-60	26133D/E	Left hand	1956-60	743708
LAMPS			Steering column control ..	1956-60	32937A/B	Right hand	1956-60	743709
Head, Home	—	—	Suppressor (when fitted)	1956-60	78106A	End tube	1956-60	740746
R.H.D., dip left	1956-60	51336B/J	SWITCHES			Arm, left hand	1956-60	745081
			Dipper	1956-60	31284A/D	" right hand	1956-60	745080

* See Supersession Chart R.H.D. ... Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. ... Left hand

R.H. ... Right hand

L.H.D. ... Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 3/4/1 1/2 ton 'Superpoise' Van and Medium Pick-up Truck Mk. V 1956-60—continued

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	DPA3246020	Nozzle	1956-60	BDN4SP6188
" " Later	1957-58	DPA3246070-1-2-3	Filter	1956-59	F4-1
" "	1959-60	DPA3246103	" "	1960	F4B-3
Nozzle holder	1956-60	BKB40S697	Thermostart	1956-60	285-2A

COMMER 2 and 3 ton 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-47	SG11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1946-47	*45039A	Head, Export			Panel	1946-47	*314129
Control box	1946-47	*37032A/B	L.H. and R.H.	1947	*50585A	Starting motor	1946-47	76428A
Distributor	1946-47	*410700	Side	1946-47	*520940	Stop lamp	1946-47	31281B
Fuse box	1946-47	*385175	Stop tail and number plate	1946-47	*523595	Spring		315543
Generator	1946-47	*22446A/B	Starting motor	1946-47	*270490	Warning light	1946-47	*318505
Horn	1946-47	069344				Windshield wipers		
LAMPS			SWITCHES			Motor	1946-47	75129A
Head, Home			Horn and dipper	1946	*380148	Arm	1946-47	*735096
R.H.D., dip left (L.H.)	1946	*50204A	Ignition and lighting	1946-47	*344540	Blade	1946-47	727802
" non-dip (R.H.)	1946	*50205A						
" dip left (L.H.)	1947	*50583A						
" non-dip (R.H.)	1947	*50584A						

COMMER 2/3 and 3/4 ton 1949-54: 4/5 ton 1949-51: 5 ton 'Superpoise' 1952-54: 'Commando' (Petrol) 1950-53

Battery	1949-50	SG11A	LAMPS			LAMPS—continued		
" "	1951-54	GT11A	Head, Home			Head, Export U.S.A.	1949-52	*50804D
Coil, ignition	1949-54	*45012A/D	R.H.D., dip left (L.H.)	1949	*50445K	" "	1953-54	51343A
Control box	1949-50	37065E	" non-dip (R.H.)	1949	*50446K	Side	1949-50	52108A
" " Later	1950-52	*37076E	" dip left (L.H.)	1950	*50878A	" "	1951-54	52139B
" " ('Commando')	1952-54	*37139D	" non-dip (R.H.)	1950	*50880A	Stop tail and number plate	1949-54	*53063B
serviced by C.A.V.)	1950-53	1685010	" dip left (L.H.)	1951	*50445K	Starting motor	1949	26026A/B
Distributor	1949-50	*410700B	" non-dip (R.H.)	1951	*50446K	" " Later	1949	*26035A
" "	1951	40135E/H	R.H.D., dip left			" " Later	1950-53	26041A/B
" "	1952	40210A/B	(L.H. and R.H.)	1952-53	*50954A	" " Later	1953-54	26094A
" " Later	1952-53	*40311D	Head, Export	1953-54	51336A	SWITCHES		
" "	1953	40360A/B	R.H.D., dip left	1949	*50445K	Horn and dipper	1949-50	*380168
" "	1953-54	40360D	" "	1950	*50878A	" "	1951-54	*31325A
Fuse box	1948-52	*385175	" "	1951	*50445K	Ignition and lighting	1949-51	*34014B
" " (Tractor)	1948-52	*37130A	R.H.D., dip left			" "	1952-54	*31288A
" " ('Commando')	1950-52	*37137A	(L.H. and R.H.)	1952-53	*50954A	Knob		316285
" " Later	1952-54	033239	" " Later	1953-54	51336A	Panel	1952-53	31248A
Generator	1949-50	*22446A/B	L.H.D., dip right	1949	*A50445K	Knob		*316365
" " Later	1950-52	*22435A/B	" "	1950	*A50878A	Starting motor	1949	76428A
" " ('Commando')	1952-54	*22456A/D	" "	1951	*A50445K	" "	1950	76404B
serviced by C.A.V.)	1950-53	D5LFA10	" " Later	1952-53	*50804D	" "	1951-54	76423A
Horn	1949-53	*069213	Head, Export Europe	1953-54	*51337A	Coupling		764428
Junction box	1952-54	78265A	(not France)	1949	*B50445K	Warning light	1949-51	*38015B
			ditto	1950	*B50878A	" "	1952-54	38059A
			ditto	1951	*B50445K	Windshield wipers		
			ditto Later	1951-53	*50963A	Motor	1949-54	75129A
			ditto	1953-54	51339A	Arm	1949-54	735065
			Head, Export France	1951-53	*50962A	Blade	1949-54	727802
			" " Later	1953-54	*51341A			

§ FUEL INJECTION EQUIPMENT
(Perkins P6 Engine 1949-54)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-52	BPE6A60Q310S6237	Feed pump—continued	1953-54	BFPK22P68
" "	1953-54	BPE6A60S310S6321	Primer	1949-54	BFPUE2-54Z
Governor	1949-54	BEPMZ80A99	Pre-filter	1949-54	BFJSJ1-501
Coupling	1949-54	BZK G31-538	Nozzle holder	1949-54	BKB35S87
Venturi	1949-54	BEPK 50-50-77	Nozzle	1949-54	BDL110S6133
Feed pump	1949-52	BFPK22N1	Filter	1949-54	BFA5P1
" " Later	1952	BFPK22N68			

COMMER 2/5 ton 'Superpoise' (Petrol) 1955-60: 3/5 ton 'Superpoise' (Diesel) 1955-60: 6 ton 'Superpoise' (Petrol and Diesel) 1959-60

Battery (Petrol)	1955-59	GT11A	Control box (Diesel)	1959-60	37183H	Generator	1955-56	*22483A
" "	1960	BT11A	" " " " Later	1960	37183K	" "	1957-58	*22483D
" (Diesel)	1955-60	STXT19E	" " " "		37183L	" (Petrol)	1959-60	22258E/H
Coil, ignition	1955-56	*45012B	Distributor	1955-60	40360D/E	" (Diesel)	1959	*22483D
" "	1957-60	*45054H/L	Flasher unit (when fitted)	1957	*35003A	" "	1960	22489B/D
Control box	1955	*37139E	" " " "	1958-60	35010A	Horn	1955-56	*069213
" " Later	1955-58	37183A/H	Fuse box	1955-60	032329	Low note	1957-60	69046E/F
" " (Petrol)	1959-60	37182H	" (Diesel heater,			High note (optional)	1957-60	69047E/F
" " " " Later	1960	37182J	serviced by C.A.V.)	1957-60	1800020	LAMPS		
		37182K				Flasher, front and rear		
						(optional)	1957-60	52314A

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 2/5 ton 'Superpoise (Petrol) 1955-60: 3/5 ton 'Superpoise' (Diesel) 1955-60: 6 ton 'Superpoise' (Petrol and Diesel) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Relay, horn (when twins fitted)			SWITCHES—continued		
Head, Home			Starting motor (Petrol) ..	1957-60	*33116B	Starting motor (Petrol)	1955-60	76423A
R.H.D., dip left ..	1955	51336A	(Diesel, serviced by C.A.V.) ..	1955-60	26094A	Coupling	1955-58	764428
" " " " ..	1956-60	51336B/J	ditto	1955-57	1330930-1	Windshield wiper ..	1959-60	764466
Head, Export			ditto	1958	1330670	Knob	1956-60	31248A
R.H.D., dip left ..	1955	51336A	Steering column control ..	1959-60	1320171	Windshield wiper Later	1960	34266A
" " " " ..	1956-50	51336B/J		1956-60	32937A/B	Knob	—	31295A
L.H.D., dip right ..	1955	*51337B	SWITCHES			Warning light (ignition) ..	1955	38059A
" " " " ..	1956-59	*51337D/E	Dipper	1956-60	31284A/D	Windshield wipers		
" " " " Later	1959-60	*51337F/K	Flasher (when fitted) ..	1956-60	31564A/D	Motor	1955	75129A
Head, Export Europe (not France) ..	1955	51339A	Heater (Diesel, serviced by C.A.V.) ..	1957-60	1823420	" " " " ..	1956-60	75289A
ditto	1956-59	51339B/H	Horn push and dipper ..	1955	*31325A	" " " " Later	1960	75398A
ditto Later	1959-60	58230A/E	Lighting and ignition or main	1955-60	*31288A	Wheelbox	1956-60	72600A
Head, Export France ..	1956-58	*51341B/E	Knob	—	316285	Crosshead and rack assy.	1956-60	743722
" " " " ..	1959	51342B/D	Panel (when fitted) ..	1955	31248A	Outer casing		
" " " " ..	1960	58231D/E	Solenoid operating (Diesel, serviced by C.A.V.) ..	1955-60	1823410	Motor to wheelbox		
Head, Export U.S.A. ..	1955-60	51343B/E				Left hand	1956-60	743708
ditto (indirect) ..	1960	51509A/H				Right hand	1956-60	743709
Number plate illumination	1955-60	53343A				End tube	1956-60	740746
Side	1955	52139B				Arm	1955	735065
Stop tail	1956-60	52250B				" left hand	1956-60	745081
Reflex reflector ..	1955-60	53178E/J				" right hand	1956-60	745080
	1955-60	57073B				Blade	1955	727802
						" " " " ..	1956-60	741680

§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine 1955-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-57	BPE6A60S310S6321	Primer	1955-57	BFPUE2-54Z
" " " " Later	1957-58	BPE6A60S310S6381	" " " " Later	1957-60	HP1-1
Governor	1958-60	BPE6A60U310S6381	Pre-filter	1955-60	BFJSJ1-501
" " " " ..	1955-56	BEPMZ80A99	Nozzle holder	1955-60	BKB32S630
" " " " Later	1956-57	BEPAMZ80A99	Nozzle	1955-60	BDL110S6133
" " " " ..	1957-58	BEPAMZ80A133	Venturi	1955	BEPK50-50-101
" " " " ..	1959-60	BEPBMZ80A133	" " " " ..	1956-60	BEPK50-50-107
Coupling	1955-60	BZKG31-538	Filter	1955-59	F2-8
Feed pump	1955-56	BFPK22P68	" " " " ..	1960	F2B-22
" " " " Later	1956-60	BFPK22P70			

(Perkins C305 Engine 1959-60)

Fuel pump	1959	DPA3264003	Filter	1959	F4-3
" " " " ..	1960	DPA3264035	" " " " ..	1960	F4B-5
Nozzle holder	1959-60	BKB32S630	Thermostart	1959	285-2A
Nozzle	1959-60	BDL110S6267	" " " " ..	1960	357-2

COMMER 3 ton Four Wheel Drive Cross-country Vehicle 1956

Battery	1956	GT11A	LAMPS			SWITCHES—continued		
Coil, ignition	1956	*45012B	Head, vertical dip	1956	056991	Ignition and lighting ..	1956	31270A
Control box	1956	*37166D	Number plate illumination	1956	53189A	Knob, ignition	—	31643A
Distributor	1956	*40364D	Side	1956	52186A	" lighting	—	316285
Fuse box	1956	033239	Tail	1956	*53250E	Panel	1956	31248B
Generator	1956	*22470H/L	Starting motor	1956	26094A	Knob	—	*316365
Horn	1956	069344	Suppressor	1956	78106A	Starting motor	1956	76423A
Inspection lamp sockets ..	1956	39507A				Coupling	—	764428
Junction box	1956	78265B	SWITCHES			Windshield wipers		
			Convoy light	1956	*31276A	Motor	1956	75107A
			Horn push and dipper ..	1956	*31325A	Arm	1956	735065
						Blade	1956	727802

COMMER 3 and 4 ton Trucks, Pantehnicon, Tipper and 'Commando' (Petrol) 1947-49

Battery	1947-49	SG11A	LAMPS			Starting motor	1947-49	*270490
Coil, ignition	1947-49	*45039A	Head, Home			SWITCHES		
Control box	1947-49	*37032A/B	R.H.D., dip left (L.H.)	1947-49	*50583A	Horn push and dipper ..	1947-49	*380234
" " " " ('Commando', serviced by C.A.V.) ..	1947-48	1685030	" non-dip (R.H.)	1947-49	*50584A	Ignition and lighting ..	1947-49	*34014B
Distributor	1947-49	*410700A	" dip left (L.H., 'Commando')	1947-49	*50481A	Panel	1947-49	*314129
Fuse box	1947-49	*385175	R.H.D., non-dip (R.H., 'Commando')	1947-49	*50482A	Starting motor	1947-49	76428A
" " " " ('Commando')	1947-49	*385221	Head, Export			Stop lamp	1947-49	31281B
Generator	1947-49	*22446A/B	L.H. and R.H. ('Commando')	1947-49	*50483A	Spring	—	315543
" " " " ('Commando', serviced by C.A.V.) ..	1947-49	DSLFA10	(Pantehnicon)	1947-49	*50585A	Warning light	1947-49	*38015B
Horn	1947-49	069344	Side	1947-49	*52060A	Windshield wipers		
Junction box (Pantehnicon and 'Commando')	1947-49	78265A	Stop tail and number plate ditto (Tipper) ..	1947-49	*53028B	Motor	1947-49	75129A
			Tail and number plate (Tractor)	1947-49	*53063B	Arm	1947-49	*735096
						Blade	1947-49	727802

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



COMMER 4, 5 and 6 ton Forward Control (Petrol and Perkins C305 Diesel) 1959-60—continued

§ FUEL INJECTION EQUIPMENT					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
.. .. .	1960	DPA3264035	1960	F4B-5
Nozzle holder	1959-60	BKB32S630	Thermostart	1959	285-2A
Nozzle	1959-60	BDL110S6267	1960	357-2

COMMER 5 ton 1947

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1947	SG11A	LAMPS, Head, Home— <i>continued</i>			LAMPS— <i>continued</i>		
Coil, ignition	1947	*45039A			Side	1947	52053A
Control box	1947	*37032A/B	Chassis 16A5051-16A5075			Stop tail and number plate	1947	*53063B
Distributor	1947	*410700	Left hand	1947	*50344A	Starting motor	1947	*270490
Fuse box	1947	*385175	Right hand	1947	*50345A	SWITCHES		
Generator	1947	*22446A	Chassis 16A5076onwards			Horn push and dipper ..	1947	*38023A
Horn	1947	069344	Left hand	1947	*50478A	Ignition and lighting ..	1947	*34014B
LAMPS			Right hand	1947	*50584A	Panel	1947	*31285A
Head, Home			Head, Export			Starting motor	1947	76428A
Chassis 16A5000—			L.H. and R.H.			Stop lamp	1947	31281B
16A5050			Chassis 16A5000—			Warning light	1947	*38015B
Left hand	1947	*50204A	16A5050	1947	*50245A	Windshield wipers		
Right hand	1947	*50205A	Chassis 16A5051—			Motor	1947	75129A
			16A5075	1947	*50284A	Arm	1947	*73509E
			Chassis 16A5076onwards	1947	*50245A	Blade	1947	727802

COMMER 5 ton 'Superpoise' 1954-60: 6 ton 'Superpoise' 1959-60 (Diesel, 24 volt)

Battery	1954-60	MT15E-6	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Control box (serviced by C.A.V.)	1954-60	1688010	Head, Export Europe (not France)	1954	51492A	Panel light	1955	31248A
Flasher unit (when fitted)	1957-60	35018A	ditto	1955	51492B	Knob	—	*316365
Fuse box	1957-60	033239	ditto	1956-60	51492D/H	Solenoid operating (serviced by C.A.V.) ..	1955-60	1823410
.. .. . (Diesel heater, serviced by C.A.V.) ..	1957-60	1800020	Number plate illumination			Stop lamp	1954-59	31082E/H
Generator (serviced by C.A.V.)	1954-60	1131090	Side	1954-55	†53210A/D	1960	31802B
Horn	1954-58	069405	1956-60	52251B	Windshield wiper	1957-60	31248B
Low note (alternative) ..	1955-56	*69041B	Stop tail and number plate	1954	*53063B Later	1960	34266A
Reflex reflector	1957-60	69055A	Stop tail	1955-60	†53178E/J	Knob	1957-60	31295A
High note (optional) ..	1955-56	*69042B	Reflex reflector	1955-60	57073B	Windshield wipers		
.. .. .	1957-60	69056A	Starting motor (serviced by C.A.V.)	1954-58	1332600	Motor	1954-55	75193A
LAMPS			ditto	1959-60	1332601 Later	1956-60	75290A
Flasher, front and rear (optional)	1957-60	52315A	Steering column control ..	1956-60	32937A/B	Wheelbox	1960	75399A
Head, Home and Export			SWITCHES			Crosshead and rack assy.	1956-60	72660A
Dip left	1954	51477A	Dipper	1955-60	31284A/D	Outer casing		743722
.. .. .	1955	51477B	Flasher (when fitted) ..	1957-60	31565A	Motor to wheelbox		
.. .. .	1956-60	51477D/H	Heater, starting (serviced by C.A.V.)	1957-60	1823420	Left hand	1956-60	743708
Head, Export			Horn push and dipper ..	1955	*31325A	Right hand	1956-60	743709
L.H.D., dip right	1954	51490A	Lighting and main	1955-60	*31288A	End tube	1956-60	740746
.. .. . Later	1954	51490B	Knob	—	316285	Arm	1954-55	735065
.. .. .	1955	51490D				.. left hand	1956-60	*735081
.. .. . Later	1955-60	51490E/J				.. right hand	1956-60	*735080
						Blade	1954-55	727802
						1956-60	741680

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A70R320S6302	Feed pump	1954-56	BFPK22P68
.. .. . Later	1955-57	BPE6A70R320S6360 Later	1956-60	BFPK22P70
.. .. .	1957-58	BPE6A70R320S6387	Primer	1954-57	BFPU2-54Z
.. .. .	1958-60	BPE6A70T320S6387 Later	1957-60	HPI-1
Governor	1954-55	BEPAMN80A122	Pre-filter	1954-60	BFJSJ1-501
.. .. . Later	1955	BEPMZ80A130	1954-60	BKB32S630
.. .. .	1956	BEPMZ80A146	Nozzle holder	1954-60	BDL10S6125
.. .. . Later	1956-58	BEPAMZ80A136	1954-60	BDL10S6125
.. .. .	1958-60	BEPBMZ80A136	Nozzle	1954-59	F2-8
Coupling	1954-57	BZKG31-538	Filter	1959-60	F2B-22
		 Later		

COMMER 5 and 7 ton 1949: 5 and 7 ton Forward Control 1950-54

Battery	1949-51	SG11A	Horn	1949-53	*069213	LAMPS— <i>continued</i>		
.. .. .	1952-54	GT11A	Inspection lamp sockets ..	1949-54	301187	Head, Export Europe		
Coil, ignition	1949	*45039A	LAMPS			Head, Export Europe (not France) ..	1949-50	*B50445K
Control box	1950-54	*45012A/D	Head, Home			1951-52	*50963A
.. .. .	1949-50	37065E	R.H.D., dip left (L.H.)	1949-51	*50445K	1953-54	51339A
.. .. . Later	1950-52	*37076E non-dip (R.H.)	1949-51	*50446K	1951-52	*50962A
.. .. .	1952-54	*37139D	R.H.D., dip left			Head, Export France	1953-54	*51341A
Distributor	1949	*40116D/E	(L.H. and R.H.)	1951-52	*50954A	1951-52	*50804D
.. .. .	1950	*40116F	1952	50941A	Head, Export U.S.A.	1953-54	51343A
.. .. .	1951-52	*40116H Later	1953-54	51336A	1949-53	52108A
.. .. .	1952	*40310A	Head, Export			Side	1954	52139B
.. .. .	1953-54	40359A/B	R.H.D., dip left	1949-51	*50445K	1949	*53063B
.. .. .	1954	40359D/E	1951-52	50954A	Stop tail and number plate	1949	*53063B
Fuse box	1949-52	*385175	1952	50941A	Relay, field exciter	1949-51	33099A
.. .. .	1952-54	033240	1953-54	51336A	Starting motor	1949-51	*26028A
.. .. . Later	1949-50	*22446A	L.H.D., dip right	1949-51	*A50445K (temporary)	1951	26077A
Generator	1950-52	*22435A/B	1951-52	*50804D	1952-53	26086A
.. .. .	1952-54	*22456A/B	1953-54	*51337A	1954	26094A

* See Supersession Chart
L.H.D. .. Left hand drive
A60

† State voltage when ordering
R.H.D. .. Right hand drive
Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand R.H. .. Right hand

continued



COMMER 6½ and 7 ton 1949-50—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Windshield wipers			Windshield wipers—cont'd		
Horn push and dipper ..	1949-50	*380148	Motor	1949-50	*75053J	Outer casing		
Ignition and lighting ..	1949-50	*34037A	Control box	1949-50	72591A	Wheelbox to control box		
Oil	1949-50	31146A	Wheelbox	1949-50	72590A/K	Nearside	1949-50	739937
Knob	—	*315258	Crosshead and rack assy.	1949-50	736364	Offside	1949-50	739937
Panel	1949-50	31113A	Inner cable rack	1949-50	736024	4", nearside wheelbox	1949-50	740032
Knob	—	315112	Outer casing			3", offside wheelbox	1949-50	740031
Solenoid, starting motor	1949-50	31115A	Motor to wheelbox ..	1949-50	*739832	Arm	1949-50	*735098
Knob	—	*317315				Blade	1949-50	727759

COMMER 8 ton Tractor Trailer 1950

Battery (Petrol)	1950	SG11A	LAMPS			SWITCHES		
(Diesel)	1950	STXW19E	Head, Home			Horn push and dipper ..	1950	*380148
Coil, ignition (Petrol) ..	1950	*45012A/D	R.H.D., dip left (L.H.)	1950	*50445K	Ignition and lighting ..	1950	*34014B
Control box (Petrol) ..	1950	*37076E	non-dip (R.H.)	1950	*50446K	Solenoid operating		
(Diesel, serviced by C.A.V.) ..	1950	1688010	Head, Export			(Diesel)	1950	*317075
Distributor (Petrol) ..	1950	40135E/H	R.H.D., dip left ..	1950	*50445K	Starting motor (Petrol)	1950	76404B
Fuse box	1950	*385175	L.H.D., dip right ..	1950	*A50445K	Warning light (ignition)		
Generator (Petrol) ..	1950	*22435A/B	Side	1950	52108A	(Petrol)	1950	*38015B
Pulley	—	228080	Stop tail and number plate	1950	*53063B	Windshield wipers		
Generator (Diesel, serviced by C.A.V.) ..	1950	1131090	Starting motor	1950	*26035A	Motor	1950	75129A
Horn	1950	069344	(Diesel, serviced by C.A.V.) ..	1950	1332600	Arm	1950	*735096
						Blade	1950	727802

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1950	BPE6A70R320S6302	Pre-filter	1950	BFJSJ1-501
Governor	1950	BEPAMN80A122	Nozzle holder	1950	BKB35S87
Coupling	1950	BZKG31-538	Nozzle	1950	BDL110S6133
Feed pump	1950	BFPK22P68	Filter	1950	F2-8
Primer	1950	BFPUE2-54Z			

COMMER 'Avenger' Coach (Petrol, 12 volt) 1949-60

Battery	1949-50	LMXBE	LAMPS,—continued			Steering column control ..	1955-60	32937A/B
"	1951-54	WT17E	Head, Export			Suppressor	1955-60	78106A
"	1955-60	MX17T	R.H.D., dip left ..	1949-51	*50445K	SWITCHES		
Coil, ignition	1949	MT19E	" Later	1951-52	*50954A	Horn push and dipper ..	1949-50	*380168
"	1950-55	*45039A	"	1952	50941A	"	1951-54	*31325A
"	1956-60	*45012A/D	"	1953-55	51336A	Ignition and lighting ..	1949-51	*34037A
Control box (serviced by C.A.V.)	1949-54	*45054D/L	"	1956-60	51336B/J	Knob	1952-60	31194A/B
ditto	1949-58	1686020	L.H.D., dip right ..	1949-51	*A50445K	"	1952-54	*316284
ditto	1955-58	1687010	" Later	1951-52	*50804D	"	1955-60	316285
ditto	1959-60	1687011	"	1953-54	*51337A	Oil	1949-60	31146A/B
Distributor	1949	*40116D/E	"	1955	*51337B	Knob	—	*315258
"	1950-52	*40116H	"	1956-59	*51337D/E	Panel	1949-60	31113A/D
" Later	1952	*40301B/D	" Later	1959-60	*51337F/K	Knob	1949-56	315112
"	1953-54	40359A/B	Head, Export Europe (not France)	1949-50	*B50445K	Solenoid, starting motor (temporary)	1951	76022A
"	1954-60	40359D/F	ditto	1951-52	*50963A	Solenoid, starting motor	1952-60	*76411D/E
Fuse box	1949-60	*37137A	ditto	1953-55	51339A	Solenoid operating ..	1949-60	31115A
Generator (serviced by C.A.V.)	1949-58	1150150	ditto	1956-59	51339B/H	Knob	—	*317315
ditto	1959-60	1150152	ditto Later	1959-60	58230A/E	Windshield wiper	1952-54	31248A
Horn	1949-54	*069213	Head, Export France ..	1951-52	*50962A	Knob	—	*316366
Low note	1954-55	*69011F/J	"	1953-55	51341A	Windshield wipers		
"	1956-60	69046A/F	"	1956-59	51341B/E	Motor	1952-54	75144A
High note (optional) ..	1954-55	*69012F/J	"	1960	58231A/E	Wheelbox	1952-54	72560A/K
"	1956-60	69047A/F	Side	1949-53	52108A	Crosshead and rack assy.		
Inspection lamp sockets ..	1949-60	301187	"	1954-60	52139B/F	Cut to 41 ½"	1952-54	736307
Junction box	1955-60	78265A	Stop tail and number plate	1949	*53063B	Outer casing		
LAMPS			Relay, field exciter ..	1949-51	33099A	Motor to wheelbox ..	1952-54	739833
Head, Home			Relay, horn (when twins fitted)	1956-60	*33116B	Wheelbox to wheelbox	1952-54	*739979
R.H.D., dip left (L.H.)	1949-51	*50445K	Starting motor	1949-51	*26028A	End tube	1952-54	740031
" non-dip (R.H.)	1949-51	*50446K	" (temporary)	1951	26077A	Grommet, wheelbox ..	1952-54	734458
" dip left Later	1951-52	*50954A	"	1952-53	26086A	Arm, left hand	1952-54	*737629
"	1952	50941A	"	1954-60	26094A	" right hand	1952-54	*737628
"	1953-55	51336A				Blade	1952-54	727759
"	1956-60	51336B/J						

COMMER 'Avenger' (Rootes TS3 Diesel, 24 volt) 1954-60

Battery	1954-60	MT19E	LAMPS			Relay, horn (when twins fitted)	1956-60	33164A
Control box (serviced by C.A.V.)	1954-58	1687050	Head, Home and Export			Starting motor (serviced by C.A.V.)	1954-58	1332970
ditto	1959-60	1687051	Dip left	1954	51477A	ditto	1959-60	1332971
Fuse box	1954-60	*37137A	"	1955	51477B	"	1955-60	32937A/B
Generator (serviced by C.A.V.)	1954-58	1151160	Head, Export			SWITCHES		
ditto	1959-60	1151161	L.H.D., dip right ..	1954	51490A	Dipper	1955-60	31284A/D
Horn	1954	*069430	" Later	1954	51490B	Horn push and dipper	1954	*31325A
Low note	1955	*69041B	"	1955	51490D	Lighting and master ..	1955-60	31194B
"	1956-60	69055A	" Later	1955-60	51490E/J	Knob	—	316285
High note (optional) ..	1955	*69042B	Head, Export Europe (not France)	1954	51492A	Panel	1955-60	31113A/D
"	1956-60	69056A	ditto	1955	51492B	Knob	1955-56	315112
Inspection lamp sockets ..	1957-60	301187	ditto	1956-60	51492D/H	"	1957-60	315143
Junction box	1954-60	78265A	Side	1954-56	†53210A/D	Solenoid operating ..	1955-58	31115A/E
			Stop tail and number plate	1957-60	52251A/B	"	1959-60	31810A
			Stop tail Later	1954	*†53063B	Knob	1955-60	*317315
				1954	53178B/D	Stop lamp	1955-59	31082E/J
						"	1960	31802D

* See Supersession Chart † Quote voltage when ordering § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand continued
 L.H.D. .. Left hand drive R.H.D. .. Right hand drive
 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)
 A62



COMMER 'Avenger' (Rootes TS3 Diesel, 24 volt) 1954-60—continued

§ FUEL INJECTION EQUIPMENT						
Unit	Year	Part No.	Unit	Year	Part No.	
Fuel pump	1954-59	NL3F80-96	Venturi	1954-56	BEPKE85-99V	
"	1960	NL3F80-181	"	1957-59	BEPKE85-117	
Governor	1954-55	LP9	"	1960	BEPKE85-131	
"	1956-59	LPB25	Nozzle holder	1954-60	BKBL52S656	
"	1960	LPB34	Nozzle	1954-56	BDLL10S6134	
Coupling	1954-57	FCB3	"	1957-60	BDLL10S6213	
"	1958-60	FCB5	Filter	1954-59	F2-13	
Feed pump	1954-57	DFP3-13	"	1960	F2B-13	
"	1958-60	DFP3-26				

COMMER Fire Tender or Pump Chassis 1952-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1952-53	GT11A	LAMPS—continued			SWITCHES—continued		
"	1954	6CFBE	L.H.D., dip right	1952-53	*50804D	Petrol pump	1952-53	31201B
"	1955-59	W11E	" Later	1952-54	*51337A	Knob	—	314026
"	1960	GT11A	"	1955	*51337B	Solenoid, starting motor	1952-60	*76411D/E
Coil, ignition	1952-55	*45012A/D	" Later	1956-59	*51337D/E	Solenoid operating	1952-60	31115A/E
"	1956-60	*45054D/L	Head, Export Europe (not France)	1952-53	*51337F/K	Knob	—	*317315
Control box (serviced by C.A.V.)	1952-53	*37139D	ditto Later	1952-53	*50963A	Windshield wiper	1952-54	31248A
"	1954-58	1687010	ditto	1952-55	51339A	Knob	1952-56	*316366
"	1959-60	1687011	ditto Later	1956-59	51339B/H	"	1957-60	312954
Distributor	1952-53	40210A/B	Head, Export France	1952-53	*50962A	Windshield wipers		
" Later	1953	*40301B/D	" Later	1952-55	*50341A	Motor	1952-58	75144A
"	1954	40359A/B	"	1956-59	*50341B/E	"	1959-60	75289B
" Later	1954-60	40359D/F	"	1960	58231A/E	" Later	1960	75398A
Flasher unit (when fitted)	1957	*35003A	Head, Export U.S.A.	1952-55	51343A	Wheelbox	1952-58	72560A/K
"	1958-60	35010A	"	1956-60	51343B/E	"	1959-60	72660A
Fuse box	1952-53	033240	Number plate illumination	1955-60	53343A	Crosshead and rack assy.		
"	1952-53	*37130A	Side	1952-53	52108A	Cut to 41	1952-58	736307
"	1954-60	*37137A	Stop tail and number plate	1954-60	52139B/F	Outer casing		
Generator	1952-53	22456A/B	Stop tail	1952-54	*53063B	Motor to wheelbox	1952-58	739833
(serviced by C.A.V.)	1954-58	1150150	Reflex reflector	1955-60	53178E/J	" (L.H.)	1959-60	743708
"	1959-60	1150152	Starting motor	1955	57073B	" (R.H.)	1959-60	743709
Horn	1952-56	*069213	Steering column control	1955-60	26086A	Wheelbox to wheelbox	1952-53	*739979
Low note (alternative, 1956)	1956-60	69046A/F	Suppressor (when fitted)	1955-60	26094A	End tube	1956-58	739932
High note (optional)	1956-60	69047A/F	SWITCHES			"	1959-60	740031
Inspection lamp sockets	1952-60	301187	Dipper	1955-60	31284A/D	Ferrule, casing retaining	1956-58	738410
Junction box	1955-57	78265A	Horn push and dipper	1952-54	*31325A	Grommet, wheelbox	1952-58	734458
LAMPS			Ignition and lighting	1952	34055A	Arm, left hand	1952-53	*737629
Flasher, front and rear (optional)	1957-60	52314A	Knob	1953-60	31194A/D	"	1956	*737629
Head, Home			Oil level indicator	1955-60	316285	" right hand	1952-53	*737628
R.H.D., dip left	1952-53	*50954A	Knob	1952-54	31146A	"	1956	*737628
" Later	1953-55	51336A	Panel	—	*315258	Blade	1957-58	742274
"	1956-60	51336B/J	Knob	1952-60	31113A/D	"	1959-60	54711557
Head, Export			Starting motor	1952-56	315112	8-pin plug	1952-58	727759
R.H.D., dip left	1952-53	*50954A	SWITCHES			" socket	1959-60	809797
" Later	1953-55	51336A	Dipper	1957-60	*315143		1956-60	809798
"	1956-60	51336B/J	Horn push and dipper					

COOPER 'Monaco' Sports (Coventry Climax Engine) 1959-60

Ammeter	1959-60	36001D	Horn	1959-60	*70063F	SWITCHES		
Battery	1959-60	RCPRI1A	LAMPS			Horn push and dipper	1959-60	31438B
Coil, ignition	1959-60	45075D	Head			Lighting	1959-60	31126F
Control box	1959-60	37204J	R.H.D., dip left	1959-60	51534B/E	Knob	—	316129
Distributor	1959-60	40566B	Number plate illumination	1959-60	53518A	Petrol pump	1959-60	31201D
Fuse box	1959-60	*37137A	Side	1959-60	52325B	Knob	—	314026
Generator	1959-60	22290A/E	Starting motor	1959-60	25063F	Starting motor	1959-60	76427D

DAIMLER 27 h.p. Limousine 1946-53

Ammeter	1949-51	*36048B	LAMPS—continued			SWITCHES—continued		
"	1952-53	36002D	Side	1947-53	52098A	Solenoid operating	1946-53	*317063
Battery	1946-53	HRLT23D	" (Hooper bodies)	1951-53	52165A	Stop lamp	1946-53	31281B
Coil, ignition	1946-53	*45012A/D	Stop tail	1953	53194B	Spring	—	315543
Control box	1946-48	*37032A/B	Mirror			Terminal block	1946-53	37101A
"	1949-53	*37067A/F	Left hand	1946-53	062590	Trafficators	1946-53	54022D
Distributor	1946	*40045A	Right hand	1946-53	062587	Warning lights		
"	1947-53	*40137A/F	Interior	1946-53	062560	Ignition	1946-53	318604
Fuse box	1947-53	*385221	Starting motor	1946-53	*270299	Oil	1953	318604
Generator	1946-53	*22447A	Steering column control	1946-53	32712A	Vacuum	1946-53	*318534
Horn			SWITCHES			Windshield wipers		
Low note	1946-50	*69021A	Battery master	1946-53	76605B	Motor	1946-50	*75074H
"	1951-53	*69011F	Dipper	1946-53	31284A	"	1951-53	*75074J
High note	1946-50	*69022A	Foglamp	1946-53	31201B	Wheelbox, with switch	1946-53	72567A/E
"	1951-53	*69012F	Knob	—	*316205	" less switch	1946-53	72568A/H
Inspection lamp sockets	1946-53	38604A	Heater/Fan	1946-53	*78222A	Crosshead and rack assy.		
LAMPS			Knob	—	*768502	Cut to 57	1946-53	738223
Fog	1946-53	*55029E	Ignition and lighting	1946-50	*34021A	Outer casing		
Head, Home	1946-53	50533A	"	1951-53	34055A	Motor to wheelbox	1946-53	*739832
Head, Export	1946-53	50628A	Panel	1946-53	*314722	Wheelbox to wheelbox	1946-53	739937
Inspection	1950-53	*060090	" (alternative)	1946-53	*78236A	3", offside wheelbox	1946-53	740031
Number plate illumination	1946-53	*53034A	Knob	—	*768439	Grommet, wheelbox	1946-53	735349
Pass	1946-53	*55010A	Reverse lamp	1946-53	31281B	Arm	1946-53	*735078
Side	1946	*52084A	Solenoid, starting motor	1946-53	76022A	Blade	1946-53	727707

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DAIMLER 36 h.p. Limousine 1946-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-51	*36048B	Mirror			Warning lights		
Battery	1952-53	36002D	Left hand	1946-53	062590	Ignition	1946-53	318604
Coil, ignition	1946-53	HRLT23D	Right hand	1946-53	062587	Oil	1953	318604
Control box	1953	HRT17D	Interior	1946-53	062560	Vacuum	1946-53	*318534
Distributor	1946-53	*45012A/D	Starting motor	1946-53	*270299	Windshield wipers		
Fuse box	1946-48	*37032A/B	Steering column control ..	1946-53	32717A	Motor	1946-50	75053J
Generator	1949-53	*37076E				" Later	1950	*75074H
Horn	1946-53	40077D				"	1951-52	*75074J
Low note	1946-53	*385221				"	1953	75183A
High note	1946-53	*22447A				Wheelbox, with switch	1946-52	72567A/H
Inspection lamp sockets ..	1946-53	38604A				" less switch ..	1946-52	72568A/E
						"	1953	72628
LAMPS			SWITCHES			Crosshead and rack assy.		
Fog	1946-53	*55029E	Battery master	1946-53	76605B	Cut to 52½"	1946-52	738499
Head, Home	1946-53	50533A	Dipper	1946-53	31284A	Crosshead and rack assy.	1953	741268
Head, Export	1946-53	50628A	Foglamp	1946-53	31201B	Outer casing		
Number plate illumination	1946-53	*53034A	Knob	—	*316205	Motor to wheelbox ..	1946-52	*739832
Pass	1946-53	*55010A	Heater	1946-53	*78222A	"	1953	740770
Side	1946	*52084A	Knob	—	768378	Wheelbox to wheelbox	1946-52	*738009
" (Hooper bodies)	1947-53	52098A	Ignition and lighting ..	1946-50	*34021A	"	1953	740889
Stop tail	1951-53	52165A	Panel	1951-53	34055A	End tube "	1946-52	740031
	1953	53194A	" (alternative)	1946-53	*314722	"	1953	740746
			Knob	—	*78236A	Grommet, wheelbox ..	1946-52	729423
			Reverse lamp	1946-53	*768439	Arm	1946-52	*735057
			Solenoid, starting motor	1946-53	76022A	"	1953	*741454
			Solenoid operating	1946-53	*317063	Blade	1946-52	727759
			Stop lamp	1946-53	31281B	"	1953	*737682
			Spring	—	315543			
			Terminal block	1946-53	37101A			
			Trafficators	1946-53	54022D			

DAIMLER 2½ litre Models (except 'Consort') 1946-53

Battery	1946-53	SLT13A	LAMPS—continued			Terminal block	1951-53	37101A
Coil, ignition	1946-53	*45012A/D	Head, Export France	1953	*51218A	Trafficators	1946-49	54022D
Control box	1946-48	*37030A	Head, Export U.S.A.	1951-53	*50937A	"	1950-53	*54039A
"	1949	37046A	ditto (Hooper bodies)	1951-53	*50980A			
"	1950-53	*37076E	Number plate illumination	1946-47	*53034A	Warning lights		
Distributor	1946-47	*40047A/D	Pass	1950-53	53097E	Flasher	1952-53	38052B
"	1948-49	*40137A/F	Side	1948-53	55084B	Heater	1951-53	38052B
"	1950-53	40175E/F	"	1946-47	*52060A	Ignition	1946-48	*318534
Flasher unit	1952-53	*35003A	"	1948	52098A	Main beam	1952-53	38052B
Fuse box	1949	*385221	"	1949	*52060A			
" (cigar lighter)	1950-53	37110A	"	1950	52120E	Windshield wipers		
Generator	1946-53	*385184	" (U.S.A.)	1951-53	52150B	Motor	1946-49	†75066A
" Later	1946-49	*22447A	"	1951-53	52177A	"	1950	*75075J
Horn	1949-53	*22436A	Stop tail	1950-51	*53156D	" Later	1952-53	*75075K
Low note	1946-53	*69021A	" (U.S.A.)	1952-53	53226A	Bracket, with shaft and		
High note	1946-53	*69022A	Mirror	1952-53	53153E	coupling	1946-48	734453
Inspection lamp sockets ..	1946-53	38604A	"	1946-51	*580593	ditto	1949	737089
Junction box	1946-53	78264A	" (right hand)	1951	062548	Shaft, short	1946-49	737243
			" (left hand)	1952-53	*580733	Coupling	1946-49	729036/S
			Starting motor	1952-53	*580736	Link, primary	1946-48	735448
			Steering column control ..	1946-50	*255721	" secondary	1949	737095
			ditto Later	1951-53	25521B/D	Clutch housing	1949	737097
				1946-49	322323	Wheelbox, with switch	1946-48	735691
				1949-53	32803A/F	" less switch	1949	737357
			SWITCHES			Wheelbox, with switch	1950-53	72612A
			Dipper	1946-53	31284A	"	1950-53	72613A
			Foglamp	1948-50	31228B	Crosshead and rack assy.		
			Knob	1951-53	31201B	Cut to 50½"	1950-53	738499
			Heater or fan	—	*316204	Outer casing		
			Knob	1950-53	78250A	Motor to wheelbox ..	1950-53	*739907
			Ignition and lighting ..	—	*768663	Wheelbox to wheelbox	1950-52	*739944
			"	1946-49	34056A	"	1953	*739979
			"	1950	*34006B	End tube	1950-53	740031
			"	1951-53	34063A	Grommet, wheelbox ..	1950-53	729423
			Panel	1946-49	*314722	Arm	1946-49	*735098
			Reverse lamp	1950-53	*78259A	"	1950-53	*736418
			Solenoid, starting motor	—	768662	Blade	1946-49	727707
			Solenoid operating	1951-53	31281B	" Later	1950-53	*737482
			Stop lamp	1946-49	76022A			
			Spring	1950-53	*76411D			
				1946-53	*317063			
				—	*31239A			
					31281B			
					315543			

DAIMLER 2½ litre 'Consort' 1950-53

Battery	1950-53	SLT13A	LAMPS			LAMPS—continued		
Coil, ignition	1950-53	*45012A/D	Fog	1953	*55055B	Head, Export Europe		
Control box	1950-53	*37076E	" (special orders)	1953	55084B	(not France)	1950-52	*B50852B
Distributor	1950-53	40175E/F	Head, Home			ditto	1953	*B51216A
Fuse box	1950-53	37110A	R.H.D., dip left	1950-52	*50852B	Head, Export France ..	1953	*51218A
Generator	1950-52	*22435A/B	"	1953	50913A/D	Head, Export U.S.A. ..	1950-53	*50937A
" Later	1952-53	*22456A/B	"	1953	*51216A	Reverse, tail and number		
Horn			" Later			plate	1950-53	53116A
Low note	1950-53	*69021A	Head, Export			Side	1950-53	52120E
High note	1950-53	*69022A	R.H.D., dip left	1950-52	*50852B	Stop tail and number plate	1950-53	53117A
Inspection lamp sockets ..	1950-53	39513A	"	1953	50913A/D	Stop tail and reverse		
Junction box	1950-53	78264A	"	1953	*51216A	" Later	1953	53221A
			L.H.D., dip right	1950-53	*A50852B	Starting motor	1950-53	25521B/D
			"	1953	*A51216A	Steering column control ..	1950-53	32803A/F
			" Later					

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

continued



DAIMLER 2½ litre 'Consort' 1950-53—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Terminal block			Windshield wipers—cont'd		
Dipper	1950-53	31284A	Trafficators	1950-53	37101A	Crosshead and rack assy.	1950-53	736177
Ignition and lighting ..	1950-53	34063A				Outer casing		
Panel	1950-53	*31209A				Motor to wheelbox ..	1950-53	739870
Knob	1950-53	*316205				Wheelbox to wheelbox ..	1950-53	*739944
Reverse lamp	1950-53	31281B				End tube	1950-53	740031
Solenoid, starting motor ..	1950-53	*76411D				Grommet, wheelbox ..	1950-53	734652
Solenoid operating	1950-53	*31239A				Arm	1950-53	*736418
Stop lamp	1950-53	31281B				Blade	1950-53	*737482
Spring	—	315543						

DAIMLER 3 litre 'Regency' Saloon and Coupé 1953

Battery	1953	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1953	*45012A/D	Number plate and reverse	1953	53161D	Panel	1953	*78259A
Control box	1953	*37139D	Side	1953	53210A	Knob	—	768662
Distributor	1953	*40280A/B	.. (U.S.A.)	1953	*52162A	Petrol gauge (Coupé) ..	1953	*31390A
Flasher unit	1953	*35003A	.. (Coupé)	1953	52175A	Solenoid, starting motor ..	1953	*76411D
Fuse box	1953	033239	.. (coupé, U.S.A.) ..	1953	52176A	Solenoid operating	1953	31115A
Generator	1953	*22456A/B	Stop tail	1953	53199B	Knob	—	*317335
Horn (Coupé)	1953	53178D	Stop lamp	1953	31281B
Low note	1953	*69011F	Stop tail and flasher ..			Spring	—	315543
High note	1953	*69012F	(U.S.A.)	1953	53153E	Windshield wiper	1953	31113A
Horn relay	1953	*33116B	Mirror	1953	620800	Knob	—	*316491
Inspection lamp sockets ..	1953	38604A	Starting motor	1953	25521B/D	Terminal block	1953	37101A
Junction box	1953	78266A	Steering column control ..	1953	32871A/B	Trafficators	1953	54044A
LAMPS			SWITCHES			Windshield wipers		
Fog	1953	55043E	Blower (Coupé)	1953	31113A	Motor	1953	75152A
Head, Home			Knob	—	*316498	Wheelbox	1953	*72548A/K
R.H.D., dip left	1953	*51216A	Dipper	1953	31284A	Crosshead and rack assy.		
Head, Export			Foglamp	1953	31113A	Cut to 50 mm	1953	738499
R.H.D., dip left	1953	*51216A	Knob	1953	*316499	Outer casing		
L.H.D., dip right	1953	*A51216A	Heater/Fan	1953	—	Motor to wheelbox ..	1953	*739907
Head, Export Europe ..			Knob	—	*768663	Wheelbox to wheelbox ..	1953	*739979
(not France)	1953	*B51216A	Ignition	1953	31287A	End tube	1953	740031
Head, Export France ..	1953	*51218A	Interior light (Coupé) ..	1953	31113A	Grommet, wheelbox ..	1953	734652
Head, Export U.S.A. ..			Knob	—	*316497	Arm, left hand drive ..	1953	*737571
(Hooper bodies)	1953	*51217A	Lighting	1953	31303A	.. right hand drive ..	1953	*737570
			Knob	—	316637	Blade	1953	738724

DAIMLER 'Conquest' ('Century') Saloon 1954-58

Battery	1954-58	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1954-55	*45012A/B	Number plate and reverse	1954-58	53161D	('Century')	1958	78314A
Control box	1954-55	*45054A/J	Side	1954-57	53210A/F	Knob	—	768975
Distributor	1954-55	*37138A/D	.. (U.S.A.)	1958	522050	Reverse lamp	1955-58	31281B
Flasher unit	1954-58	37182F/H	Side and flasher (U.S.A.)	1954-58	*52162B/E	ditto (Borg Warner		
Fuse box	1954-58	40394A	Stop tail	1954-55	53199B	models)	1957-58	*31077E
Generator	1954-58	40394B/D	Stop tail, flasher and reflex	1956-58	53410B	Solenoid, starting motor ..	1954-56	*76411D/E
Horn			Stop tail and flasher (Century)	1957-58	*76443A
Low note	1954	*69011F	(U.S.A.)	1954-55	53153E	Switch, circuit breaker ..		
High note	1955-58	69046A/E	Reflex reflector	1955	57072A	(Borg Warner models) ..	1957-58	*31077E
Inspection lamp sockets ..	1954-58	38604A	Starting motor	1954-58	25521B/D	Solenoid operating	1954-55	31115A
Junction box	1954-58	78266A	Steering column control ..	1954	32909A/B	Knob	—	315047
LAMPS			ditto	1955-58	32926A/H	Solenoid operating ..		
Driving	1956-58	55132D	ditto ('Conquest') ..	1956	32909A/B	('Conquest')	1956	31115E
.. (France)	1958	55161A	SWITCHES			Knob	—	*317335
Fog	1954-55	55043E	Blower	1956	31113D	Stop lamp	1954-58	31281B
Head, Home	1954-58	55128D	Knob	—	*316498	Spring	—	315543
R.H.D., dip left	1954-55	51336A	Dipper	1954-58	31284A	Windshield wiper	1954-58	31113A/D
.. .. .	1956-58	51336B/J	Foglamp	1956-57	31113D	Knob	1954-55	*315135
Head, Export	1954-55	51336A	Knob ('Conquest') ..	1956-57	*316499	.. (brown)	1956	*316491
R.H.D., dip left	1954-55	51336A	.. ('Century')	1956-58	316370	.. (black)	1956-58	316371
.. .. .	1956-58	51336B/J	Heater/Fan	1954-55	78250A/D	Terminal block	1954-58	37101A/B
L.H.D., dip right	1954	*51337A	Knob	1954	*768663	Trafficators	1954-58	54044A/E
.. .. .	1955	*51337B	Ignition ('Conquest') ..	1955	768378	Windshield wipers		
.. .. .	1956-58	*51337D/E	.. (Century)	1954-56	31287A/B	Motor	1954-55	*75174F
Head, Export Europe ..			Lighting	1954-56	31303A	1956-57	*75200B
(not France)	1954-55	51339A	.. (Century)	1954	31303A	1958	75296B
ditto	1956-58	51339B/H	Lighting	1956-58	31593A	Wheelbox	1954-55	72636D
Head, Export France ..	1954-55	*51341A	Knob	1955-58	316637	1956-58	72660A
.. .. .	1956-58	*51341B/E	.. (black)	1955-56	316637	Crosshead and rack assy.	1954-55	*743234
			.. (Borg Warner	1956-58	312550	Cut to 42 mm	1956-58	*743231
			models)	1957-58	313653	Outer casing		
			Panel rheostat	1954-55	*78259A	Motor to wheelbox ..	1954-55	740901
			Knob	—	768378	1956-58	744149
			Panel rheostat	1956	78314A	Wheelbox to wheelbox ..	1954-55	740982
			('Conquest')	1956	768662	1956-58	744150
			.. (Century)	1956-57	78299B	End tube	1954-58	747346
			Knob	—	313600	Arm, left hand drive ..	1954-55	*741293
						1956-58	745072
						.. right hand drive ..	1954-55	*741292
						1956-58	745071
						Blade	1954-58	738724

DAIMLER 'Conquest' Roadster and Drophead Coupé 1954-57

Battery	1954-57	GT9A	Flasher unit	1955-57	*35003A	Horn		
Coil, ignition	1954-55	*45012B	Flasher relay	1955-57	33117A	Low note	1954	*69011J
Control box	1954-55	*37138D	Fuse box	1954-57	033239	High note	1955-57	69046A/E
Distributor	1954-57	40424A/E	Generator	1954-55	22258D	1955-57	*69012J
				1956-57	22258E	Inspection lamp sockets ..	1954-57	69047A/E
						Junction box	1954-57	38604A
								78266A

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DAIMLER 'Conquest' Roadster and Drophead Coupé 1954-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Reflex reflector	1955-57	57072A	SWITCHES—continued		
Driving	1954-57	55132B	Starting motor	1954-57	25521D	Windshield wiper	1954-57	31113A/D
Flasher, front (Coupé) ..	1956-57	*52246B	Steering column control ..	1954-57	32926A/H	Knob	1954-55	*315135
Fog (Roadster)	1954-55	55128B				Terminal block	1956-57	*316491
" (Coupé)	1954-55	55043E	SWITCHES			Trafficators	1954-57	37101B
" (France)	1956-57	55128B	Dipper	1954-57	31284A	Windshield wipers	1954-57	54044D/E
Head, Home and Export			Foglamp	1956-57	31113D	Motor	1954-55	*75174E
Vertical dip	1954-57	51535A	Knob	—	*316499	Wheelbox	1956-57	*75200B
" " " " Later	1957	51535D/F	Heater/Fan	1954-55	78250D	" " " "	1954-55	72636D
Head, Export France ..	1954	51591A	Knob	—	768378	" " " "	1956-57	72660A
" " " "	1955	51591B	Ignition	1954-57	31287A/B	Crosshead and rack assy.	1954-55	*743234
" " " "	1956	51591D	Lighting	1954	31303A	Cut to 42 $\frac{3}{8}$ "	1956-57	*743231
Number plate illumination			Knob	—	316637	Outer casing		
(Roadster)	1954-55	53093E	Lighting	1955-57	31428B/D	Motor to wheelbox ..	1954-55	740901
(Coupé)	1956-57	53093H	Knob	—	312622	" " " "	1956-57	744149
Number plate illumination			Panel	1954	78250D	Wheelbox to wheelbox	1954-55	740982
and reverse (Coupé) ..	1954-55	53161D	Knob	1955	*78259A	" " " "	1956-57	744150
Reverse (Roadster) ..	1955	53378A	Knob	1954-55	768378	End tube " " " " ..	1954-57	740746
" (Coupé)	1956-57	53378A	Reverse lamp	1954-57	31281B	Arm, left hand drive		
Side (Roadster)	1954-55	52175B	Solenoid, starting motor	1954-57	*76411E	Coupé	1954-55	*741293
" (Coupé)	1956-57	52175B	Solenoid operating	1954-57	31115A/B	Roadster	1954	*741293
Side and flasher (Coupé)			Knob	1954-55	315042	" " " "	1955	741837
Stop tail (Roadster) ..	1954-55	*53372A	" " " "	1956-57	*317335	Arm, left hand drive	1956-57	745072
" (Coupé)	1956-57	*53372A	Stop lamp	1954-57	31281B	" " " " right hand drive	1954-55	*741292
Stop tail and flasher			Spring	—	315543	" " " " " "	1956-57	745071
(Coupé)	1954-55	53153E				Blade	1954-57	738724

DAIMLER DC27 Ambulance 1949-54

Ammeter	1949	*369274	LAMPS—continued			SWITCHES—continued		
Battery	1950-54	*36104A	Stop tail and reverse ..	1949-50	*53143B	Stop lamp	1949-54	31281B
Coil, ignition	1949-54	HR LT23D	ditto	1951-54	53203B	Spring	1954-54	315543
Control box	1949	*45012A/D	ditto (U.S.A.)	1951-54	53183B	Windshield wiper ..	1949-54	31201B
Distributor	1950-54	*37048E	Starting motor	1950-54	*270244	Knob	1949-54	*316206
Fuse box	1949-54	40179A/D	Steering column control	1949-54	26043A	Terminal block	1949-54	37101A
Generator	1949-52	*22435A/B			32808B/F	Trafficators	1949-54	*54039A
Horn	1949-54	*069399	SWITCHES			Warning lights		
LAMPS			Battery master	1949-54	76605B	Ignition	1949-54	*38013B
Fog	1949-54	*55055B	Bell push	1949-54	76201A	Main beam	1949-54	38052B
Head, Home			Dipper	1949-54	31226B	Oil	1949-54	*38042A
R.H.D., dip left (L.H.)	1949-54	*50445K	Foglamp	1949-54	*316204	Windshield wipers		
non-dip (R.H.)	1949-54	*50446K	Knob	—	*78249A	Motor	1949-51	*75055K
Head, Export			Heater or fan	1949-54	768378	" " " "	1953-54	75152A
R.H.D., dip left	1949-54	*50445K	Knob	1949-54	31201B	" " " "	1949-54	72614
L.H.D., dip right	1949-54	*A50445K	Ignition	1949-54	*316216	Wheelbox	1949-54	738987
Head, Export Europe			Knob	—	*31051A	Crosshead and rack assy.	1949-54	738987
(not France)	1949-54	*B50445K	Interior	1949-54	*34058A	Cut to 15 $\frac{1}{8}$ "	1953-54	760234
Head, Export France ..	1949-54	*50790E	Lighting	1949-54	31201B	Cap, rubber	1953-54	760234
Head, Export U.S.A. ..	1949-54	*50804D	Panel	1949-54	*316205	Outer casing		
Side	1949-54	52139B	Knob	1949-54	31201B	Motor to wheelbox		
" (U.S.A.)	1951-54	*52162A	Reverse lamp	1949-54	*316205	Left hand drive ..	1949-54	*739855
			Solenoid, starting motor	1949	31281B	Right hand drive ..	1949-52	*739855
			Solenoid operating ..	1949-54	76022A	" " " "	1953-54	*739884
					*76411D	End tube " " " " ..	1949-54	740031
					*317067	Arm	1949-54	738929
						Blade	1949-54	738930

DAIMLER 'Empress' Saloon: 'Regency' (and 'Sportsman'): 'Regina' Limousine 1955

Battery	1955	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1955	*45012B	Head, Export Europe			Reverse lamp	1955	31281B
" " " " Later	1955	*45054A	(not France)			Solenoid, starting motor	1955	*76411E
Control box	1955	*37139E	('Empress' & 'Regency')	1955	51700A	Solenoid operating ..	1955	31115A
Distributor			('Regina')	1955	*B50979A	Knob	—	315042
('Empress' and 3 $\frac{1}{2}$ litre			Head, Export France ..	1955	51701A	Stop lamp	1955	31281B
'Regency')	1955	40429D	('Empress' & 'Regency')	1955	50981B	Spring	—	315543
(4 $\frac{1}{2}$ litre 'Regency' and			('Regina')	1955		Windshield wiper ..	1955	31430A
'Regina')	1955	40476A	Head, Export U.S.A. ..	1955	51646A	Knob	—	312626
Flasher unit	1955	*35003A	('Empress' & 'Regency')	1955	53278B	Terminal block	1955	37101B
Flasher relay	1955	33117A	Number plate illumination	1955	53378A	Windshield wipers		
Fuse box	1955	37110A	Reverse	1955		Motor		
Generator	1955	*22456B	Side			('Empress')	1955	*75183D
" " " " Later (except			('Empress' & 'Regency')	1955	52175B	(Other models, L.H.D.)	1955	*75235A
'Regina')	1955	*22483A	Side and flasher			(" " " " R.H.D.)	1955	*75236A
Horn	1955	69046A	('Regina')	1955	*52162B	Wheelbox	1955	72636D
Low note	1955	69047A	Stop tail	1955	*53372A	('Empress')	1955	72671A
High note	1955	38604A	Reflex reflector	1955	57072A	(Other models) ..	1955	
Inspection lamp sockets	1955	78266A	Starting motor			Crosshead and rack assy.		
Junction box	1955		('Empress' and 3 $\frac{1}{2}$ litre			'Empress' Cut to 54 $\frac{3}{8}$ "	1955	741262
LAMPS			'Regency')	1955	25521D	Other models		
Driving	1955	55132B	(4 $\frac{1}{2}$ litre 'Regency' and			Cut to 44 $\frac{3}{8}$ "	1955	741264
Flasher, front	1955	*52246A	'Regina')	1955	26043A	Outer casing		
Fog	1955	55128B	Steering column control	1955	32925B	Motor to wheelbox		
Head, Home			('Regency')	1955	32947A	('Empress')	1955	740969
R.H.D., dip left			SWITCHES			(Other models) ..	1955	745227
('Empress' & 'Regency')	1955	51698B	Dipper	1955	31284A	Wheelbox to wheelbox		
('Regina')	1955	*50979A	Door light ('Regina') ..	1955	31472A	('Empress')	1955	740776
Head, Export			Foglamp	1955	31113A	(Other models) ..	1955	745226
R.H.D., dip left			Knob	—	315042	End tube	1955	740746
('Empress' & 'Regency')	1955	51698B	Heater motor	1955	31113A	Arm		
('Regina')	1955	*50979A	Knob	—	315042	('Empress')	1955	*741454
L.H.D., dip right			Ignition	1955	31287A	(Other models, L.H.D.)	1955	745081
('Empress' & 'Regency')	1955	51699B/D	Lighting	1955	31428B	(" " " " R.H.D.)	1955	745080
('Regina')	1955	*A50979A	Knob	—	312622	Blade	1955	738724
			Panel	1955	78314A	('Empress')	1955	738734
			Knob	—	768662	(Other models) ..	1955	

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive



DAIMLER 3½ litre 'One-O-Four' Saloon 1956-59: 'One-O-Four' Lady's Model 1956: 4½ litre Limousine 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Lady's Model)	1956	36222B	LAMPS—continued			SWITCHES—continued		
Battery	1956-60	GT11A	Side (3½ litre)	1956-59	52175D	Stop lamp	1956-60	31082B/H
Coil, ignition	1956-60	*†45054H/K	" (4½ litre)	1957-60	52175D	Windshield wiper	1956-57	31430B
Control box	1956-59	*37189H/J	Side and flasher (4½ litre)	1956	52162E	"	1958-60	31302D
Distributor (3½ litre)	1956-57	37303A/B	Stop tail (3½ litre)	1956-59	*53372A	Knob (black)	1956-57	312626
" Later	1958-59	40524A	" (4½ litre)	1956	*53372A	" (brown)	1956	312644
"	1958-59	40429A/D	Stop tail and reflex (4½ litre)	1957-59	53377B	"	1958-60	*317621
"	1959	40524A	Reflex reflector (3½ litre)	1956-59	57072B	Terminal block	1956-60	37101B
Flasher unit	1956-60	40476A	" (4½ litre)	1956	57072B	Trafficators (3½ litre)	1956-59	54044E
" (4½ litre)	1956-57	*‡35003A	Starting motor			Warning lights (Lady's Model)		
"	1958-60	‡35010A	(3½ litre)	1956-58	25521D	Ignition	1956	38100A
Flasher relay (3½ litre)	1956-59	‡33117D	(") Later	1958-59	25533D	Main beam	1956	38143A
" (4½ litre)	1956-57	33117D	(4½ litre)	1956-60	26043A	Oil pressure	1956	38144A
Fuse box	1956-59	37110A	(") alternative)	1958-60	26038A	Trafficator	1956	38143A
Generator	1956	*22483A	Steering column control			Windshield wipers		
"	1957-58	*22483B/D	(3½ litre Saloon)	1956-57	32925D	Motor, left hand drive	1956-58	*75235A
"	1959	*22456F	(") Lady's Model)	1956	32926A/H	" right hand drive	1959-60	75310A
" (alternative)	1959	*22483B/D	All Models	1958-60	32926A/H	"	1956-58	*75236A
" Later	1959-60	22489B/D				"	1959-60	75311A
Horn			SWITCHES			Wheelbox	1956	*72671A
Low note	1956-60	69046B/F	Blower (Lady's Model)	1956	*31498A	"	1957	72660A
High note	1956-60	69047B/F	Knob	—	313600	" (3½ litre)	1958-59	72636D
Inspection lamp sockets	1956-60	38604A	Knob	—	*316498	" (4½ litre)	1958-60	72660A
Junction box	1956-60	78266A	Blower (other models)	1956-60	31113D	Crosshead and rack assy.		
LAMPS			Knob	—	316498	(3½ litre)	1956-59	*743231
Boot (3½ litre)	1956-59	53235B	Dipper	1956-60	31284A/D	(4½ litre)	1956-57	*743231
Driving	1956-59	55132B	Door light (3½ litre)	1956-59	31175F	(")	1958 60	*741278
" (France)	1958-59	55161A	Foglamp (Lady's Model)	1956	*31498A	Outer casing		
" (4½ litre)	1956-57	55132B	Knob	—	313600	Motor to wheelbox		
"	1958-60	*55159A	Foglamp (other models)	1956-60	31113D	(3½ litre)	1956 59	745227
" (France)	1958-60	55208A	Knob	—	*316499	(4½ litre)	1956-57	745227
Flasher, front			Heater (4½ litre)	1957-60	31685A	"	1958-60	744892
(3½ litre, U.S.A.)	1956-59	*52246B	Ignition (except Lady's Model)	1956-60	31287B/F	Wheelbox to wheelbox		
(4½ litre)	1957-60	53359A/E	Ignition and starting (Lady's Model)	1956	31593A	(3½ litre)	1956-59	745226
Flasher, rear (4½ litre)	1957-59	*52278B	Interior, dash (4½ litre)	1957-60	31113D	(4½ litre)	1956-57	745226
Flasher, repeater (4½ litre)	1957-60	52326B	Knob	—	*316497	(")	1958-60	744891
Fog			Interior, rear (4½ litre)	1957-60	*31686A	End stop	1956-60	740746
(3½ litre)	1956-59	55128D	Lighting	1956-60	31428D/H	Ferrule, casing retaining	1956-60	740715
" (France)	1956-59	55160B	Knob (brown)	1956-60	312622	Grommet, wheelbox		
" (4½ litre)	1956-57	55128D	" (black)	1956	312550	(4½ litre)	1958-60	740811
"	1958-60	55196A	" (Borg Warner Models)	1957-58	313653	Arm, left hand drive		
" (France)	1956-57	55160B	Panel (Lady's Model)	1956	78299B	(3½ litre)	1956-59	745081
"	1958-60	55209A	Knob	—	313600	(4½ litre)	1956-57	745081
Head, Home			Panel (other models)	1956-60	78314A	"	1958-59	741810
R.H.D., dip left	1956-59	51698B	Knob	—	768662	Arm, left hand drive	1960	54712081
" Later	1959-60	51698D	Reverse lamp	1956-60	31281B	Arm, right hand drive		
Head, Export			ditto (Borg Warner Models)	1957-58	*31077E	(3½ litre)	1956-59	745080
R.H.D., dip left	1956-59	51698B	Solenoid, starting motor	1956	*76411E	(4½ litre)	1956-57	745080
" Later	1959-60	51698D	Solenoid operating	1957-60	*76443A	"	1958-59	741810
L.H.D., dip right	1956-59	51698B	(except Lady's Model)	1956-60	31115E	Arm, right hand drive	1960	54712081
"	1959-60	51698D	Knob	—	*317335	Blade (3½ litre)	1956-59	738734
Head, Export Europe			Switch, circuit breaker	1957-58	*31077E	" (4½ litre)	1956-57	738734
(not France)	1956-60	51700A	(Borg Warner Models)			"	1958-60	737897
Head, Export France	1956-60	51701A						
Head, Export U.S.A.	1956-60	51646A						
Number plate illumination	1956-60	53278B						
Reverse	1956-60	53378A						

DAIMLER 'Majestic' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1959-60	GT11A-3	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1959-60	*45054K	Head, Home			Lighting	1959-60	31428H
Control box	1959-60	37303A	R.H.D., dip left	1959	51698B	Panel	1959-60	78331A
Distributor	1959-60	*40614A/B	" Later	1959-60	51698D	Reverse lamp	1959	31281B
Flasher unit	1959-60	35010A	Head, Export			"	1960	*31077E
Fuse box	1959-60	033239	R.H.D., dip left	1959	51698B	Solenoid, starting motor	1959-60	*76443A
Generator	1959	*22456F	" Later	1959-60	51698D	Windshield wiper	1959-60	*31427E
" (alternative)	1959	*22483D	L.H.D., dip right	1959-60	51699B/D	Warning lights		
" Later	1959-60	22489B/D	Head, Export Europe			Flasher	1959-60	38124D
Horn			(not France)	1959-60	51700A	Ignition	1959-60	38100A
Low note	1959-60	69046F	Head, Export France	1959-60	51701A	Oil	1959-60	38144A
High note	1959-60	69047F	Head, Export U.S.A.	1959-60	51646A	Windshield wipers		
Inspection plug and socket	1959-60	38604A	Number plate illumination	1959-60	53278B	Motor, left hand drive	1959-60	75310A
LAMPS			Reverse	1959-60	53378A	Motor, right hand drive	1959-60	75311A
Boot	1959-60	53235B	Roof	1959-60	56061B	Wheelbox	1959-60	72673B
Driving	1959-60	55132B	Side	1959-60	52426B	Crosshead and rack assy.		
" (France)	1959-60	55161A	Stop tail	1959-60	53377B	Cut to 35 3/32"	1959-60	744254
Flasher, front			Starting motor	1959-60	25533D	Outer casing		
" (U.S.A.)	1959-60	52337A	Steering column control	1959-60	32926H	Motor to wheelbox	1959-60	54710655
"	1959-60	52345A	SWITCHES			Wheelbox to wheelbox	1959-60	745226
Flasher, rear			Blower	1959-60	*31557A	End tube	1959-60	740746
"	1959	*52272D	Dipper	1959-60	31248D	"	1959	741845
"	1960	*52278B	Foglamp	1959-60	*31557A	Arm, left hand drive	1960	54711558
" (U.S.A.)	1959-60	53686D	Ignition and starter	1959-60	*31678D	"	1959	741844
Fog	1959-60	55128B	Interior	1959	*31411A	" right hand drive	1960	54711557
" (France)	1959-60	55160A	"	1960	*31378A	Blade	1959-60	737897

* See Supersession Chart
L.H.D. .. Left hand drive

† Suitable replacement after 1957
R.H.D. .. Right hand drive

‡ U.S.A. only on 3½ litre

§ Australia only

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DAIMLER SP250 Sports 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1960	36263A	LAMPS—continued			SWITCHES—continued		
Battery	1960	BT9A	Fog	1960	55213A/B	Panel	1960	*31851A
Coil, ignition	1960	45102D	Head, Home			Reverse lamp	1960	31696A
Control box	1960	37299A	R.H.D., dip left	1960	58260A/D	Solenoid, starting motor	1960	*76465A
Distributor	1960	40676A/D	Head, Export			Stop lamp	1960	31882A
Flasher unit	1960	35020A	R.H.D., dip left	1960	58260A/D	Windshield wiper	1960	31836B
Fuse box	1960	033283	L.H.D., dip right	1960	58560A			
Generator	1960	22700D	Head, Export France	1960	58561A	Windshield wiper		
Generator (temporary alternative)	1960	*22704A	Number plate illumination			Motor	1960	75371A
Horn			Side	1960	52426B	Wheelbox	1960	72693B
Low note	1960	69046F	Stop tail	1960	53818A/B	Crosshead and rack assy.	1960	*743223
High note	1960	69047F	Reflex reflector	1960	575883	Outer casing		
LAMPS			Starting motor	1960	25533D	Motor to wheelbox	1960	54711646
Driving	1960	55212A/B	Steering column control	1960	33549A	Wheelbox to wheelbox	1960	54711647
Flasher, front	1960	52337A	ditto (alternative)	1960	33556A/B	End tube		740746
" " (U.S.A.)	1960	52345A	SWITCHES			Arm, left hand drive	1960	54711565
Flasher, rear	1960	52459A	Dipper	1960	31800A	" right hand drive	1960	54711566
" " (U.S.A.)	1960	52460A	Ignition and starting	1960	31799B	Blade	1960	737910
			Lighting	1960	31788B			

DELLOW MOTORS Sports Mk. III 1952-54: Mk. IIC 1955-57: Mk. V Lightweight 1955-57

Ammeter	1952	*36151A	LAMPS—continued			SWITCHES—continued		
" " " " Later	1952-57	*36117B	Head, Export			Stop lamp	1952-54	31281B
Battery	1952-54	SLG13E	R.H.D., dip left	1952-54	*50985A	Spring	—	315543
" " " " " "	1955-57	SLT13	" " " " " "	1955-57	50988A	Warning lights		
Coil, ignition	1952-54	*45016A	Number plate illumination	1952-54	A53093E	Flasher	1955-57	38067A
" " " " " "	1955-57	*45012A	" " " " " "	1955-57	53093E	Ignition	1952-54	*38012B
Control box	1955-57	*37172A	Side	1952	*A52040A	" " " " " "	1955-57	*38065A
Distributor	1952-54	40286A	" " " " " "	1953-54	A52182A	Main beam	1955-57	*38069A
" " " " " "	1955-57	40402A/N	Stop tail	1955-57	*52182A	Windshield wipers		
Fuse box	1952-57	*37137A	" " " " " "	1952-54	*A53178D	Motor	1952-54	*75121A
Generator	1952-54	22009E/F	Reflex reflector	1955-57	53178D	" " " " " "	1955-57	*75120A
" " " " " "	1955-57	22258D	Relay	1955-57	57031A	Coupling bar	1953-57	732227
Horn	1952-54	069343	Starting motor	1952-54	33154A	Bearing, passenger side	1953-57	731721
" " " " " "	1955-57	069344	" " " " " "	1955-57	26009A/D	Arm, left hand	1952-54	*732927
LAMPS			" " " " " "	1955-57	25022A/L	" " " " " "	1955-57	735111
Dash	1952-54	*A56010A	SWITCHES			" right hand	1952-54	*732926
" " " " " "	1955-57	56010A	Dipper	1952-53	31001A	" " " " " "	1955-57	735110
Flasher, rear (Mk. IIC)	1955-57	53362A	" " " " " "	1955-57	*31263A	Blade	1952-57	727784
Flasher, side (Mk. V)	1955-57	52240A	Horn and dipper Later	1953-54	*31263A			
Head, Home			Ignition and lighting	1952-57	31270A			
R.H.D., dip left	1952-54	*50985A	Knob	—	316285			
" " " " " "	1955-57	50988A						

DIAMOND MOTORS Pedestrian Controlled Battery Vehicle 1951-56

Horn	1951-56	*069213	LAMPS			SWITCH		
Horn push	1951-56	76205A	Side	1951-56	52034A	Lighting	1951-56	31291A
Junction box	1951-56	78264A	Tail and number plate	1951-56	*53041B			

DODGE 61C, 100C and 101C 1947-48: 120C 1947: 122C 1947-48

Ammeter	1947-48	36047D	Control box Later	1948	37065E	SWITCHES		
Coil, ignition			Distributor	1947-48	40090A/E	Dipper	1947-48	31284A
6 volt	1947	*45016A	Fuse box (6 volt)	1947	*385221	Ignition and Lighting	1947-48	*344540
12 volt Later	1947-48	*45020A	Horn (6 volt)	1947	069343	Warning lights		
Control box (6 volt)	1947	*37063A	" (12 volt) Later	1947-48	069344	6 volt	1947	*38012B
" " (12 volt) Later	1947-48	*37032A				12 volt Later	1947-48	*38013B

* See Supersession Chart

L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DODGE Petrol Models 1949-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement) ..	1955-57	GT9A	LAMPS—continued			SWITCHES—continued		
" " " " ..	1958	MT13A	Head, Export			Lighting and horn push (F.C.) ..	1958-60	31769B/M
" " " " ..	1959-60	FRT9A-8	R.H.D., dip left ..	1950-51	*50799D	" " " " ..		
Coil, ignition ..	1949-50	*45020A/B	" " " " Later ..	1951	*50959A	Lighting, horn push and flasher (when fitted, F.C.) ..	1958-60	*31794A/J
" " " " ..	1951-56	*45012A/B	" " " " ..	1952	*50992A	Panel ..	1949-54	*31276A
" " " " ..	1957-60	*45054A/J	" " " " ..	1953-55	51344A	" (F.C. and S.F.C.) ..	1957	*31276A
Control box ..	1949-50	37065E	" " " " ..	1956-59	51344B	" (N.C.) ..	1957	*31498A
" " " " ..	1951-52	*37076E	L.H.D., dip right ..	1959-60	51344D/F	Knob ..	—	31287I
" " " " ..	1953-57	*37139D/E	ditto (Tractor and Bus only) ..	1950-51	*A50799D	Panel (F.C. and N.C.) ..	1958-60	*31498A
" " " " Later ..	1958-60	37183H	ditto ..	1951	*50960A	Knob ..	—	31287I
" " (Light Bus) ..	1959-60	*37207F	ditto ..	1951-52	*50528M	Solenoid, starting motor ..	1949-60	*76411D/E
Distributor ..	1949-54	40166A	ditto ..	1953-54	*51345A	Solenoid operating ..	1949-57	*31071A
" " " " ..	1955-56	40444A/D	ditto ..	1955	*51345B	ditto (S.F.C. & N.C.) ..	1958-60	*31071A
" " " " ..	1957	40467D	ditto ..	1956-60	*51345D/F	Stop lamp ..	1953-60	31082B/E
" " " " (Australia) ..	1958-60	40444D/E	Head, Export Europe (not France) ..	1950-51	*B50799D	Windshield wiper ..	1957-60	*31498A
" " " " ..	1960	40467D	ditto ..	1951-52	*50961A	Knob ..	—	31287I
Fuse box ..	1949-52	*37137A	ditto ..	1953-55	51346A	Warning lights		
" " " " ..	1953-60	033239	ditto ..	1956-60	51346B/E	Ignition ..	1949-56	*38013B
Generator ..	1949-50	*22446A	Side ..	1949-51	52154A	" (N.C.) ..	1957	38158A
" " " " ..	1951-52	*22435A/B	" " " " ..	1952-53	*52079A	" (S.F.C.) ..	1957	38100A
" " " " ..	1953-55	*22456A/B	" " " " Later ..	1953-56	*52040A	" " " " ..	1958	*38013B
" " " " ..	1956	*22483A	" (Bus, special orders) ..	1957-58	*52040A	" (F.C. and N.C.) ..	1958-60	38158A
" " " " ..	1957-59	*22483B/D	" (alternative) ..	1956	*52079A	Windshield wipers		
" " " " Later ..	1959-60	22489D	" (S.F.C.) ..	1957-58	*52079B	Motor ..	1949-56	75091A
Horn ..	1949-60	*069399	" (N.C. and Bus, special orders) ..	1957-60	52250B	Special orders (S.F.C.) ..	1957-58	75091A
Low note (alternative) ..	1955	*69011J	" (F.C.) ..	1958-60	52321A	Knob ..	1957-60	75289A
High note (optional) ..	1956-60	69046A/F	Stop tail ..	1949-57	Serviced by Butlers Ltd.	Wheelbox ..	1957-60	72660A
" " " " ..	1955	*69012J	Reflex reflector ..	1956-57	57032B	Crosshead and rack assy. ..	1957-60	72660A
" " " " ..	1956-60	69047A/F	" (N.C. S.W.B. Tipper) ..	1958-60	57044A	Outer casing ..	1957-60	743722
Horn relay (when twins fitted) ..	1956-60	*33116B	Starting motor ..	1949	26025A/H	Motor to wheelbox ..	1957-60	743708
LAMPS			" " " " ..	1950-55	26050A	Left hand ..	1957-60	743709
Flasher (when fitted) ..	1958-60	53367D	ditto ..	1956-60	26100B	Right hand ..	1957-60	740746
Head, Home			Steering column control ..	1955-58	32942A/B	End tube ..	1957-60	735156
R.H.D. (L.H.) ..	1949	50606B	ditto (N.C.) ..	1959-60	32937B	Arm ..	1949-56	735156
" (R.H.) ..	1949	50707A	SWITCHES			" (S.F.C.) ..	1957-58	745081
R.H.D., dip left ..	1950-51	*50799D	Dipper ..	1949-60	31284A/B	" (N.C.) ..	1957-60	745080
" " " " ..	1951	*50959A	" (Australia) ..	1955	31277A	Blade ..	1949-57	727803
" " " " ..	1952	*50992A	Ignition and lighting ..	1949-56	*34018A/B	" " " " ..	1957	*737683
" " " " ..	1953-55	51344A	ditto (F.C. & S.F.C.) ..	1957-58	*34018B	" (N.C.) ..	1958-60	741680
" " " " ..	1956-59	51344B	ditto (N.C.) ..	1957-60	31270B	" " " " ..		
" " " " Later ..	1959-60	51344D/F	Knob ..	—	316285	" " " " ..		

DODGE (Perkins Diesel) P6 1951-60: P4 1958-60 (12 volt)

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement) ..	1955-57	MM17	LAMPS—continued			SWITCHES—continued		
ditto (P4) ..	1958	MT13A	L.H.D., dip right ..	1951	*A50799D	Lighting and horn push (F.C.) ..	1958-60	31769B
ditto ..	1959-60	STXT19E	" " " " Later ..	1951	*50960A	" " " " ..		
ditto (P6) ..	1958	MM17	" " " " ..	1952	*50528M	Lighting, horn push and flasher (when fitted) (F.C.) ..	1958-60	*31794A
ditto ..	1959-60	HRT21E	" " " " ..	1953-54	*51345A	Panel ..	1951-56	*31276A
Control box ..	1951-57	*37139D/E	" " " " ..	1955	*51345B	" (F.C. and S.F.C.) ..	1957-58	*31276A
" " " " ..	1957-60	37183H	Head, Export Europe (not France) ..	1956-60	*51345D/F	" (N.C.) ..	1957-58	*31498A
" " " " (Bus, serviced by C.A.V.) ..	1951-53	1685030	ditto ..	1951	*B50799D	Knob ..	1959-60	*31498A
ditto ..	1954-60	1688030	ditto ..	1951-52	*50961A	Panel ..	—	31287I
Fuse box ..	1951-60	033239	ditto ..	1953-55	51346A	Knob ..	1959-60	*31498A
Bus ..	1951-58	*37137A	Side ..	1956-60	51346B/E	Solenoid operating (serviced by C.A.V.) ..	1951-60	1823410
(serviced by C.A.V.) ..	1959-60	1800700	" " " " ..	1951	52154A	Stop lamp ..	1954-60	31082B/H
Diesel heater (serviced by C.A.V.) ..	1951-60	1800020	" (Bus) ..	1952-53	*52079A	Windshield wiper ..	1957-60	*31498A
Generator ..	1951	*22456A/B	" (all other models) ..	1953-54	*52040A	Knob ..	—	31287I
Bus (serviced by C.A.V.) ..	1951-53	D5LFA10	" " " " ..	1954-55	53210A	Warning light ..	1951-57	*38013B
" " " " ..	1954-60	1130090	" (Bus, special orders) ..	1955	*52079A	" " " " ..	1958-60	38158A
Horn ..	1951-60	*069399	" (alternative) ..	1956	*52040A	Windshield wipers		
Low note (alternative) ..	1956-60	69046A/F	" (S.F.C.) ..	1957-58	*52079A	Motor ..	1951-56	75091A
High note (optional) ..	1956-60	69047A/F	" (N.C. and Bus, special orders) ..	1957-60	52250B	S.F.C. (special orders) ..	1957-58	75091A
Horn relay (when twins fitted) ..	1956-60	*33116B	" (F.C.) ..	1958-60	52321A	All other models (special orders) ..	1957-60	75289A/B
LAMPS			Stop tail ..	1951-57	Serviced by Butlers Ltd.	Wheelbox ..	1957-60	72660A
Flasher (optional) ..	1958-60	53367D	Starting motor (serviced by C.A.V.) ..	1951-55	BS512L66	Crosshead and rack assy. ..	1957-60	743722
Head, Home			ditto ..	1956-59	1330660	Outer casing ..	1957-60	743708
R.H.D., dip left ..	1951	*50799D	ditto (P6) ..	1960	1320061	Motor to wheelbox ..	1957-60	743709
" " " " ..	1951	*50959A	ditto (6 ton 4-speed) ..	1960	1320080	Left hand ..	1957-60	740746
" " " " ..	1952	*50992A	ditto (P4) ..	1959-60	1330661	Right hand ..	1957-60	735156
" " " " ..	1953-55	51344A	Steering column control ..	1955-58	32942A/B	End tube ..	1957-60	740746
" " " " ..	1956-59	51344B	" " " " ..	1959-60	32937B	Arm ..	1951-56	735156
" " " " Later ..	1959-60	51344D/F	SWITCHES			" (S.F.C.) ..	1957-58	735156
Head, Export			Dipper ..	1951-60	31284A/D	" left hand (N.C.) ..	1957-60	745081
R.H.D., dip left ..	1951	*50799D	Heater plug (serviced by C.A.V.) ..	1951-60	1823420	right hand (N.C.) ..	1957-60	745080
" " " " ..	1951	*50959A	" " " " ..	1959-60	31403H	Blade ..	1951-56	727803
" " " " ..	1952	*50992A	Isolating (P6) ..	1951-56	*34018A/B	" (S.F.C.) ..	1957-58	727803
" " " " ..	1953-55	51344A	Lighting and main ..	1957-58	*34018B	" (N.C.) ..	1957	*737683
" " " " ..	1956-59	51344B	ditto (F.C. and S.F.C.) ..	1957-60	31270B/E	" " " " ..	1958-60	741680
" " " " ..	1959-60	51344D/F	ditto (N.C.) ..	—	316285	" " " " ..		
" " " " Later ..	1959-60	51344D/F	Knob ..	—		" " " " ..		

* See Supersession Chart L.H. .. Left hand F.C. .. Forward Control R.H. .. Right hand N.C. .. Normal Control L.H.D. .. Left hand drive S.F.C. .. Semi-Forward Control R.H.D. .. Right hand drive S.W.B. .. Short Wheelbase

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DODGE (Perkins Diesel) P6 1951-60: P4 1958-60 (12 volt)—continued

§ FUEL INJECTION EQUIPMENT (Perkins P4 Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958	BPE4A60S310S6383	Primer	1958-60	HP1-1
"	1959-60	BPE4A60U310S6383	Pre-filter	1958-60	BFJSJ1-501
Governor	1958	BEPAMZ80A134	Nozzle holder	1958-60	BK32S630
"	1959-60	BEPBMZ80A134	Nozzle	1958-60	BDL110S6133
Coupling	1958-60	BZKG31-538	Filter	1958	F2-8
Feed pump	1958-60	BFPK22P70	"	1959-60	F2B-22
Venturi	1958-60	BEPK50-50-107			
§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine)					
Fuel pump	1951	BPE6A60Q310S554	Primer	1951-57	BFPUE2-54Z
"	1952	BPE6A60Q310S6237	"	1958-60	HP1-1
"	1953-57	BPE6A60S310S6321	Pre-filter	1951-60	BFJSJ1-501
"	1957-58	BPE6A60S310S6381	Venturi	1951	BEPK50-50-65
"	1959-60	BPE6A60U310S6381	"	1952-53	BEPK50-50-77
Governor	1951	BEPMZ80A67	"	1954-58	BEPK50-50-101
"	1952-56	BEPMZ80A99	"	1959-60	BEPK50-50-107
"	1956-58	BEPAMZ80A99	Nozzle holder	1951-54	BK32S630
"	1959-60	BEPBMZ80A133	"	1955-60	BK32S630
Coupling	1951-60	BZKG31-538	Nozzle	1951-60	BDL110S6133
Feed pump	1951-52	BFPK22N1	Filter	1951-54	BFA5P1
"	1953	BFPK22N68	"	1955-58	F2-8
"	1954-56	BFPK22P68	"	1959-60	F2B-8
"	1957-60	BFPK22P70			

DODGE (Perkins R6 Diesel) 24 volt 1954-58: 12 volt 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Control box (serviced by C.A.V.)	1954-58	1688010	LAMPS—continued			SWITCHES—continued		
Control box	1959-60	37183H	Head, Export Europe (not France)	1954	*51649A	Lighting, horn push and flasher (when fitted, F.C.)	1958	31821A
"	Later	1960	ditto	1955-58	51641A	ditto	1959-60	*31794F
Fuse box	1954-55	033239	ditto	1959-60	51346B/E	Panel	1954-56	*31276A
"	1956-58	033263	Side	1954	+52154A	" (F.C. and S.F.C.)	1957	*31276A
"	1959-60	033239	"	1955	*52079A	" (S.F.C.)	1958	*31276A
" (Diesel heater, serviced by C.A.V.)	1954-60	1800020	" (alternative)	1956	*52079A	" (N.C.)	1957	*31498A
Generator (serviced by C.A.V.)	1954-58	1131090	" (S.F.C.)	1957-58	*52079A	Knob	1958-60	*31498A
"	1959	*22456F	" (Bus)	1957	*52040A	Panel (F.C. and N.C.)	—	312871
"	Later	1959-60	" (alternative, S.F.C.)	1958	*52040A	Knob	—	312871
" (power steering, serviced by C.A.V.) (F.C.)	1958	1108020	" (N.C. and Bus, special orders)	1957-58	52251B	Solenoid operating (serviced by C.A.V.)	1954-60	1823410
" (power steering, F.C.)	1959	*22524A/F	" (N.C.)	1959-60	52250B	Stop lamp	1954-57	31082D/E
ditto	1960	22528A/D	" (F.C.)	1958	52284A	"	1958	31486A
Horn	1954-58	069405	"	1959-60	52321A	Windshield wiper	1959-60	31082E
"	1959-60	*069399	Reflex reflector (F.C. S.W.B.)	1956-57	57032A	Knob	1957-60	*31498A
Low note (alternative)	1955	*69041B	Tipper	1958-60	57044A/B	Warning light	1958	312872
"	1956-58	69055A	Starting motor (serviced by C.A.V.)	1954-55	1332880	"	1959-60	38186A
"	1959-60	69046F	ditto	1956-58	1332990	Windshield wipers (special orders)	1957-60	72660A
High note (optional)	1955	*69042B	ditto	1959-60	1320061	Motor	1954-56	75202A
"	1956-58	69056A	Steering column control	1955-58	32756A	" (S.F.C.)	1957-58	75202A/B
"	1959-60	69047A	ditto	1958	32756B/D	" (N.C.)	1959-60	75289B
Horn relay (when twins fitted)	1956-58	*33164A	ditto	1959-60	32937B	Wheelbox (N.C.)	1957-60	72660A
ditto	1959-60	*33116B				Crosshead and rack assy. (N.C.)	1957-60	743722
LAMPS			SWITCHES			Outer casing		
Flasher (optional)	1958	53368D	Dipper	1954-60	31284A/D	Motor to wheelbox		
"	1959-60	53367D	Heater plug (serviced by C.A.V.)	1954-60	1823420	Left hand (N.C.)	1957-60	743708
Head, Home			Isolating (F.C.)	1958-60	31403F/H	Right hand (N.C.)	1957-60	743709
R.H.D., dip left	1954	*51650A	Lighting and main	1954-56	*34018B	End tube (N.C.)	1957-60	740746
"	1955-58	51639A/D	ditto (F.C. & S.F.C.)	1957	*34018B	Arm	1954-56	735156
"	1959-60	51344D/F	ditto (S.F.C.)	1958	*34018B	" (S.F.C.)	1957-58	735156
Head, Export			ditto (N.C.)	1957-60	31270B	" left hand (N.C.)	1957-60	745081
R.H.D., dip left	1954	*51650A	Knob	—	316285	" right hand (N.C.)	1957-60	745080
"	1955-58	51639A/D	Lighting and horn push (F.C.)	1958	31809A	Blade	1954-56	727803
"	1959-60	51344D/F	ditto	1959-60	31769K	" (S.F.C.)	1957-58	727803
L.H.D., dip right	1954	*51648A				" (N.C.)	1957	*737683
"	1955-58	51640A/B					1958-60	741680
"	1959-60	*51345D/F						

§ FUEL INJECTION EQUIPMENT
(Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954	BPE6A70R320S6302	Feed pump	1954-55	BFPK22P68
"	1955-57	BPE6A70R320S6360	"	1956-60	BFPK22P70
"	Later	1957-58	Primer	1954-57	BFPUE2-54Z
"	1959-60	BPE6A70T320S6387	"	1958-60	HP1-1
Governor	1954	BEPAMN80A122	Pre-filter	1954-60	BFJSJ1-501
"	1955	BEPMZ80A130	Nozzle holder	1954-60	BK32S630
"	1956	BEPMZ80A146	Nozzle	1954-60	BDL10S6125
"	Later	1956-58	Filter	1954-58	F2-8
"	1959-60	BEPAMZ80A136	"	1959-60	F2B-22
"	1959-60	BEPBMZ80A136			
Coupling	1954-60	BZKG31-538			

* See Supersession Chart † When ordering, quote voltage § Serviced by C.A.V. Ltd. F.C. .. Forward Control N.C. .. Normal Control
S.F.C. .. Semi-Forward Control S.W.B. .. Short Wheelbase L.H.D. .. Left hand drive R.H.D. .. Right hand drive
A70 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



DODGE (Leyland 0.350 Diesel) 24 volt 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement)	1958	MT11A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
ditto	1959-60	MT13A	Head, Export			Lighting, horn push and flasher (when fitted, F.C.)	1958-60	31821A/E
ditto (Heavy Bus)	1959-60	HRT21E	R.H.D., dip left	1958-60	51639B/E	Panel	1958-60	*31498A
ditto (Finland)	1959-60	MT21E	L.H.D., dip right	1958-60	51640B/E	Knob	—	312871
Control box (serviced by C.A.V.)	1958-60	1688010	Head, Export Europe (not France)	1958-60	51641B/E	Solenoid operating (serviced by C.A.V.)	1958-60	1823410
Fuse box	1958-60	033263	Side (F.C.)	1958-60	52284A	Stop lamp	1958-60	31486A
Generator (serviced by C.A.V.)	1958-60	1131060	" (N.C.)	1958-60	52251A	Windshield wiper	1958-60	*31498A
ditto (power steering)	1959-60	1108020	Reflex reflector	1958-60	57044A	Knob	—	312872
Horn			Starting motor (serviced by C.A.V.)	1958	1333310	Warning light	1958-60	38186A
Low note	1958-60	69055F	ditto	1959-60	1333311	Windshield wiper (N.C.)		
High note (optional)	1958-60	69056F	Steering column control (N.C.)	1958	32756A/D	Motor	1958-60	75290A/B
Horn relay (when twins fitted)	1958-60	*33164A	" (N.C.)	1959-60	32937B	Wheelbox	1958-60	72660A
LAMPS			SWITCHES			Crosshead and rack assy.	1958-60	743722
Flasher (when fitted, F.C.)	1958	53368D	Dipper	1958-60	31284A	Outer casing		
" " " "	1959-60	53494B	Lighting and main (N.C.)	1958	31270B	Motor to wheelbox		
Head, Home			" " " Later	1958-60	31790A	Left hand	1958-60	743708
R.H.D., dip left	1958-60	51639B/E	Knob	—	316285	Right hand	1958-60	743709
			Lighting and horn push (F.C.)	1958-60	31809A/F	End tube	1958-60	740746
						Arm, left hand	1958-60	745081
						" right hand	1958-60	745080
						Blade	1958-60	741680
§ FUEL INJECTION EQUIPMENT (Leyland 0.350 Engine)								
Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958-60	AAL6B75-66EL	Feed pump	1958-60	DFP6-3			
Governor	1958-60	RPB20A						

DOUGLAS 15/20/25 cwt. Electric Vehicles 1949

Horn	1949	*069213	SWITCHES			Windshield wiper		
LAMPS			Dipper	1949	31001A	Motor	1949	*75120A
Side	1949	52102A	Stop lamp	1949	31281B	Arm	1949	*735049
Tail and number plate	1949	*53041B	Spring	—	315543	Blade	1949	727802

DOUGLAS Battery Vehicle 1950-54

Fuse box	1950-54	*37137A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Horn	1950-54	*069213	Side	1950-54	52102A	Stop lamp	1950-54	31281B
Horn push	1950-54	76205A	Stop tail and number plate	1950	*53076E	Spring	—	315543
LAMPS			Tail and number plate	1951-54	*53041B	Windshield wiper		
Head, Home			Mirror	1950-54	62515A	Motor	1950-54	*75120A
R.H.D., dip left	1950-51	50874A	SWITCHES			Arm	1950-54	*735049
" " "	1952-54	*50959A	Dipper	1950-53	31001A	Blade	1950-54	727802

DOUGLAS 'Handyman' 1949-50

Horn	1949-50	70048D	SWITCHES			Windshield wiper		
LAMPS			Lighting and main	1949-50	34055A	Motor	1949-50	*75095A
Dash	1949-50	*A56044A	Stop lamp	1949-50	31281B	Arm	1949-50	*735096
Side	1949-50	A52036A	Spring	—	315543	Blade	1949-50	727802
Tail and number plate	1949-50	*A53007B						

ELVA 'Courier' (B.M.C. 1,500 c.c. Engine) 1959-60

Ammeter	1959	*36092A	Horn			LAMPS— <i>continued</i>		
"	1960	36266A/B	Low note	1959-60	69046F	Head, Home		
Battery	1959-60	BT7A	High note	1959-60	69047F	R.H.D., dip left	1959-60	*58232A/B
Coil, ignition	1959-60	*45053K	Horn relay	1959-60	*33116B	Head, Export		
Control box	1959-60	37182J & K	LAMPS			R.H.D., dip left	1959-60	*58232A/B
Distributor	1959	40600A	Flasher, front and rear	1959-60	52337A	Head, Export U.S.A.	1959-60	51343B/E
" " " Later	1959-60	40600B/D & F	Flasher, front (U.S.A.)	1959-60	52345A	Number plate illumination	1959-60	53093H/J
" " " "	1960	40600E & H	Flasher, rear (U.S.A.)	1959-60	53600A/E	Side	1959-60	52325B
Fuse box	1959-60	033239				Stop tail	1959-60	53330D
Generator	1959-60	22265D/E				Starting motor	1959-60	25022M

* See Supersession Chart
L.H.D. . . Left hand drive

§ Serviced by C.A.V. Ltd. F.C. . . Forward Control N.C. . . Normal Control
R.H.D. . . Right hand drive
Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ELVA 'Courier' (B.M.C. 1,500 c.c. Engine) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wiper		
Direction indicator ..	1959-60	*31367B	Solenoid, starting motor	1959-60	*76411E	Motor	1959-60	75297E
Horn push and dipper ..	1959-60	31438B	Solenoid operating ..	1959-60	31363B	Wheelbox	1959-60	72693D
Ignition and lighting ..	1959-60	31270A	Stop lamp	1959-60	31440D	Crosshead and rack assy.	1959-60	743221
Knob	—	316285	Windshield wiper ..	1959-60	*31554A	Outer casing		
Panel	1959-60	*31554A	Knob	—	313690	Motor to wheelbox ..	1959-60	54711632
Knob	—	316135	Trafficators (when fitted)	1959-60	54044E	Wheelbox to wheelbox	1959-60	744219
						End tube	1959-60	740746
						Arm	1959-60	*741834
						Blade	1959-60	737897

ENCON MOTORS 'Clipper' 1954

Control box	1954	*37127H	SWITCHES			SWITCHES—continued		
Generator	1954	22008B	Starting motor	1954	76423A	Stop lamp	1954	31082D
Starting motor	1954	25037A	Coupling	—	764428			

FAIRTHORPE 'Electron' and 'Electron Minor' 1958-60

Ammeter	1958-59	*36117A	LAMPS			SWITCHES—continued		
" Later	1959-60	36264A	Head, Home			Lighting Later	1959-60	31788A
Coil, ignition	1958-59	*45054K	R.H.D., dip left ..	1958-60	58247A/D	Knob	—	316154
" Later	1959-60	45102E	Head, Export			Starting motor	1958-60	76427D
Control box	1958	37183H	R.H.D., dip left ..	1958-60	58247A/D	Stop lamp	1958-60	31082E/H
"	1959	37283B	L.H.D., dip right ..	1958-59	58190A	Windshield wiper ..	1959-60	*31851A
" Later	1959-60	37290D/E	" Later	1959-60	58190B/E	Warning light (oil) ..	1959-60	38192A
Distributor ('Electron') ..	1958	40465A	Head, Export U.S.A. ..	1958-60	51343B/E	Windshield wipers		
"	1959	40566B	Number plate illumination	1959-60	53093J	Motor		
" Later	1959-60	40677A	Stop tail and reflex ..	1958-60	53330D	'Electron' (optional) ..	1958-59	75296D
" ('Minor') ..	1958-59	40598B/D	Starting motor ..	1958	25022M	'Minor' (optional) ..	1958-59	*75244A
" Later	1959-60	40638A/B & D	" .. ('Electron')	1959-60	25063F	Both models .. Later	1959-60	75371A
" (high compression) ..	1959-60	40611B	" .. ('Minor') ..	1959-60	25022N/Q	Wheelbox	1958-60	*72674A
Flasher unit	1958-60	35020A	Steering column control ..	1958-59	*32750B	Crosshead and rack assy.		
Generator	1958	22258F	SWITCHES			'Electron'	1958-59	*743225
" ('Electron') ..	1959-60	22296A	Dipper	1958-59	31284D	Both models .. Later	1959-60	743235
" ('Minor') ..	1959-60	*22297A	" Later	1959-60	31800A	Outer casing		
Horn			Flasher	1958-59	*31635A	Motor to wheelbox ..	1958-60	54710362
Low note (optional) ..	1959-60	69046F	" Later	1959-60	31743B	Wheelbox to wheelbox	1958-60	54710363
High note (optional) ..	1959-60	69047F	Ignition	1958-59	*31449E	End tube	1958-60	740746
Horn relay (when fitted)	1959-60	33188A	" Later	1959-60	*31934A	Arm		
			Ignition and lighting ..	1958	31270B	'Electron'	1958-59	742298
			Lighting	1958-59	*31251D	'Minor'	1958-59	745075
			Knob	—	316154	Both models .. Later	1959-60	745071
						Blade	1958-60	738734

FAIRTHORPE 'Atomota' 1959-60; 'Zeta' 1960

Ammeter	1959	*36117A	LAMPS—continued			SWITCHES—continued		
" Later	1959-60	36264A	Head, Export			Starting motor	1959-60	76427D
Coil, ignition	1959	*45054K	R.H.D., dip left ..	1959-60	58247A/D	Stop lamp	1959-60	31082H
"	1960	45102E	L.H.D., dip right ..	1959-60	58190B/E	Windshield wiper ..	1959-60	*31851A
Control box	1959-60	37283B	Head, Export U.S.A. ..	1959-60	51343B/E	Windshield wipers		
" Later	1960	37290D/E	Number plate illumination	1959-60	53093H/J	(optional)		
Distributor			Stop tail and reflex ..	1959-60	53330D	Motor	1959	75296D
'Atomota'	1959-60	40352E	Starting motor	1959-60	25065A	"	1960	75371A
'Zeta' (high compression)	1960	40633A/E	Steering column control ..	1959-60	*32750B	Wheelbox	1959-60	*72674A
" (low compression)	1960	40634A/D	SWITCHES			Crosshead and rack assy.	1959	*743225
Flasher unit	1959-60	35020A	Dipper	1959	31284D	"	1960	743235
Generator ('Atomota') ..	1959-60	22258F/H	"	1960	31800A	Outer casing		
" ('Zeta') ..	1960	*22297A	Flasher	1959	*31635A	Motor to wheelbox ..	1959-60	54710362
Horn			"	1960	31743B	Wheelbox to wheelbox	1959-60	54710363
Low note (optional) ..	1959-60	69046F	Ignition	1959	*31449E	End tube	1959-60	740746
High note	1959-60	69047F	"	1960	*31934A	Arm		
Horn relay (when fitted)	1959-60	33188A	Lighting	1959	*31251D	"	1959	742298
LAMPS			"	1960	31788A	"	1960	745071
Head, Home			Knob	1959-60	316154	Blade	1959-60	738734
R.H.D., dip left ..	1959-60	58247A/D						

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive



GEORGE FITT Invalid Carriage (Villiers Mk. VI Engine) 1951-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn	1951-55	*70001D	LAMPS— <i>continued</i>			SWITCHES		
Horn push	1951-55	76210A	Side	1951-52	*A52154A	Lighting	1951-55	*31159A
		 Later	1952-55	*A52105A	Knob	—	*315044
LAMPS			Tail and number plate ..	1951-55	53140B	Solenoid, starting motor (De Luxe)	1951-55	76421B
Head, Home			Starting motor (De Luxe)	1951-55	25037A/B	Solenoid operating (De Luxe)	1951-55	*31071A
R.H.D., dip left ..	1951-55	*50292D						

FRAZER NASH 'Mille Miglia', 'Targa Florio', 'Sebring' and Hard Top 1955

Battery	1955	GT7A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Bulb holder, panel light ..	1955	39007A	Head, Export			Ignition and lighting ..	1955	*34014B
Bulb	—	987	R.H.D., dip left ..	1955	50825A	Panel	1955	31201D
Coil, ignition	1955	*45039A	L.H.D., dip right ..	1955	A50825A	Knob	—	314026
Control box	1955	*37138D	Head, Export Europe (not France)	1955	B50825A	Solenoid, starting motor	1955	*76411E
Distributor	1955	40346A	ditto (alternative) ..	1955	51535A	Solenoid operating ..	1955	*31112E
Fuse box	1955	*37137A	Head, Export U.S.A. ..	1955	50942A	Warning lights		
Generator	1955	22258D	Number plate illumination	1955	53093E	Ignition	1955	*38015B
Horn			Side and flasher	1955	*52162B	Main beam	1955	38018B
Low note	1955	*69011J	Stop tail, flasher and reflex	1955	53377A	Windshield wiper		
High note	1955	*69012J	Petrol reserve valve ..	1955	78025A	Motor	1955	75158A
Horn relay	1955	*33116B	Starting motor	1955	25026B	Wheelbox	1955	72629A
LAMPS			Steering column control ..	1955	*32829B	Crosshead and rack assy. Cut to 33 $\frac{1}{2}$ "	1955	736177
Dash	1955	*56021A	SWITCHES			Outer casing		
Head, Home			Dipper	1955	31284A	Motor to wheelbox ..	1955	*739832
R.H.D., dip left (L.H.)	1955	50825A	Flasher	1955	31311A	Wheelbox to wheelbox	1955	739973
.. non-dip (R.H.)	1955	*50826A				3", offside wheelbox ..	1955	740031
						Arm	1955	*736418
						Blade	1955	*737653

FRISKY Saloon 1958: Coupé 1959: 'Family Three' 1960

Flasher unit	1958	35012A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
"	1959-60	35024A	Stop tail and reflex ..	1958-60	53520D	Windshield wiper ..	1958-60	*31515A
Horn	1958-60	70141B	Steering wheel centre ..	1958-60	33504A	Knob	—	*318167
Horn push	1958-60	76205D	SWITCHES			Warning lights		
Junction box	1958-59	78266A	Flasher	1958-60	31743D	Flasher (green)	1958-60	38191A
LAMPS			Ignition	1958-59	31974B	Ignition (red)	1958-60	38189A
Flasher (side)	1958-60	52424A	"	1960	31973B	Main beam (dark red) ..	1958-60	38190A
Head, Home			Lighting	1958-60	*31822D	Neutral gear (green) ..	1958-60	38191A
R.H.D., dip left ..	1958-60	58267B/E	Knob	—	316133	Oil (amber)	1958-59	38192A
Head, Export U.S.A. ..	1958-59	*51337D/E	Stop lamp	1958-60	31082J	Reverse gear (amber) ..	1958-59	38192A

LEONARD GUNDLE 'Handy Motor' 3-wheel Delivery Van 1951-55

Battery	1951-55	PUW7E-4	LAMPS			LAMPS— <i>continued</i>		
Horn	1951-54	*70001D	Head, Home	1951-54	55043E	Tail and number plate ..	1951-52	*53041B
"	1955	70048F	"	1955	*55098A	" Later	1952-55	*53007B
Horn push	1951-55	76210A	Side	1951-55	52036A	SWITCH		
						Lighting	1951-55	31224B

HARBOROUGH CONSTRUCTION Battery Vehicle (12 volt) 1951-54

Horn	1951-54	*069213	LAMPS			SWITCH		
Horn push	1951-54	*31071A	Side	1951-54	52034A	Lighting	1951-54	31291A
Junction box	1951-54	78264A	(alternative)	1951-54	52102A			
			Tail and number plate ..	1951-54	*53041B			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HEALEY 16 h.p. Roadster 1948-49

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-49	*369047	LAMPS—continued			SWITCHES—continued		
Battery	1948-49	SLG11E	Reverse, tail and number plate	1948-49	53116A	Solenoid operating ..	1948-49	*31151A
Coil, ignition	1948-49	*45012A/D	Roof	1948-49	*56017B	Stop lamp	1948	31281B
Control box	1948-49	37065E	Side and pass	1948-49	50417F	Spring	—	315543
Distributor	1948-49	40081A/F	Stop tail and number plate	1948-49	53117A	Windshield wiper	1948	*31131A
Fuse box	1948-49	*385221	Mirror	1948-49	*580651	"	1949	31201B
Generator	1948-49	*22447A	Starting motor	1948-49	*270299	Knob	—	*315998
Horn			Steering column control ..	1948-49	*32772A	Terminal block	1948-49	37082A
Low note	1948-49	*69021A	SWITCHES			Warning lights		
High note	1948-49	*69022A	Alpine	1948	*31135A	Alpine	1948	*38019B
LAMPS			Dipper	1948-49	31284A	Flasher (U.S.A.)	1949	*38042A
Head, Home			Foglamp	1948	*31130A	Ignition	1948-49	*38013B
R.H.D., dip left (L.H.)	1948	*50445K	Knob	1949	*315996	Main beam	1949	*38013B
non-dip (R.H.)	1948	*50446K	Ignition	1949	31287A	Windshield wiper		
dip left (Sports lens)	1948	*50694F	Ignition and lighting ..	1948	*34018A	Motor	1948-49	75062J
non-dip (Sports lens)	1948	*50695F	Lighting	1949	31091B	Wheelbox	1948-49	*72548A
dip left (L.H.)	1949	*50793B	Panel	1948	*78218A	Crosshead and rack assy.	1948-49	736307
non-dip (R.H.)	1949	*50362F	Knob	—	*768500	Outer casing		
Head, Export			Panel	1949	31201B	Motor to wheelbox ..	1948-49	*739855
R.H.D., dip left	1948	*50445K	Knob	—	*315997	Wheelbox to wheelbox	1948-49	*739971
L.H.D., dip right	1948	*A50445K	Panel	1949	31201B	3", offside wheelbox ..	1948-49	740031
Head, Export Europe (not France)	1948	*B50445K	Knob	—	*315997	Grommet, wheelbox ..	1948-49	733695
			Petrol reserve valve ..	1948-49	*31133A	Arm	1948-49	*736416
			Solenoid, starting motor	1948-49	76022A	Blade	1948-49	736414

HEALEY 16 h.p. Saloon 1948-49

Ammeter	1948-49	*369270	LAMPS—continued			SWITCHES—continued		
Battery	1948-49	SLG11E	Head, Export			Solenoid operating ..	1948-49	*31112A
Coil, ignition	1948-49	*45012A/D	R.H.D., dip left	1948	*50445K	Stop lamp	1948	31281B
Control box	1948-49	7065E	L.H.D., dip right	1948	*A50445K	Spring	—	315543
Distributor	1948-49	40081A/F	Head, Export Europe (not France)	1948	*B50445K	Trafficator	1948-49	031046
Fuse box	1948-49	*385221	Reverse, tail and number plate	1948-49	53116A	Windshield wiper	1948	314091
Generator	1948-49	*22447A	Roof	1948-49	*56017B	"	1949	31201B
Horn			Side and pass	1948-49	50417F	Knob	—	*315998
Low note	1948-49	*69021A	Stop tail and number plate	1948-49	53117A	Terminal block	1948-49	37082A
High note	1948-49	*69022A	Starting motor	1948-49	*270299	Trafficators	1948	54022D
LAMPS			Steering column control ..	1948-49	*32772A	"	1949	*54018D
Head, Home			SWITCHES			Warning light	1948-49	*318534
R.H.D., dip left (L.H.)	1948	*50445K	Dipper	1948-49	31284A	Windshield wiper		
non-dip (R.H.)	1948	*50446K	Foglamp	1948	*31130A	Motor	1948-49	*75062J
dip left (Sports lens)	1948	*50694F	Knob	1949	*31201B	Wheelbox	1948-49	*72548A
non-dip (Sports lens)	1948	*50695F	Ignition	—	*315996	Crosshead and rack assy.	1948-49	736177
dip left (L.H.)	1949	*50793B	Ignition and lighting ..	1949	31287A	Cut to 34 $\frac{1}{8}$ "	1948-49	736177
non-dip (R.H.)	1949	*50362F	Lighting	1949	*34036A	Outer casing		
			Panel	—	*31091B	Motor to wheelbox ..	1948-49	739870
			Knob	—	*316113	Wheelbox to wheelbox	1948-49	739937
			Panel	1949	31201B	3", offside wheelbox ..	1948-49	740031
			Knob	—	*315997	Grommet, wheelbox ..	1948-49	729423
			Petrol reserve valve ..	1948-49	*31134	Arm	1948-49	*737481
			Solenoid, starting motor	1948-49	76022A	Blade	1948-49	736414

HEALEY 'Sportsmobile' 1949

Ammeter	1949	*369270	Starting motor	1949	*270299	Terminal block	1949	37082A
Battery	1949	SLG11E	Steering column control ..	1949	32749A/H	Trafficators	1949	*54018D
Coil, ignition	1949	*45012A/D	SWITCHES			Warning lights		
Control box	1949	37065E	Dipper	1949	31284A	Ignition	1949	*38015B
Distributor	1949	40081A/F	Foglamp	1949	31201B	Petrol reserve	1949	*38015B
Fuse box	1949	*385221	Knob	—	*315996	Trafficator	1949	38018A
Generator	1949	*22447A	Ignition and lighting ..	1949	*34051A	Windshield wiper		
Horn			Interior light	1949	31201B	Motor	1949	*75064J
Low note	1949	*69021A	Knob	—	*314683	Wheelbox	1949	*72548A
High note	1949	*69022A	Map light	1949	31201B	Crosshead and rack assy.	1949	736177
LAMPS			Knob	—	*314683	Cut to 34 $\frac{1}{8}$ "	1949	736177
Head, Home			Panel	1949	31201B	Outer casing		
R.H.D., dip left	1949	*50445K	Knob	—	*315997	Motor to wheelbox ..	1949	739870
Side	1949	*52118A	Petrol reserve valve ..	1949	*31133A	Wheelbox to wheelbox	1949	*739960
" (U.S.A.)	1949	*52130A	Reverse lamp	1949	*31077D	3", offside wheelbox ..	1949	740031
Stop tail and reverse ditto (U.S.A.)	1949	*53143B	Solenoid operating	1949	*317063	Grommet, wheelbox ..	1949	729423
			Trafficator	1949	031046	Arm	1949	737575
			Windshield wiper	1949	31201B	Blade	1949	*738719
			Knob	—	*315998			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



HEALEY 'Silverstone' 1950

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950	*36018B	LAMPS—continued			SWITCHES—continued		
Battery	1950	SLG11E	Number plate illumination	1950	53093D	Windshield wiper	1950	31201B
Coil, ignition	1950	*45012A/D	Side	1950	52139E	Knob	—	*315998
Control box	1950	37076E	Stop tail	1950	*53151B/D	Warning lights		
Distributor	1950	40081A/F	Mirror	1950	*580733	Ignition	1950	*38013B
Generator	1950	*22435A/B	Starting motor	1950	*270299	Main beam	1950	38052B
Horn	1950	*069213	Steering column control	1950	*32829A	Petrol reserve	1950	*38042A
			ditto Later			Windshield wiper		
LAMPS			SWITCHES			Motor	1950	*75084K
Head, Home			Dipper	1950	*31267A	Wheelbox	1950	72590A
R.H.D., dip left (L.H.)	1950	*50895B	Ignition and lighting	1950	31194A	Crosshead and rack assy.	1950	736364
" non-dip (R.H.)	1950	*50896B	Knob	—	316285	Outer casing		
Head, Export			Panel	1950	31201B	Motor to wheelbox	1950	*739832
R.H.D., dip left	1950	*50895B	Knob	—	*315997	3", offside wheelbox	1950	740031
L.H.D., dip right	1950	*A50895B	Petrol reserve valve	1950	*31133A	Arm	1950	*737571
Head, Export Europe (not France)	1950	*B50895B	Starting motor	1950	76423A	Blade	1950	*737482
Head, Export U.S.A.	1950	50873B	Coupling	—	764428			

HEALEY 'Tickford' Saloon 1951-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-54	*36110A	LAMPS—continued			SWITCHES—continued		
Battery	1951-54	SLG11E	Stop tail	1951-52	*53204A/B	Solenoid operating	1951-54	*31112A
Coil, ignition	1951-54	*45012A/D	" Later	1952-54	53174E	Trafficator	1951-54	031046
Control box	1951-54	37065E	Mirror	1951	062556	Windshield wiper	1951-54	31201B
Distributor	1951-54	40081A/F	Panel light bulb holder	1951-54	39007A	Knob	—	*315998
Fuse box	1951-54	*37137A	Petrol reserve valve	1951-54	78022A	Terminal block	1951-54	37082A
Generator	1951-52	*22435A/B	Starting motor	1951-54	26043A	Trafficators	1951-54	*54039A
" Later	1952-54	*22456A/B	Steering column control	1951	*32772A	Warning lights		
Horn			"	1952-54	32875A/D	Alpine	1951-54	38018B
Low note	1951-53	*69021A	SWITCH S			Ignition	1951	*318534
"	1954	*69011F	Dipper	1951-54	31284A	"	1952-54	38046A
High note	1951-53	*69022A	Foglamp	1951-54	31201B	Windshield wiper		
"	1954	*69012F	Knob	—	*315996	Motor	1951-54	*75067L
LAMPS			Ignition	1951-54	31287A	Wheelbox	1951-54	*72548A/K
Fog	1951	55043E	Interior light	1951-54	31201B	Crosshead and rack assy.		
Head, Home			Knob	—	*314683	Cut to 48"	1951-54	738499
R.H.D., dip left	1951	50973A	Lighting	1951-54	31091B	Outer casing		
" Later	1951	50982A	Knob	—	*316113	Motor to wheelbox	1951-54	*739907
"	1952-54	51065A	Panel	1951-54	31201B	Wheelbox to wheelbox	1951-54	*739961
Interior	1952-54	56047A	Knob	—	*315997	3", offside wheelbox	1951-54	740031
Number plate illumination	1951-54	53097D/E	Petrol reserve	1951-54	*31134A	Arm	1951-54	*737481
Roof	1951	*56017A	Solenoid, starting motor	1951-54	*76411D	Blade	1951-54	736414
Side	1953-54	52139A/F						

HEALEY 'Abbot' Drophead Coupé 1952-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1952-54	*36110A	LAMPS—continued			SWITCHES—continued		
Battery	1952-54	SLG11E	Panel light bulb holder	1952-54	39007A	Windshield wiper	1952-54	31201B
Coil, ignition	1952-54	*45012A/D	Petrol reserve valve	1952-54	78022A	Knob	—	*315998
Control box	1952-54	37065E	Starting motor	1952-54	26043A	Terminal block	1952-54	37082A
Distributor	1952-54	40081A/F	Steering column control	1952-54	32875A/D	Trafficators	1952-54	*54039A
Fuse box	1952-54	*37137A	SWITCHES			Warning lights		
Generator	1952	*22435A/B	Dipper	1952-54	31284A	Alpine	1952-54	38018B
" Later	1952-54	*22456A/B	Foglamp	1952-54	31201B	Ignition	1952-54	38046A
Horn			Knob	—	*315996	Windshield wiper		
Low note	1952-53	*69021A	Ignition	1952-54	31287A	Motor	1952-54	*75067L
"	1954	*69011F	Interior light	1952-54	31201B	Wheelbox	1952-54	*72548A/K
High note	1952-53	*69022A	Knob	—	*314683	Crosshead and rack assy.		
"	1954	*69012F	Lighting	1952-54	31091B	Cut to 48"	1952-54	738499
LAMPS			Knob	—	*316113	Outer casing		
Head, Home			Panel	1952-54	31201B	Motor to wheelbox	1952-54	*739907
R.H.D., dip left	1952-54	51065A	Knob	—	*315997	Wheelbox to wheelbox	1952-54	*739961
Interior	1952-54	56047A	Petrol reserve	1952-54	*31134A	3", offside wheelbox	1952-54	740031
Number plate illumination	1952-54	53097D/E	Solenoid, starting motor	1952-54	*76411D	Grommet, wheelbox	1952-54	729423
Side	1952-54	52139A/F	Solenoid operating	1952-54	*31112A	Arm	1952-54	*736418
Stop tail	1952	*53204A/B	Trafficator	1952-54	031046	Blade	1952-54	736414
" Later	1952-54	53174E						

HILLMAN 'Minx' All Models 1946-57: De Luxe Series III 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1953-54	36170A	Control box Later	1948-51	37065E	Generator	1946-47	22449A
"	1955-56	36197A	"	1951-55	*37138B/D	"	1948	*22411A
" (special order, G.P.O. Estate Car)	1957-58	*36210A	"	1955-59	37182A/H	" Later	1948-49	*22250A
Battery	1946-47	36248A	Distributor			"	1949-51	*22250E/F
"	1948-49	SG9A	S.V. Engine (Special and Estate Car)	1946-54	*40050A/J	"	1951-56	22258D
"	1950-58	GT9A	O.H.V. Engine (low compression) Later	1955-56	*40050J	"	1957-59	22258E/F
" (cold climates)	1959	BT7A	O.H.V. Engine (high compression)	1955-56	*40428A/B	Horn		
Bulb holder			Flasher unit	1956-59	40492A	Low note	1946-48	069344
Speedometer	1954-57	39007A	"	1957-59	40530A	" Later	1948-54	*69011F
Warning lights	1959	*54940878	"	1953-55	*35003A	"	1955-59	69046A/F
Bulb	1959	281	Flasher relay	1956	*35004A	High note (optional)	1948-54	*69012F
Coil, ignition	1946-48	*45012A/D	Fuse box	1957-59	35011A	"	1955-59	69047A/F
"	1949-56	*45020A	" (manumatic gear)	1957-59	33117A/D	Horn relay (when twins fitted)	1955-59	*33116B
"	1957-59	*45053H/K				Inspection lamp sockets (G.P.O. Estate Car)	1954-56	38604A
Control box	1946-47	*37031A				"	1957	39507A
"	1948	37057E						



HILLMAN 'Minx Special' Series IIIA 1959-60: 'Husky' Series II 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Dipper	1959-60	31800A	Solenoid, throttle blipper ('Special', 'Easidrive')	1959-60	76521B	Motor, left hand drive	1959-60	75389A
Cap, rubber	—	54331425	Solenoid operating ('Special', 'Easidrive')	1959-60	31872A	Motor, right hand drive	1959-60	75388A
Flasher	1959-60	31737B	Starting motor	1959-60	76423A	Wheelbox	1959-60	72734A
Ignition and lighting ('Special')	1959	31958A	Coupling	—	764466	Crosshead and rack assy. Cut to 44 3/4"	1959-60	744256
Ignition and lighting ('Special' and 'Husky')	1960	31270F	Stop lamp	1959-60	31802B	Outer casing	1959-60	54711609
Knob	—	316285	Warning light (main beam) (U.S.A.)	1959-60	38118A	Motor to wheelbox	1959-60	743706
Solenoid, starting motor ('Special', 'Easidrive')	1959-60	*76465A				Wheelbox to wheelbox	1959-60	740746
						End tube	1959-60	54711535
						Arm, left hand drive	1959-60	54711534
						Arm, right hand drive	1959-60	54711282
						Blade	1959-60	

HINDLE SMART Battery Vehicle 1951-54

Fuse box	1951-54	*37137B	LAMPS—continued			Windshield wipers		
Horn	1951-54	*069213	Side	1951-54	52102A	Motor	1951-54	*75120A
Horn push	1951-54	76205A	Tail and number plate	1951-54	*53041B	Arm	1951-54	*735061
LAMPS			SWITCH			Blade	1951-54	727803
Head	1951-54	50730A	Lighting	1951-54	*34024A			

H.R.G. 9 h.p. 1946-52

Ammeter	1946-51	*369047	LAMPS—continued			SWITCHES		
"	1952	*36018B	Fog	1951-52	*55029E	Dipper	1946-52	31284A
Battery	1946-52	SLG11E	Head, Home			Ignition and lighting	1946-52	34055A
Coil, ignition	1946-52	*45039A	Left hand	1946-49	*50324A	Panel	1946-52	31201B
Control box	1946-49	*37031A	Right hand	1946-49	*50323A	Knob	—	314026
"	1950	37065E	Left hand Later	1949-50	*50458A	Starting motor	1946-52	76428A
"	1951-52	37057E	Right hand	1949-50	*50490A	Stop lamp	1946-52	31281B
Distributor	1946-50	*409641	R.H.D., dip left	1951-52	*50985A	Spring	—	315543
"	1951-52	40192A/D	Head, Export			Warning light	1949-52	*38013B
Fuse box	1946-52	*385175	Vertical dip	1949-50	*50458A	Windshield wipers		
Generator	1946-52	22449B	R.H.D., dip left	1951-52	*50985A	Motor	1946-52	75054A
" Later	1952	22449D	L.H.D., dip right	1951-52	50877B	Coupling bar	1946-52	*733472
Horn	1946-48	069344	Head, Export Europe (not France)	1951-52	50986A	Bearing, passenger side	1946-52	731721
"	1949-52	*69011F	Roof	1951-52	*56051A	Arm, left hand	1946-52	735119
Horn push	1946-52	31269A	Side	1946-52	52030A	" right hand	1946-52	735118
Junction box	1946-50	78266A	Stop tail and number plate	1946-52	*53031D	Blade	1946-52	727784
"	1951-52	78264A	Mirror	1946-52	*620128			
LAMPS			Starting motor	1946-48	*250231			
Dash	1946-49	*545179	"	1949-52	25017A			

H.R.G. 12 h.p. 1946-52

Ammeter	1946-51	*369047	LAMPS, Head, Home—continued			SWITCHES—continued		
"	1952	*36018B	Right hand	1949-50	*50490A	Stop lamp	1946-52	31281B
Battery	1946-52	SLG11E	R.H.D., dip left (L.H. and R.H.)	1951-52	*50985A	Spring	—	315543
Coil, ignition	1946-52	*45039A	Head, Export			Warning light	1949-52	*38013B
Control box	1946-48	*37032A	L.H. and R.H. ('Streamline')	1946	*50165A	Windshield wipers		
"	1949-50	37065E	L.H. and R.H.	1949-50	*50458A	Motor	1946-52	75054A
"	1951-52	37057E	R.H.D., dip left	1951-52	*50985A	Coupling bar	1946-52	*733472
Distributor	1946-48	*405507	L.H.D., dip right	1951-52	50877B	Bearing, passenger side	1946	731721
"	1949	40062A/E	Head, Export Europe (not France)	1951-52	50986A	Arm, left hand	1946-52	735119
"	1950-51	*40167B/E	Roof	1951-52	*56051A	" right hand	1946-52	735118
"	1951-52	*40167F/H	Side (Sports)	1946	52030A	Blade	1946-52	727784
Fuse box	1946-52	*385175	Stop tail and number plate	1946-52	*53031D	Windshield wipers ('Streamline')		
Generator	1946-48	*238311	Mirror	1946-52	*620128	Motor	1946-50	*75053J
"	1949-52	22449B	Starting motor	1946-48	*250231	"	1951-52	*75053K
" Later	1952	22449D	"	1949-52	25017A	Wheelbox	1946	*72548A/K
Horn	1946-48	069344	SWITCHES			Crosshead and rack assy.	1946	736121
"	1949-52	*69011F	Dipper	1946-52	31284A	Inner cable rack	1946	736024
Horn push	1946-52	31269A	Ignition and lighting	1946-52	34055A	Outer casing	1946	739844
Junction box	1946-50	78266B	Panel	1946-52	31201B	Motor to wheelbox	1946	739954
"	1951-52	78264B	Knob	1946-52	314026	Wheelbox to control box	1946	*739954
LAMPS			Starting motor	1946-52	76428A	Offside	1946	*740032
Dash	1949-50	56010A				Nearside	1946	740032
Fog	1951-52	*55029E				4" nearside wheelbox	1946	740031
Head, Home						3" offside wheelbox	1946	734458
Left hand ('Streamline')	1946	*50165A				Grammet, wheelbox	1946	735895
Right hand	1946	*50166A				Guide tube, wheelbox	1946	*735050
Left hand (Sports)	1946	*50324A				Blade	1946-52	727707
Right hand	1946	*50323A						
Left hand	1949-50	*50458A						

HUMBER 'Hawk' 1946-57

Ammeter	1946-48	364570	Control box	1946-48	*37032A	Distributor	1946-50	40070A/E
Battery	1946-47	SG9A	"	1949-52	37065E	"	1951-52	40218A/D
"	1948-57	GT9A	" Later	1952-56	*37138A/D	"	1953	40070A/E
Coil, ignition	1946-56	*45012A/D	"	1957	37182H	" Later	1953-54	*40376A/B
"	1957	*45054H				"	1955-56	*40430D
						" Later	1956-57	40491A/F

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



HUMBER 'Hawk' 1946-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Flasher unit	1954-55	*35003A	LAMPS—continued			Warning lights		
" "	1956	*35004A	Reverse lamp kit	1955	052993	Flasher	1953-54	*38069A
" "	1957	35011A	Roof	1948	*540020	" " (De Luxe)	1955-57	38119A
Flasher relay	1953-57	33117A/B	Side	1949-54	56016A	Main beam	1951-54	*38069A
Fuse box	1946-48	*385184	Side and flasher	1946-48	*52067A	" " (De Luxe)	1955-57	38118A
" " (G.P.O.)	1952-57	033239	(U.S.A. and Canada)	1950-54	52139B	" "	1957	38152A
" "	1951-52	*37131A	ditto	1949	*52152D			
Generator	1946-48	*22446A	ditto	1953	*52162B			
" "	1949-52	*22250E/F	ditto	1955	*52162B			
" "	1952-56	22258D	ditto	1956-57	52240B	Windshield wipers		
" "	1957	22258E	ditto	1957	*52372A	Motor	1946-48	†75066A
Horn			ditto	1949	*53120B	" "	1949-50	*75053J
Low note	1946-48	*69021A	ditto	1949	*53120B	" "	1951	*75053K
" "	1949-55	*69011F/J	ditto	1949	*53120B	" "	1952	75150A
" "	1955-57	69046A/E	Stop tail	1946-48	*53027B	" "	1953-54	*75174D
High note	1946-48	*69022A	ditto (U.S.A. & Canada)	1950-52	53174E	" "	1955-56	*75200B
" "	1949-55	*69012F/J	ditto	1950-53	53173B	" "	1957	75296A
" "	1955-57	69047A/E	ditto	1953-54	*53226D	Clutch housing	1946-48	737357
" "	1955-57	*33116B	Stop tail and reverse	1955	*53322A	Bracket, with shaft and		
Horn relay	1955-57	*33116B	Stop tail, flasher and reverse	1956-57	53464A	coupling	1946-48	734489
Junction box	1946-57	78266A	Tail and flasher indicator			Shaft, short	—	737243
LAMPS			Reflex reflector	1953-54	53174B	Coupling	—	729036/S
Boot	1946-48	56018A	Starting motor	1950-54	65424A	Link, primary	1946-48	733820
Clock illumination	1950-52	56041A	" "	1946-48	*255378	" " secondary	1946-48	733819
Head, Home			" "	1949-57	25521B/D	Wheelbox	1949-52	*72548A/F
R.H.D., dip left (L.H.)	1946-48	50176A	Steering column control			" "	1953-54	72636A/D
" non-dip (R.H.)	1946-48	50177A	Home	1946-48	323816	" "	1955-57	72660A
" dip left (L.H.)	1949	*50793B	Export	1946-48	323822	" " (De Luxe)	1957	*72688A
" non-dip (R.H.)	1949	*50362F	Steering column control ..	1949-50	32791A/J	Crosshead and rack assy.		
" dip left (L.H.)	1950-51	*50445K	ditto	1950-52	32844F	Cut to 50%	1949-52	738499
" non-dip (L.H.)	1950-51	*50446K	ditto	1953-54	32870A/H	Crosshead and rack assy.	1953-55	*743231
R.H.D., dip left			ditto	1955-57	32908A/J	" "	1956-57	743238
(L.H. and R.H.)	1951	*50954A	SWITCHES			Outer casing		
" "	1952-53	50941A	Boot lamp	1946-48	359358	Motor to wheelbox	1949-52	739858
" "	1953-55	51336A	Dipper	1953-57	31284A	" "	1953-54	740816
" "	1956-57	51736B/D	Door light	1949-54	31175A	" "	1955	745029
(alternative)	1956-57	51742B	Fog lamp	1949-50	*31212A	Wheelbox to wheelbox ..	1956-57	743981
Head, Export			Knob	—	*315995	" "	1949-52	*739957
R.H.D., dip left	1949	*50793B	Heater or fan	1947-48	*78233A	End tube	1953-57	740814
" "	1950-51	*50445K	Knob	—	*768523	" "	1949-52	740031
R.H.D., dip left			Heater or fan	1949-54	*31251A	" "	1953-57	740746
(L.H. and R.H.)	1951	*50954A	Knob	—	*316121	Ferrule, casing retaining	1955-57	740715
" "	1952-53	50941A	Ignition and lighting	1946-48	*34487A	Grommet, wheelbox	1951-52	735824
" "	1953-55	51336A	" "	1949-52	*34052A	Arm	1946-48	*735098
" "	1956-57	51736B	" "	1953-54	*34073A	" " left hand drive	1949-50	*737581
(alternative)	1956-57	51742B	" "	1955	34090A	" "	1951-52	*737576
Vertical dip	1946-48	*50274A	Knob	1955	340596	" "	1953-54	*741293
L.H.D., dip right	1949	A50793B	Ignition and lighting	1956-57	*34073A	" " right hand drive	1949-52	*737529
" "	1950-51	*A50445K	Panel	1949-57	*31236B	" "	1953-54	*741292
" "	1951-52	*50804D	Knob (ivory)	—	317508	" "	1955-57	*745071
" "	1953	50973A	" (black, De Luxe)	1957	313604	Blade	1946-48	727759
" "	1953-55	*51337A & B	Reverse lamp	1956-57	31281B	" "	1949	*737433
" "	1956	51737B	Roof lamp	1949-54	*31378A	" "	1950-52	*738719
Head, Export Europe			Solenoid, starting motor	1946-48	76022A	" "	1953-57	738724
(not France)	1949	*B50793B	" "	1949-57	*76411D/E			
ditto	1950-51	*B50445K	Solenoid operating	1946-48	*317073	Laycock de Normanville		
ditto	1951-52	*50963A	ditto	1949-52	*31195A	overdrive equipment		
ditto	1953	50967A	ditto	1953-57	31377A	(optional extra)		
ditto	1953-55	51339A	ditto (De Luxe)	1957	*31373B	Relay	1954-57	33157A
ditto	1956-57	51738B	Stop lamp	1946-54	31281B	Solenoid, transmission		
ditto	1950-51	*50790E	" "	1955-57	31082D/E	gear	1954-57	*76505A/B
Head, Export France			" "	1946-48	*31571A			
" "	1951-53	*50962A	Spring	1949-54	315543	Switches		
" "	1953-55	*51341A	Windshield wiper	1949-57	*31236B	Control, left hand drive	1954-57	31496A/D
" "	1956-57	51739B	Knob (ivory)	—	317507	ditto (De Luxe)	1957	*31628A
Head, Export N. America			" (black, De Luxe)	1957	313605	Control, right hand drive	1954-57	31483A/D
ditto	1948-53	50811A	Trafficators	1946-48	*54010A	ditto (De Luxe)	1957	*31627A
ditto	1953-55	51343A	" "	1949-50	*54018D	" "	1954	*31077D
ditto	1956-57	51741B	" "	1951-52	*54039A	Gear lever	1955-57	31478A
ditto	1957	51509A	" "	1953-54	54044A/D	Inhibitor		
Head, Export Canada			" "					
Number plate illumination	1949-54	53135A						
" "	1955-57	53278B						

HUMBER New 'Hawk' Series I and IA 1958-60

Battery	1958	GT9A	LAMPS—continued			Screenjet (optional)	1959-60	077025
Coil, ignition	1959-60	BT9A	Head, Export Europe			Starting motor	1958-60	25521D
" "	1958-59	*45053J/K	(not France)	1958-59	51947A/B	Steering column control ..	1958-60	32980A/E
Control box	1960	*45054M	(except France & Sweden)			SWITCHES		
" "	1958-59	37182H	Head, Export France	1959-60	58369A	Dipper	1958-60	31284A/D
" "	1960	37182K & L	" "	1958-59	51948A	Flasher	1958-60	31625B/D
Distributor	1958-59	40560A/B	" "	1959-60	58370A	" " (with overdrive)		
" "	1960	40560D/E & F	Head, Export Sweden	1960	58609A	" " L.H.D.	1958-60	31713A/B
Flasher unit	1958-60	35011A	Head, Export U.S.A.	1958-60	51949A	" " R.H.D.	1958-60	31712A/B
Fuse box	1958-60	033239	" "	1960	58492A	Ignition and starting	1958-60	31637A/E
Generator	1958-60	22258E/H	Number plate illumination			Lighting	1958-60	31426E
Horn			(Estate Car)	1958-59	53518A	Knob	—	313097
Low note	1958-60	69046F	" "	1960	53630A	Reverse lamp	1958	31281B
High note	1958-60	69047F	Number plate illumination			" "	1958-59	31826A
Horn relay	1958-60	*33116B	and reverse	1958-60	575923	" "	1960	31478A/B
LAMPS			Reverse (Estate Car)	1958-60	*52246B	Screenjet (when fitted) ..	1959-60	31363A
Boot	1959-60	53788A	Side and flasher	1958-60	52334B/K	Solenoid, starting motor	1958-60	*76411E
Head, Home			Stop tail and flasher	1958-60	53547D/H	Stop lamp	1958-60	31082E
R.H.D., dip left	1958-60	51946B/D	" "	1958-60	53643B/E	Windshield wiper	1958-60	*31668A
Head, Export			" " (U.S.A.)			Knob	1958	*316630
R.H.D., dip left	1958-60	51946B/D	Reflex reflector (dummy			" "	1959-60	*54330748
			filler cap)	1958-60	576271			

* See Supersession Chart † No longer available—refer to Wiper Conversion Set Section L.H. .. Left hand R.H. .. Right hand continued
 L.H.D. .. Left hand drive R.H.D. .. Right hand drive
 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HUMBER New 'Hawk' Series I and IA 1958-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers—cont'd			Windshield wipers—cont'd		
Flasher	1958-60	38142A	Screenjet nozzle and bush			Arm, left hand drive		
Ignition	1958-60	38140B	Left hand	1959-60	72733A Later	1959-60	54710008
Main beam	1958-60	38141B/E	Right hand	1959-60	72731A	.. right hand drive	1958	†743528
Oil	1958-60	38148A/B	Crosshead and rack assy.	1958-60	744256 Later	1958-59	745653
			ditto (L.H.D. only)			.. right hand drive		
		 Later	1959-60	744254 Later	1959-60	54710009
Windshield wipers			Outer casing			Blade	1958	1958
Motor	1958	†75305B	Motor to wheelbox ..	1958	†744403	1959	54711280
.. .. . Later	1958-59	75310A	ditto Later	1958-59	745806 Later	1959-60	54711283
.. L.H.D.	1959-60	75374A	ditto (L.H.D.) ..	1959-60	54710508			
.. R.H.D.	1959-60	75361A	ditto (R.H.D.) ..	1959-60	54710509			
Wheelbox, L.H. ..	1958	†72696B	Wheelbox to wheelbox	1958	†744404			
.. .. . Later	1958	72701A	ditto Later	1958-59	745807			
.. .. . R.H.	1958	†72695A	ditto	1959-60	54710349			
.. .. . Later	1958	72700A	End tube	1958-60	740746			
.. .. . L.H.D.	1959	72718A	Ferrule, casing retaining	1958-60	740715			
.. .. . R.H.D.	1959	72717A	Arm, left hand	1958	†743529			
.. .. . L.H.D. and			.. left hand drive					
.. .. . R.H.D. Later	1959-60	72730A Later	1958-59	745652			

HUMBER 'Imperial' 1946-53: 'Pullman' 1946-54

Ammeter	1946-48	364570	LAMPS—continued			SWITCHES—continued		
Battery	1946-49	SG11A	Head, Export Europe			Panel	1947-54	31173B
.. .. .	1950-54	GT11A	(not France)	1950-51	*B50445K	Reverse lamp	1946-50	*31077A
Coil, ignition ..	1946-47	*45039A	ditto Later	1951-52	*50963A	Roof lamp	1948-54	*31182D
.. .. .	1948-53	*45012A/D	ditto	1953	50967A	Solenoid, starting motor	1946-49	76022B
.. .. .	1954	*45046A	ditto Later	1953-54	51339A	1950-54	*76411D
Control box ..	1946-47	*37032A	Head, Export France ..	1951	*50790E	Solenoid operating ..	1946-54	*31174D
.. .. .	1948-49	37065E Later	1951-53	*50962A	Stop lamp	1946-54	31281B
.. .. .	1950-52	*37076E	Head, Export U.S.A. ..	1954	*51341A	Spring	—	*31571A
.. .. .	1953-54	*37139D	1948	50605H	Trafficator interrupter ..	1948-52	31177B
Distributor ..	1946-47	*410700	1951-53	50811A			
.. .. .	1948-53	40135E/H Later	1953-54	51343A			
Low compression	1954	*40312A/F	Number plate illumination	1946-54	53121A			
.. .. . Later	1954	*40312H	Reverse, tail and number			Trafficators	1946-47	*539973
High compression	1954	40401A/F	plate	1946-47	53032B	1948-49	*54010A
Flasher unit ..	1953-54	*35003A	ditto	1950	53116A	1950-51	*54040A
Fuse box (cigar lighter)	1946-52	*385184	Roof	1946-54	56016A	1952	*54048A
.. .. .	1953-54	032329	Side	1946-47	*52067A	1953-54	54044A/D
Generator	1946-49	*22446A	1949-52	*52158D			
.. .. .	1950-52	*22435A/B Later	1952-54	52200A	Warning lights		
.. .. .	1953-54	*22456A/B	Side and flasher (U.S.A.)	1952-54	53222A	Flasher	1953-54	*38069A
Horn			Stop tail and number plate	1946-47	*53027B	Main beam	1951-54	*38069A
Low note	1946-50	*69021A	Stop tail and reverse ..	1948-52	*53115E			
.. .. .	1951-54	*69011F	1953-54	53177B			
High note	1946-50	*69022A	Stop tail and flasher					
.. .. .	1951-54	*69012F	(U.S.A.)	1951-53	53227A	Windshield wipers		
Junction box ..	1946-54	78266A	Mirror			Motor	1946	†75066A
LAMPS			Left hand	1946-54	062590	1947-50	*75055K
Boot ('Pullman') ..	1946-47	*622047	Right hand	1946-54	062587	1951-52	*75055L
.. ('Imperial') ..	1946-47	56018A	Interior	1950-53	062577	1953-54	75152A
.. .. .	1948-54	*56017B	Starting motor	1946	*270490	Clutch housing	1946	737357
Bulb holder, stop tail	1950-54	56037A	1947-49	26026A/B	Bracket, with shaft and	1946	734489
Dash	1948	*56011A	1950-54	26041A/B	coupling	1946	737243
.. .. .	1951-52	56045B	Steering column control ..	1946-47	*323616	Shaft, short	—	729036/S
Head, Home	1948-54	32775H/J	Coupling	—	733820
L.H. and R.H. ..	1946-47	50203E			Link, primary	1946	733819
.. .. .	1948	*50362F	SWITCHES			.. secondary	1946	733820
R.H.D., dip left (L.H.)	1949-51	*50445K	Door light	1948-54	31175A	Wheelbox, with switch ..	1947-54	72597H
.. non-dip (R.H.)	1949-51	*50446K	Foglamp	1946	31201B less switch ..	1947-54	72596D
.. dip left	1951	*50954A	Knob	1946	314026	Crosshead and rack assy.	1947-54	736307
.. .. . Later	1952-53	50941A	Foglamp	1947-48	*31172A	Outer casing		
.. .. .	1953-54	51336A	Heater or fan	1948-54	78203A	Motor to wheelbox	1947-52	739868
Head, Export ..			Knob	1948-54	*768521	1953-54	*739832
R.H.D., dip left ..	1949-51	*50445K	Ignition	1948-54	*312168	Wheelbox to wheelbox	1947-54	*739941
.. .. .	1950-51	*A50845K	Knob	1946-47	344874	3", offside wheelbox ..	1947-54	740031
L.H.D., dip right	1951-52	*50804D	and lighting	1948-54	31183B	Grommet, housing or		
.. .. .	1953	50973A	Lighting	1948-54	315037	wheelbox	1946-54	734181
.. .. .	1953-54	*51337A	Knob			Arm	1946-54	*735078
.. .. .						Blade	1946-54	727759

HUMBER 'Snipe' 1946

Battery	1946	SG11A	LAMPS—continued			Trafficators	1946	*539663
Coil, ignition ..	1946	*45039A	Side	1946	*52067A	Windshield wipers		
Control box ..	1946	*37032A	Stop tail and number plate	1946	*525123	Motor	1946	†75066A
Distributor ..	1946	*410700	Mirror	1946	*621601	Clutch housing	1946	737357
Fuse box	1946	*385184	Starting motor	1946	*270490	Bracket, with shaft and	1946	734489
Generator	1946	*22446A	Steering column control ..	1946	*323616	coupling	1946	737243
Horn			SWITCHES			Shaft, short	—	729036/S
Low note	1946	*69021A	Foglamp	1946	*314442	Coupling	—	733820
High note	1946	*69022A	Ignition and lighting ..	1946	*344874	Link, primary	1946	733819
Junction box ..	1946	78266A	Reverse lamp	1946	*31077A	.. secondary	1946	733820
LAMPS			Roof lamp	1946	359358	Grommet, housing	1946	734181
Boot	1946	*560602	Solenoid, starting motor	1946	76022B	Arm	1946	*735078
Head, Home ..	1946	50203A/D	Solenoid operating	1946	*317063	Blade	1946	727759
Reverse, tail and number	1946	*525133	Stop lamp	1946	31281B			
plate	1946	*540020	Spring	—				
Roof	1946							

* See Supersession Chart † First 1,000 cars ‡ No longer available—refer to Wiper Conversion Set Section L.H. .. Left hand
R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

A80 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HUMBER 'Super Snipe' 1946-57

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various components like Ammeter, Battery, Coil, Control box, Distributor, Flasher unit, Generator, Horn, LAMPS, Head, Head, Home, Head, Export, Head, Export Europe, and SWITCHES.

HUMBER New 'Super Snipe' Series I and II 1959-60

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists components like Ammeter, Battery, Coil, Control box, Distributor, Flasher unit, Fuse box, Generator, Horn, LAMPS, and Glove box.

* See Supersession Chart L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HUMBER New 'Super Snipe' Series I and II 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export France ..	1959	51948A	Panel rheostat	1959-60	78331A	Crosshead and rack assy.		
Head, " " Later ..	1959-60	58370A	Reverse lamp	1960	78344A	Cut to 45°	1959-60	744256
Head, Export Sweden ..	1959-60	58609A	Knob " " Later ..	1959-60	54330752	Crosshead and rack assy.		
Head, Export U.S.A. ..	1959-60	51949A	Reverse lamp	1959	31826A	L.H.D. .. Later	1959-60	744254
Head, " " Later ..	1960	58492A	Screenjet (when fitted)	1959-60	*31077E	Outer casing ..		
Number plate illumination (Estate Car) ..	1959-60	53630A	Solenoid, starting motor	1959-60	*31363A	Motor to wheelbox ..	1959	745806
Number plate illumination and reverse ..	1959-60	575923	Stop lamp	1959-60	*76411E	L.H.D. .. Later	1959-60	54710508
Reverse (Estate Car) ..	1959-60	*52246B	Windshield wiper ..	1959-60	31082E	R.H.D. ..	1959-60	54710509
Side and flasher ..	1959-60	52334B/K	Knob	—	*31668B	Wheelbox to wheelbox	1959	745807
Stop tail and flasher ..	1959-60	53547H	Warning lights ..		*54330748	ditto .. Later	1959-60	54710349
ditto (U.S.A.) ..	1959-60	53643E	Flasher	1959-60	38142A	End tube	1959-60	740746
Reflex reflector (dummy filler cap) ..	1959-60	576271	Ignition	1959-60	38140B	Ferrule, casing retaining	1959-60	740715
Screenjet (optional) ..	1959-60	077025	Main beam	1959-60	38141E	Arm, right hand ..	1959	745653
Starting motor ..	1959-60	25521D	Oil	1959-60	38148B	" left hand ..	1959	745652
Steering column control ..	1959-60	33503B	Windshield wipers ..			" .. Later	1959-60	54710008
SWITCHES			Motor	1959	75310A	Blade " " ..	1959	54711280
Dipper	1959-60	31284A/D	" L.H.D. .. Later	1959-60	75374A	" .. Later	1959-60	54711283
Flasher (With overdrive)	1959-60	31625B/D	" R.H.D. ..	1959-60	75361A	Overdrive equipment (optional)		
Left hand drive ..	1959-60	31713A/B	Wheelbox	1959	72718A	Relay	1959	33157B
Right hand drive ..	1959-60	31712A/B	L.H.D.	1959	72717A	"	1960	33174B
Ignition and starting ..	1959-60	31637A/E	L.H.D. and R.H.D. ..			Solenoid, transmission gear	1959-60	*76517A/B
Lighting	1959-60	31426E/H	Screenjet nozzle and bush	1959-60	72730A	Switch		
Knob	—	54330759	Left hand	1959-60	72733A	Inhibitor (long thread)	1959	31478A
			Right hand	1959-60	72731A	" (short thread)	1960	31542A

INVACAR Invalid Carriage 1951-55

Battery	1951-55	PUW7E/4	LAMPS—continued			SWITCHES—continued		
Fuse box	1953-55	032339	Side	1951	A52154A	Lighting	1951-54	31201B
Horn	1951	70048D	"	1952-53	A52182	Knob	—	314026
"	1952-55	069225	"		A/D	Starting motor	1953-55	76423A
Horn push	1951-55	76210A	Tail and number plate ..	1951	*A52105A	Trafficator	1951-55	31379A
Junction box	1951-55	78266A	Starting motor	1952-55	*53140B	Trafficators	1951-52	*54012A
LAMPS			SWITCHES	1953-55	*A53056A	"	1953-55	54037A
Head	1951	*50292D	Dipper	1951-55	25037A	Windshield wiper ..		
"	1952-53	*50306D				Motor	1951-55	*75121A
"	1954-55	*50292D						

ISETTA (Gt. Britain) '300' 1957-60

Battery	1957-60	HO7A-8	LAMPS—continued			Reflex reflector		
(special applications)	1960	BT7A	Head, Export Canada ..	1957-60	58148A/B	Steering column control ..	1957-60	33504A
Coil, ignition	1957-60	*45053H/J	Number plate illumination	1957-60	*53650A/B	Suppressor	1957-60	78105A
Flasher unit	1957-60	35012A	Side	1959-60	52391A/B	SWITCHES		
" (Canada)	1957-60	35010A	Side and flasher (Canada)	1958-60	52338A/D	Dipper	1957-60	*31704A
Horn	1957-60	70141	Side and flasher plinth ..	1958-60	576987	Flasher	1957-60	31695A
Horn bracket	1957-60	705179	Stop tail	1957-59	53178F	Stop lamp	1957-60	31082E
LAMPS			Stop tail and number plate (Canada) ..	1958-60	53426A/B	Terminal block	1957-60	37101B
Flasher	1957-60	53362B	Stop tail and number plate plinth ..	1958-60	577091	Warning lights		
Head, Home	1957-58	58119B	Stop tail and reflex ..	1960	53520D	Flasher	1957-60	38102A
Vertical dip	1957-58	58119B	Tail, flasher and reflex ..	1958-60	53377B	Ignition	1957	38100A
R.H.D., dip left ..	1959-60	58415A	(Canada)	1958-60	53377B	"	1958-60	*319388
Head, Export	1957-58	58119B	Tail, flasher and reflex plinth ..	1958-60	576808	Main beam	1957-60	38145A
Vertical dip	1957-58	58119B						
R.H.D., dip left ..	1959-60	58415A						

JAGUAR 1 1/2 litre Saloon 1946-48

Ammeter	1946-47	*369260	LAMPS, Head, Home—continued			SWITCHES—continued		
"	1948	36071A	R.H.D., dip left (special equipment, L.H.) ..	1946-47	50161A	Ignition	1946-48	31287A
Battery	1946-48	SLG11A	R.H.D., non-dip (special equipment, R.H.) ..	1946-47	50162A	Lighting	1946-48	31056A
Coil, ignition	1946-48	*45020A/B	R.H.D., dip left (L.H.) ..	1948	50161A	Panel	1946-48	*314613
Control box	1946-47	*37036A	" non-dip (R.H.) ..	1948	50162A	Knob	—	314437
"	1948	37057E	Head, Export			Reverse lamp	1946-48	*31077A
Distributor	1946	*40057F/H	R.H.D., dip left ..	1947	*50385B	Roof lamp	1947-48	*314613
"	1947-48	40091A/H	ditto (alternative)	1947	50289D	Knob	—	314437
Fuse box	1946-47	*385175	ditto (special equipment)	1947	50355A	Solenoid, starting motor	1946-48	76022B
"	1948	37110A	Number plate illumination	1946-47	*53064A	Solenoid operating ..	1946-48	31361A
Generator	1946-48	22452A	ditto (special equipment)	1946-47	*53051A	Stop lamp	1946-48	31281B
Pulley	—	228080	ditto .. Later	1946-47	*53051A	Trafficators		
Horn			Side	1946-48	52030A			
Low note	1946-47	*69021A	Mirror	1946-48	*580892	Warning light	1946	*318732
"	1948	*69011F	Starting motor	1946-48	*255986	"	1947-48	*38020A
High note	1946-47	*69022A	Steering column control			Windshield wipers		
"	1948	*69012F	Home	1946	*323137	Motor	1946-48	†75066A
LAMPS			Export	1947-48	32758F	Clutch housing	1946-48	737085
Boot	1946-48	56015A	Home	1946-48	32730A	Bracket, with shaft and coupling ..	1946-48	737054
Fog	1946-48	*55009A	SWITCHES			Shaft, short	1946-48	737243
Head, Home			Boot lamp	1946-48	359236	Coupling	1946-48	729036/S
R.H.D., dip left (with biflex, L.H.) ..	1946	*50181A	Foglamp	1946-48	*314613	Link	1946-48	729234
R.H.D., non-dip (with biflex, R.H.) ..	1946	*50182A	Knob	1946-48	314437	Grommet, housing ..	1946-48	729423
R.H.D., dip left (with tripod, L.H.) ..	1946-47	*50150D	Heater or fan	1947-48	78205A	Arm	1946-48	729378
R.H.D., non-dip (with tripod, R.H.) ..	1946-47	*50151B	Knob	—	768424	Blade	1946-48	*735098
								727707

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR 2½ litre 1946-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*369260	LAMPS—continued			SWITCHES—continued		
"	1948	36071A	Head, Export Europe			Reverse lamp	1946-51	*31077A
"	1949-50	*36079A	(not France)	1949-51	B50778A	Roof lamp	1946-48	*314613
"	1951	36135A	ditto Later	1951	B50933A	Knob		314437
Battery	1946	SG11A	Head, Export France ..	1949-51	*50780A	Roof lamp	1949-51	*31198A
"	1947-48	SLT13A	ditto Later	1951	50935A	Knob		*315233
"	1949-51	GT11A	Head, Export U.S.A. ..	1949-51	50781A	Solenoid, starting motor	1946-49	*760080
Coil, ignition	1946-48	*45039A	ditto Later	1951	50936A	ditto Later	1949-51	*76411D
"	1949-51	*45012A/D	Number plate illumination	1946-48	*53051A	Solenoid operating ..	1946-48	31361A
Control box	1946-47	37046A	ditto	1949-51	*53149D	"	1949-51	31153A
"	1948-51	*37076E	ditto Later	1951	53215A	Knob		317324
Distributor	1946	40066A	Side	1946-48	*52043A	Windshield wiper ..	1949-51	31154A
"	1946	*40096A	"	1949-51	52137B	Knob		315140
"	1947	*40096B/D	"	1951	*52175A	Terminal block	1949-51	300990
"	1947	40092B/E	"	1951	52175A	Trafficators	1946-48	539941
"	1948	40156D	(U.S.A.)	1951	52176A	"	1949	54003E
"	1949-51	40156E/F	Stop tail	1949-50	*52167B	"	1950-51	*54039A
Fuse box	1946-47	*385175	Stop tail and flasher	1950	*53146A	Warning lights		
"	1948-50	37110A	ditto	1950-51	*53196B	Heater	1949-51	39015A
"	1951	*37100D	ditto	1951	53178D	Ignition	1946-48	*38020A
Generator	1946-47	*22447A	ditto (U.S.A.)	1949-50	*53145B	"	1949-51	38048A
"	1948	*22429A	Mirror	1951	*53176B	Windshield wipers		
"	1949	*22429D/E	"	1946-48	*580892	Motor	1946-48	†75066A
"	1950-51	22429F/H	"	1950	062542	"	1949	*75063K
Horn			Starting motor	1951	062548	"	1950	*75055K
Low note	1946-47	*69021A	" Later	1946-47	*255721	"	1951	*75055L
"	1948-51	*69011F	"	1947-48	*25506A	Clutch housing	1946-48	737085
High note	1946-47	*69022A	"	1949-50	*25523A/D	Bracket, with shaft and		
"	1948-51	*69012F	"	1951	25522B	coupling	1946-48	737054
Horn relay (R.H.D.) ..	1951	*33116B	Steering column control	1946	327370	Shaft, short	1946-48	737243
" (L.H.D.) ..	1951	33135B	"	1946	32759F	Coupling	1946-48	729036/S
LAMPS			"	1949-51	32801J	Link	1946-48	729234
Boot	1946-51	56015A	SWITCHES			Wheelbox	1949-51	*72548A/K
Fog	1946-50	*55009A	Boot lamp	1946-48	359236	Crosshead and rack assy.		
"	1951	55043E	"	1949-51	31175A	Cut to 44½	1949-51	736307
Head, Home			Dipper	1949-51	31284A	Outer casing		
R.H.D., dip left (L.H.)	1946-48	50163B	Foglamp	1949-51	31154A	Motor to wheelbox ..	1949-51	*739832
" non-dip (R.H.)	1946-48	50164B	Knob		315140	Wheelbox to wheelbox	1949-51	739932
" dip left (L.H.)	1949-51	50778A	Heater or fan	1946-48	*78263A	End tube	1949-51	740031
" non-dip (R.H.)	1949-51	*50779A	Knob		768424	Grommet, housing ..	1946-48	729423
" dip left (L.H.)	1949-51	*50779A	Heater or fan	1949-51	31154A	" scuttle	1946-48	729378
" Later	1951	50933A	Knob		315140	" wheelbox ..	1949-51	734181
" non-dip (R.H.)	1951	*50934A	Ignition	1946-48	31287A	Arm	1946-48	*735098
Head, Export			"	1949-51	31216A	"	1949	736423
R.H.D., dip left ..	1947-48	50307B	Lighting	1946-48	31056A	" left hand	1950-51	*737596
"	1949-51	50778A	"	1949-51	31227A	" right hand	1950-51	*737595
L.H.D., dip right ..	1947-48	50489B	Knob		327074	Blade	1946-48	727707
"	1949-51	A50778A	Panel	1946-48	*314613	"	1949	736428
			Knob		314437	"	1950-51	*737572
			Panel	1949-51	31154A			
			Knob		315140			

JAGUAR 3½ litre Mk. V 1946-52; Mk. VII 1952-58

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*369260	Generator	1948	*22429A	LAMPS—continued		
"	1948	36071A	"	1949	*22429D/E	Head, Export		
"	1949-50	*36079A	"	1950-52	*22429F/H	R.H.D., dip left ..	1947-48	50307B
"	1951	36135A	"	1953-58	*22462A/E	"	1949-51	50778A
Battery	1946	SG11A	Horn			"	1952-54	50933A
"	1947-48	SLT13A	Low note	1946-47	*69021A	R.H.D., dip left		
"	1949-50	GT11A	"	1948-53	*69011F	(L.H. and R.H.) ..	1955	*51505A
Coil, ignition	1946-50	*45039A	" (Export)	1954-58	*70063A/E	"	1956-58	*51762A
"	1951-55	*45012A/D	High note	1951-52	*69032A	L.H.D., dip right ..	1947-48	50489B
"	1955	*45054D	"	1953-54	*70063A	"	1949-51	A50778A
"	1956-58	*45067B/D	"	1946-47	*69022A	"	1952-54	A50933A
Control box	1946-47	37046A	"	1948-53	*69012F	"	1955	*51506A
"	1948-50	*37076E	"	1954-58	*70071A/E	"	1956-58	51763A
"	1951-53	*37118A	" (Export)	1951-52	*69033A	Head, Export Europe		
"	1953-56	*37139D/E	"	1953-54	*70071A	(not France)	1949-51	B50778A
"	1957-58	37183H	Horn relay (Home) ..	1951-53	33135B	(except countries listed)	1952-54	B50933A
Distributor	1946-47	*40080A	" (Export)	1951-53	*33116B	"	1955-58	51507A
"	1947	40093D	Inspection lamp sockets	1951-58	38604A	Head, Export France ..	1949-51	*50780A
"	1948-50	40149E/F	LAMPS			" Later	1951-54	50935B
7-1 compression ratio			Boot	1946-51	56015A	"	1955-58	51563A/B
(Standard)	1951-55	*40263A/B	Flasher, front	1955	*52222A	Head, Export Switzerland	1953	51472A
ditto Later	1955	40435A	"	1955-58	52271A	Head, Export Holland and		
ditto (Competition)	1955	40435A	" (U.S.A.) ..	1957-58	52343A	Switzerland	1955-58	51565B
(Standard)	1956-58	40435A	Fog	1946-50	*55009A	Head, Export Norway and		
8-1 compression ratio			"	1951	550435	Sweden	1953-54	51479A
(Standard)	1954-58	*40372A	"	1955-56	55128B	ditto	1955-58	51564A/B
(Competition)	1955-58	*40436A	"	1957-58	55174D	"		
(Special equipment)	1956-58	40445A/B	" (France)	1955-58	55133B	Head, Export U.S.A. ..	1949-51	50781B
Flasher unit	1953-56	*35003A	Head, Home			"	1952-54	*50936A
"	1957-58	35010A	R.H.D., dip left (L.H.)	1946-48	*50163B	"	1955-58	51562A/B
"	1953-58	33117A/D	" non-dip (R.H.)	1946-48	50164B	Map reading	1951-58	39006A
Flasher relay	1946-47	*385175	" dip left (L.H.)	1949-51	50778A	Number plate illumination	1946-48	*53051A
"	1948-50	37110A	" non-dip (R.H.)	1949-51	*50779A	ditto	1949-51	53149D
"	1951-57	*37100D	" dip left (L.H.)	1952-54	50933A	ditto Later	1951-52	*53255A
"	1958	37263A	" non-dip (R.H.)	1952-54	*50934A	ditto	1953-58	53215A
Generator	1946-47	*22447A	R.H.D., dip left			Number plate and reverse		
Pulley		228080	(L.H. and R.H.) ..	1955	*51505A	(France)	1957-58	53556A
			"	1956-58	*51762A			

* See Supersession Chart
L.H. .. Left hand R.H. .. Right hand

† No longer available—refer to Wiper Conversion Set Section

‡ and reverse
L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR 3 1/2 litre Mk. V 1946-52; Mk. VII 1952-58—continued

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various components like LAMPS, SWITCHES, Windshield wipers, and optional equipment for Jaguar Mk. V and VII.

JAGUAR Mk. VIII 1957-59; Mk. IX 1959-60

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various components like Ammeter, Battery, Coil, ignition, Distributor, Flasher unit, Generator, Horn, LAMPS, and SWITCHES for Jaguar Mk. VIII and IX.

* See Supersession Chart
† No longer available—refer to Wiper Conversion Set Section
‡ On Mk. VIII when power steering fitted

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR Mk. VIII 1957-59; Mk. IX 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES—continued			Windshield wipers			<i>Optional equipment:</i>		
Panel	1957-60	31114E	Motor, left hand drive	1957	*75291A	Borg Warner automatic transmission		
Knob	—	315242	ditto .. . Later	1957-60	75319B	Cover, selector (Mk. VIII) .. .	1957-59	397046
Petrol	1957-60	31429B/E	Motor, right hand drive	1957	75231A	illumination .. .	1957-60	39022E
Knob	—	316645	ditto .. . Later	1957-60	75308B	Starting motor .. .	1957-60	26097B/D
Reverse lamp .. .	1957-60	*31077E	Wheelbox (Mk. VIII) ..	1957-59	72628A/H	Switches		
Solenoid, starting motor	1957-60	*76411E	" (Mk. IX) .. .	1959-60	72719A	Hydraulic pressure valve .. .	1957-60	31393A
Solenoid operating ..	1957-60	31253E	Crosshead and rack assy. (Mk. VIII) .. .	1957-58	741262	Interrupter .. .	1957-60	*31077E
Knob	—	317365	ditto .. . Later	1958-59	744257	Solenoid, brake line		
Step light	1957-60	*31222D	Crosshead and rack assy. (Mk. IX) Cut to 58½"	1959-60	744258	Solenoid, gear holding		
Windshield wiper .. .	1957-60	*31302D	Outer casing			Throttle	1957-60	*76502D/E
Knob	—	316646	Motor to wheelbox (Mk. VIII) .. .	1957-59	740713	Laycock de Normanville overdrive		
Terminal block (4-way) (Mk. VIII) .. .	1957-59	300990	" (Mk. IX) .. .	1959-60	54710694	Relay	1957	33157D
(Mk. IX)	1959-60	37101B	Wheelbox to wheelbox (Mk. VIII) .. .	1957-59	740714	"	1958-60	33174B
Terminal block (8-way) ..	1957-60	37082A	" (Mk. IX) .. .	1959-60	54710695	Switches		
Warning lights			End tube	1957-60	740746	Centrifugal (Mk. VIII only)	1957-59	76102A
Brake	1960	*38091A	Ferrule, casing retaining	1959-60	740715	Interrupter or top gear	1957-60	*31077E
Flasher	1957-60	38048A	Arm, left hand drive ..	1957-59	741847	Rotary throttle (Mk. VIII) .. .	1957-59	31402B
Bulb holder	—	305411	"	1960	54711568	" (Mk. IX) .. .	1959-60	31504D
Bezel and glass .. .	—	305721	" right hand drive ..	1957-59	741846	Solenoid, transmission gear	1957-58	*76505B
Ignition	1957-60	38048A	"	1960	54711567	ditto	1959-60	76515A
Bulb holder	—	305414	Blade	1957-59	738734			
Bezel and glass .. .	—	305720	" Later	1959-60	54710656			

JAGUAR 2.4 litre 1956-59; Mk. II 1960

Ammeter	1956-57	36206D	LAMPS—continued			SWITCHES—continued		
" Later	1957-59	36237A	Stop tail and flasher			Solenoid operating ..	1956-59	31253A/E
"	1960	36262A	Left hand	1956-59	53381D/H	Knob	—	*317370
Battery	1956-60	GT9A	Right hand	1956-59	53382D/H	Solenoid operating ..	1960	31967A
Bulb holder, panel light	1958-60	554734	Left hand	1960	53726A	Stop lamp	1958-60	31082B
Bulb	—	987	Right hand	1960	53727A	Windshield wiper .. .	1956-59	*31427B/D
Coil, ignition	1956-60	*45067B/H	U.S.A. (left hand) ..	1960	53757A	Knob	—	312613
Control box	1956	*37139E	" (right hand) .. .	1960	53758A	Windshield wiper .. .	1960	*31966B
"	1957-58	37183H	Screenjet			Warning lights		
" Later	1958-59	*37189J	Motor and jar	1960	077011A	Choke	1957-60	38147A
"	1959-60	37297A/B	" 'T' piece	1960	295091	Brake fluid level .. .	1960	*38075A
Distributor			Tubing	1960	*54711658	" Later	1960	*38091A
7-1 compression ratio ..	1957-60	40557A/B	Nozzle	1960	54711657	Windshield wipers		
8-1	1956-60	40528A/B	Starting motor	1956-60	25521D	Motor, left hand drive	1956-57	*75294A
Flasher unit	1956	*35003A	Steering column control ..	1956-59	32902F/H	ditto	1958	*75323A
"	1957-60	35010A	"	1960	33550A	ditto .. . Later	1958-60	75311A/B
Fuse box	1956-57	033239	Slip ring (serviced by Jaguar)	1956-59	38262A/E	Motor, right hand drive	1956-57	*75293A
"	1958-60	033242	ditto	1960	38271A	ditto	1958	*75322A
Generator	1956-59	*22483A/D	Steering column nacelle			ditto .. . Later	1958-60	75310A/B
" Later	1959-60	22489B/D	Nacelle, upper:			Wheelbox	1956-58	72677A
Horn			Conventional	1960	54360427	"	1959-60	72714A/B
Low note	1956-60	*70063D/F	" .. . Later	1960	54360623	Crosshead and rack assy.	1956-58	741262
High note	1956-60	*70071D/F	Overdrive	1960	54360426	ditto .. . Later	1958-60	744257
Inspection lamp sockets ..	1956-57	38604A	" .. . Later	1960	54360621	Outer casing		
Junction box	1960	78264B	Automatic	1960	54360425	Motor to wheelbox ..	1956-60	743818
LAMPS			" .. . Later	1960	54360619	Wheelbox to wheelbox	1956-60	743819
Flasher, front	1960	52479A	Cover, lower:			End tube	1956-60	740746
" (U.S.A.) .. .	1960	52480A	Conventional	1960	54360363	Ferrule, casing retaining	1956-60	740715
Fog (when fitted) .. .	1956	55128D	" .. . Later	1960	54360624	Grommet, wheelbox ..	1959-60	740811
" Later	1956-59	55174A/D	Overdrive	1960	54360419	Arm, left hand drive ..	1956	*741293
"	1960	55232A	" .. . Later	1960	54360621	ditto	1957-58	741844
" (France, when fitted)	1956-59	55133B/F	Automatic	1960	54360420	ditto .. . Later	1958-59	746560
"	1960	55233A	" .. . Later	1960	54360620	ditto	1960	54711526
Head, Home			SWITCHES			Arm, right hand drive ..	1956	*741292
R.H.D., dip left .. .	1956-58	51767D	Choke warning light .. .	1960	31931A	ditto	1957-58	741845
"	1959-60	58225A	Dipper	1956-60	31284A	ditto .. . Later	1958-59	745651
Head, Export			Cap, rubber	—	360026	"	1960	54711525
R.H.D., dip left .. .	1956-58	51767D	Flasher	1956-59	31559E	Blade	1956-59	738734
"	1959-60	58225A	"	1960	319646A	" Later	1959	54710656
L.H.D., dip right .. .	1956-58	51791D/E	" (headlamp) .. .	1960	34314A	"	1960	54711282
"	1959-60	58226A	Hand brake	1960	31504D	<i>Optional equipment:</i>		
Head, Export Europe (except countries listed)	1956	51339D	Heater or fan (when fitted)	1956-59	31529A	Borg Warner automatic transmission		
ditto	1957-60	51738B/D	ditto	1960	31960A	Knob, selector	1960	54332201
ditto .. . Later	1960	58230E	Ignition	1956-59	31287B/F	Starting motor	1958-60	26097D
Head, Export France ..	1956	*51590B/E	"	1960	31962A	Switches		
"	1957-60	51886A	Interior light	1956-59	31527A	Hydraulic pressure ..	1958-60	31393A
" Later	1960	58231A/E	"	1960	31963A	Inhibitor	1958-59	31680A
Head, Export Norway, Sweden and Germany ..	1956-60	51792D/E	Lighting	1956-59	31426A/H	"	1960	31972A
Head, Export Sweden			Knob	—	317603	Interrupter	1958-60	*31077E
Later	1960	58450A	Escutcheon plate .. .	—	305608	Solenoid, brake line ..	1958-60	76502E
Head, Export Italy .. .	1959-60	58230B/E	Lighting (special equipment) ..	1956-59	31524A/E	" gear holding	1958	*76459D
Head, Export Austria ..	1960	58634A	Knob	—	317603	Throttle	1959-60	76516B
Head, Export U.S.A. ..	1956	51343B	Escutcheon plate .. .	—	305604	"	1958-59	31392A
"	1957-59	51741B	Lighting			Laycock de Normanville overdrive		
"	1960	*58497B	4-position	1960	31981A	Relay	1956-57	33157D/D
" Later	1960	58669A	3-position (U.S.A.) ..	1960	31902A	"	1958-60	33174B
Map reading	1960	52477A	Lever	—	54332270	Switches		
Number plate, boot and reverse	1956-60	53453A	Escutcheon plate .. .	—	54850095	Interrupter	1956-60	*31077E
ditto (France) .. .	1956-60	53557A	ditto (U.S.A.) .. .	—	54850094	Overdrive (L.H.) .. .	1960	31965B
Side (except Switzerland)	1960	52474A	Panel	1956-59	31528A	" (R.H.)	1960	34313A
Side and flasher .. .	1956-59	52264A	"	1960	31969A	Rotary throttle .. .	1958-60	31504D
ditto (Switzerland)	1960	52498A	Reverse lamp	1956-60	*31077E	Solenoid, transmission gear	1956-58	*76505B
			Screenjet	1960	31984A	ditto	1959-60	76515A
			Solenoid, starting motor	1956-60	*76411E			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JAGUAR 3.4 litre 1958-59: Mk. II 1960: 3.8 litre 1960

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various car components like Ammeter, Battery, Bulb holder, Distributor, Flasher unit, Generator, Horn, LAMPS, Head, Headlight, Ignition, Lamp, Map reading, Number plate, Side, Stop tail, Switches, and Throttle.

JAGUAR XK120 1949-54: XK140 1955-57: XK150 1958-60

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various car components for the XK series, including Ammeter, Battery, Coil, Control box, Distributor, Flasher unit, Generator, Horn, Junction box, Lamp, Map reading, Number plate, Side, Stop tail, Switches, and Throttle.

* See Supersession Chart

L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive

continued



JENSEN 3 3/4 litre 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*364391	LAMPS— <i>continued</i>			Trafficators	1946-47	*539971
Battery	1946-47	SLG13E	Tail	1946-47	52114A	Warning light	1946-47	*38015B
Coil, ignition	1946-47	*45039A	Mirror	1946-47	*62018A	Windshield wipers		
Control box	1946-47	*37031B	Starting motor	1946-47	26060A	Motor	1946-47	*75074J
Distributor	1946-47	*411052	Steering column control ..	1946-47	32751B	Wheelbox, with switch ..	1946-47	*72565A/J
Generator	1946-47	238498				.. less switch ..	1946-47	*72564A/F
Horn			SWITCHES			Crosshead and rack assy.		
Low note	1946-47	*69021A	Battery master	1946-47	*768008	Cut to 48 1/2"	1946-47	738499
High note	1946-47	*69022A	Dipper	1946-47	31284A	Outer casing		
Junction box	1946-47	78266B	Ignition and lighting ..	1946-47	*34035A	Motor to wheelbox ..	1946-47	*739832
LAMPS			Petrol reserve valve ..	1946-47	*314422	Wheelbox to wheelbox ..	1946-47	*739971
Map reading light ..	1946-47	39006A	Reverse lamp	1946-47	*31077A	End tube	1946-47	740031
Number plate illumination	1946-47	53580A	Solenoid operating ..	1946-47	*317075	Grommet, wheelbox ..	1946-47	734181
Side	1946-47	*522968	Stop lamp	1946-47	31281B	Arm	1946-47	*737481
			Spring	—	315543	Blade	1946-47	*737572

JENSEN 4 litre 'Interceptor' 1950-55

Battery	1950-55	GT11A	LAMPS— <i>continued</i>			Warning light (ignition) ..	1950-54	*38015B
Coil, ignition	1950-55	*45012A/D	Head, Export Europe			Holder	1955	304994
Control box	1950	37057E	(not France)	1950	B50825A	Shade	1955	305305
"	1951-52	*37076E	ditto	1951-54	*50963A	Window	1955	305303
"	1952-55	*37139D	ditto	1955	51339A	Windshield wipers		
Distributor	1950-55	*40147D/H	Head, Export France ..	1951	*50790E	Motor	1950	*75074J
Flasher unit	1954-55	*35003A	"	1952-54	*50962A	"	1951-52	*75055L
Flasher relay	1954-55	33117A	"	1955	*51590A	"	1953-55	75152A
Fuse box	1952-55	033239	Map reading light ..	1950-55	39006A	"	1955	75231A
Generator	1950	*22435A/B	Number plate illumination	1950-55	53097E	Wheelbox (with switch) ..	1950	*72565A/J
"	1951	*22436A	Side	1950-51	*52092A	.. (less switch) ..	1950	*72564A/F
"	1951-53	*22465A/E	"	1952	52139B	"	1951-55	*72548A/K
"	1953-55	22478A	Stop tail	1952-55	*52182B	"	1955	72628H
Horn			"	1950	53194B	Crosshead and rack assy.		
Low note	1950-55	*69011F	"	1951-55	53178D	Cut to 48 1/2"	1950-55	738499
High note	1950-55	*69012F	Mirror	1950-52	*062553	" .. 48 1/2" .. Later	1955	741264
Horn relay	1950-55	33135B	"	1952-53	*062557	Outer casing		
Junction box	1950-55	78266A	"	1953-55	*062567	Motor to wheelbox ..	1950-55	*739832
LAMPS			Reflex reflector	1955	*57070A	ditto .. Later	1955	745277
Boot	1952-55	53163A	Starting motor	1950-55	26043A	Wheelbox to wheelbox ..	1950	*739971
Driving (De Luxe) ..	1955	55120A	Steering column control ..	1950-53	32751B	ditto	1951-52	*739960
Flasher, front	1954-55	53210A	ditto .. Later	1953-55	32893A/B	ditto	1953-55	*739979
Fog (De Luxe)	1955	*55055B	Suppressor	1951-55	78114A	ditto .. Later	1955	745278
Head, Home			SWITCHES			End tube	1950-55	740031
R.H.D., dip left ..	1950	50825A	Dipper	1950-55	31284A	Ferrule, casing retaining	1955	740746
" .. (L.H.) ..	1951	*50445K	Driving lamp (when			.. Later	1955	740715
" .. non-dip (R.H.)	1951	*50446K	fitted)	1955	31201D	Grommet, wheelbox ..	1950	734181
" .. dip left ..	1952	*50954A	Knob	1952-55	*31222A	"	1951-55	733695
" Later	1952-54	50941A	Door light	1955	31201D	Arm	1950	*737481
"	1955	51336A	Foglamp (when fitted) ..	1955	314026	" .. left hand drive ..	1951-54	*737596
" .. (De Luxe)	1955	51546A	Knob	1950	*34035A	" .. right hand drive ..	1951-54	*737595
Head, Export			Ignition and lighting ..	1950	*34061A	"	1955	741485
R.H.D., dip left ..	1950	50825A	Panel	1951-55	31201B	Blade	1950-52	*737572
"	1951	*50445K	Knob	1952-55	314026	"	1953-54	*737683
"	1952	*50954A	Reverse lamp	1950-55	*31077A	"	1955	741680
" Later	1952-54	50941A	Solenoid, starting motor	1950-55	*76411D/E	Overdrive equipment		
"	1955	51336A	Solenoid operating ..	1950-55	31282A	(special orders)		
L.H.D., dip right ..	1950	A50825A	Stop lamp	1950-54	31281B	Relay	1953-55	33157A
"	1951	*A50445K	Spring	1955	315443	Switches		
"	1952-54	*50804D	Stop lamp	1955	31082B	Gear lever	1953-55	*31077A/D
"	1955	*51337B	Windshield wiper ..	1951-55	31201B	Solenoid, gearbox ..	1953-54	*76500E
			Knob	1951-55	314026	"	1955	*76505A
			Trafficators	1950-51	54022D	Overdrive control ..	1953-55	031218
			"	1952-53	*54035A	Knob	—	314026
			" Later	1953-54	54044D			

JENSEN 541 and 541R 1954-60

Battery	1954-58	GTW	Horn			LAMPS— <i>continued</i>		
" Later	1958-60	BT11A	Low note	1954-60	69046A/F	Number plate illumination	1954-55	53093E
Coil, ignition	1954-56	*45012D	High note	1954-60	69047A/F	Number plate illumination		
"	1957-60	*45054H/K	LAMPS			and reverse	1956-60	*53159B
Control box	1954-59	*37189D/J	Bonnet	1954-58	53163A	Side	1954-60	*52182A/D
"	1960	37304B	" Later	1958-60	53264B	Stop tail	1954-55	53178D
Distributor	1954-56	*40147D/H	Boot	1954-57	53163A	Stop tail and reflex ..	1956-60	53305D
"	1957-60	40371A/F	Driving (optional) ..	1955-60	55132B	Mirror	1954-55	*062567
Flasher unit	1954-55	*35003A	Flasher, front	1954-60	53359B/D	Reflex reflector	1954-55	*57070B
"	1956-59	35010A	Flasher, rear	1954-60	52337A	Petrol reserve valve ..	1954-60	78030A
"	1960	35020A	Fog (optional)	1955-60	55128B	Relay, horn	1954-60	33135B/D
Fuse box	1954-60	033239	Head, Home			Screenjet (541R) ..	1958-60	077011
Generator (541) ..	1954-57	*22483D	R.H.D., dip left ..	1954-58	51546D/E	Starting motor	1954-60	26043A
" .. (541R) ..	1958-59	22478D	Head, Export			Steering column control ..	1954-60	32953A/B
"	1960	22503D	R.H.D., dip left ..	1954-58	51546D/E	Suppressor (distributor) ..	1956-60	78114B
			"	1959-60	51535D/F	" .. (plug) ..	1956-60	78118A

* See Supersession Chart L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive continued



JENSEN 541 and 541R 1954-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Choke	1956	*31557A	Windshield wiper ..	1957	*31557A	Outer casing ..		
Knob	—	326346	Knob	—	317530	Motor to wheelbox ..	1954-56	743509
Dipper	1954-60	31284A/D	Windshield wiper ..	1958-60	31430A/D	1957-60	744738
Door light	1958-60	*31222D	Knob	—	316646	Wheelbox to wheelbox ..	1954-56	743510
Flasher	1954-60	31250A/H	Terminal block	1954-60	37101E	1957-60	744739
Handle	—	*311132	Warning lights			End tube " "	1954-60	740746
Heater or fan ..	1955-56	*31251D/E	Holder	1954	304994	Arm	1954-59	741836
Ignition and lighting	1954-60	*34061B	Flasher	Later	1954-60 Later	1959-60	54711561
Panel	1954-55	31201A	Ignition	1954-60	38102A	Blade	1954-55	*738735
Knob	—	*314015	Petrol reserve	1954-56	38100A	1954-55	*738735
Panel	1956-60	*31557A	" " " "	1957-60	38101A	Laycock de Normanville		
Knob	—	*317352	Windshield wipers ..			overdrive equipment		
Petrol reserve ..	1954-60	31201A/D	Motor	1954-56	*75200B	Relay	1954-55	33157A
Knob	1954-55	314026	" " " "	1957	75296A	" " " "	1956-59	33135B
" " " "	1956-60	*314421	" " " "	1958-60	75311A	" " " "	1960	33213B
Reverse lamp ..	1956-60	*31077E	Wheelbox	1954-56	*72665A	Cover, rubber	1954-60	340786
Solenoid, starting motor	1954-60	*76411D/E	Switches	1957-60	72660A	Switches		
Solenoid operating	1954-55	*31282A	Gear lever	1954-56	*743220	1954-60	*31077D/E
" " " "	1956-60	31363A	Isolating	1957	743221	Gear lever	1960	*31824A
Windshield wiper	1954-56	31201A	Solenoid	1954-56	743220	1954-57	*76505A
Knob	—	*317506	" " " "	1958-60	744254	" " " "	1958-60	*76517A

JENSEN 'JNSN' 6 ton Lightweight 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery			LAMPS			SWITCHES		
Control box	1946-47	6CXBE	Side	1946-47	52081F	Cab light	1946-47	31201B
Generator	1946-47	*37032A	Stop tail and number plate	1946-47	*53007B	Knob	—	314026
Horn	1946-47	*22446A	Starting motor (serviced by			Dipper	1946-47	31284A
Horn push	1946-47	*069206	C.A.V.)	1946-47	1330070	Trafficator	1946-47	*310380
Junction box	1946-47	76205B				Trafficators	1946-47	*053830
		78265A						

JENSEN 'Jen-Tug' 30 cwt. Tractor 1946-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery			Horn			SWITCHES—continued		
.. .. . Later	1946-52	SG13E Later	1946-52	069343	Ignition and lighting ..	1946-54	*34022B
Coil, ignition	1952-54	GT9A	" " " "	1952-53	*069206	Panel	1946-54	*31276A
.. .. . Later	1946-52	*45016A	" " " "	1954	*069399	Starting motor	1946-52	*764150
Control box	1952-54	*45020A	Horn push	1953-54	76225A Later	1952-54	76423A
" " " "	1946-50	*37035H	LAMPS			Coupling " "	1952-54	764428
" " " "	1951-52	*37102A/D	Head, Home	1946-52	50406D	Trafficator	1946-54	31379A
" " " "	1952-54	*37138A/B	" " " "	1952-54	51026A	Trailer security	1953-54	31384A
Distributor	1946-52	40286A	Side	1946-52	A52036A	Trafficators	1946-52	053831
" " " "	1953	40357A	" " " "	1952-54	52036A	" " " "	1952-54	*053830
" " " "	1953-54	*40284A/E	Tail and number plate ..	1946-52	*A53007B	Windshield wipers		
Fuse box	1946-52	*385221	ditto	1952-54	*53007B	Motor	1946-49	*75120A
" " " "	1952-53	033239	Starting motor	1946-48	*270301	" " " "	1950-52	*75121A
" " " "	1953-54	*37137A	" " " "	1949-52	26009A	" " " "	1952-54	*75120A
Generator	1946-48	22409A	" " " "	1952-54	25022A/F	Arm	1946-49	*735098
" " " "	1949-50	*22251E/F	Suppressor	1953-54	78105A	" " " "	1950-54	*735098
" " " "	1951	22409B/H	SWITCHES			Blade	1946-49	727707
" " " "	1951-52	22409J	Dipper	1946-54	31284A	" " " "	1950-54	727803
" " " "	1952-54	22258D						

JENSEN Lightweight Commercial Vehicle 1954-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter			LAMPS—continued			SWITCHES		
" " " "	1954	*36117A	Head, Export			Dipper	1954-55	31284A
Battery	1955	36155A	R.H.D., dip left	1954-55	51336A	Foglamp	1955	31201B
" " " "	1954	CX13A	L.H.D., dip right	1955	*51337B	Knob	—	314026
" " " "	1955	MT19E	Head, Export Europe ..			Lighting	1954	*34022B
Control box	1955	*37139A	(not France)	1955	51339A Later	1954-55	34065A
Fuse box	1955	033239	Head, Export France ..	1955	*51590A	Panel	1954-55	31201B
Generator	1955	*22456A	Number plate illumination	1955	53101E	Knob	—	314026
Horn	1954-55	*069399	Side	1954	52139B	Trafficator	1954-55	31379A
Junction box	1954-55	78265A	Stop tail and number plate	1954	*52238A	Trafficators	1954	*053830
LAMPS			" " " "	1955	*53007B	" " " "	1955	54052A
Head, Home			Reflex reflector	1954-55	53178F	Windshield wipers		
R.H.D., dip left ..	1954-55	51336A	Panel light bulb holder ..	1954-55	57033D	Motor	1954-55	*75120A
			Starting motor (serviced by		39007A	Arm	1954-55	*735049
			C.A.V.)	1954-55	1330070	Blade	1954-55	727803

§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A60S310S6321	Venturi	1954-55	BEPK50-50-101
Governor	1954-55	BPMZ80A99	Nozzle holder	1945-55	BKB32S630
Coupling	1954-55	BZKH31-538	Nozzle	1954-55	BDL110S6133
Feed pump	1954-55	BFPK22P68	Filter	1954	BFA5P1
Primer	1954-55	BFPUE2-54Z	" " " "	1955	F2-8
Pre-filter	1954-55	BFJSJ1-501			

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JENSEN 'Tempo 1500' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1958-60	SG9E	LAMPS—continued			Warning lights		
Coil, ignition	1958-60	*45053K	Number plate illumination	1958-60	53101E/J	Flasher (shade and window)	1958-60	*54360085
Control box	1958-60	37182H	Side	1958-60	52391A	Ignition (shade and window)	1958-60	*319388
Distributor	1958	*40499A	Stop tail and reflex	1958-60	53377B	Windshield wipers		
"	1959-60	40499B/D & F	Starting motor	1958-59	25022M	Motor	1958-60	75342D
"	Later	*40499E & H	"	1960	25022N/Q	Link set	1958-59	745965
Flasher unit	1958-60	35010A	SWITCHES			"	1959-60	54712397
Fuse box	1958-60	033239	Heater	1958-60	*31814A	Arm, left hand	1958-59	54710492
Generator	1958-60	22293A	Knob	—	312892	" right hand	1958-59	54710491
Horn	1958-60	70141B	Horn push and dipper	1958-60	31438B	"	Later	54711546
LAMPS			Ignition and lighting	1958-60	*31288A	Blade	1958-60	*737941
Engine compartment	1958-60	53163A	Solenoid, starting motor	1958-60	*76411E			
Flasher, rear	1958-60	*52272D	Solenoid operating	1958-60	*31071A			
Flasher, side	1958-60	53362B	Stop lamp	1958-60	31082H			
Head, Home			Windshield wiper	1958-60	*31819A			
R.H.D., dip left	1958-60	51336E	Knob	—	312872			
Head, Export								
R.H.D., dip left	1958-60	51336E						

JOWETT 'Javelin' 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1948-49	SLG11E	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1950-54	GT9A	Head, Export Europe (not France)	1948-50	*B50792B	Solenoid, starting motor	1948-49	76022B
Control box	1948-51	37065E	ditto	1951	*B50445K	Solenoid operating	1950-54	*76411D
Distributor	1951-54	*37138A/B	ditto	Later	*50963A	"	1952	31272A
Flasher unit	1948-52	40115H	Head, Export France	1951-53	*51339A	"	1953-54	*31294A
Flasher relay (U.S.A.)	1952-54	*35003A	"	1951	*50790E	Stop lamp	1948-54	31281B
Fuse box	1951-54	033239	"	Later	*50962A	Spring	—	*315723
Generator	1948-49	*22431A	Number plate illumination	1950-51	*53186A	Trafficator	1948-54	031046
"	Later	*22250E/F	ditto	1951	53224A	Windshield wiper	1948-51	*31148A
Horn	1951-54	22258D	Side (U.S.A.)	1951-54	53093E	"	1952	*31348A
Low note	1948-54	*69011F	Stop tail	1948-49	53099A	Trafficators	1953-54	*31399A
High note	1948-54	*69012F	"	1950	*53150B	"	1948-50	*54014D
Horn relay	1951-54	*33116B	"	Later	*53204B	Warning light (ignition)	1951-54	*54041A
LAMPS			Mirror	1950-54	*062532	"	1948-51	*31853A
Head, Home			Panel light bulb holder	1948-54	*062532	Windshield wipers	1952-54	*38069A
R.H.D., dip left (L.H.)	1948-50	*50792B	Starting motor	1952-54	39020B	Motor	1948-50	*75055K
" non-dip (R.H.)	1948-50	*50578E	Steering column control	1948-49	*25012A/D	"	1951	*75055L
" dip left (L.H.)	1951	*50445K	ditto	1950-54	25025A/D	"	1952-54	75152A
" non-dip (R.H.)	1951	*50446K	Slip ring (horn push)	1948	*32769A	Wheelbox	1948-54	72590A/K
R.H.D., dip left	1951-52	*50954A	"	1948-54	32764D	Crosshead and rack assy. Cut to 27"	1948-51	736177
"	1952-53	50941A	SWITCHES	1952-54	38252A	Crosshead and rack assy. Outer casing	1952-54	736364
"	1953-54	51336A	Dipper	1948-54	31284A	Motor to wheelbox	1948-51	739844
Head, Export			Heater or fan	1948-51	*31147A	"	1952-54	*739855
R.H.D., dip left	1948-50	*50792B	"	1952	*31347A	Wheelbox to wheelbox	1948-51	739937
"	1951	*50445K	Ignition and lighting	1953-54	*31407A	End tube	1952-54	*739955
"	Later	*50954A	Knob	1948-51	34038B	Grommet, wheelbox	1948-54	740031
"	1952-53	50941A	"	1952-54	31270A	Arm	1948-54	735349
"	1953-54	51336A	"	1952	*31641E	" left hand drive	1948-50	73752A
L.H.D., dip right	1948-50	*A50792B	Panel	1953-54	*316437	" right hand drive	1951-54	*737581
"	1951	*A50445K	"	1948-51	*31149A	Blade	1951-54	*737439
"	Later	*50804D	"	1952	*31349A	"	1948-50	*737529
"	1953-54	*51337A	"	1953	*31400A	"	1951	*738719
			"			"	1952-54	738724

JOWETT 'Javelin' De Luxe 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950	*36098A	LAMPS, Head, Home—			Mirror	1950-54	*062532
"	1951	36135A	continued			Starting motor	1950-54	25025A/D
"	1952-54	36155A	R.H.D., dip left	1951-52	*50954A	Steering column control	1950-54	32876A
Battery	1950-54	GT9A	"	1952-53	50941A	Slip ring (horn push)	1950-52	38252A
Coil, ignition	1950-54	*45020A/B	"	1953-54	51336A	"	1953-54	38258A
Control box	1950-51	37065E	Head, Export			SWITCHES		
Distributor	1951-54	*37138A/B	R.H.D., dip left	1948-50	*50792B	Dipper	1950-54	31284A
Flasher unit	1950-52	40115H	"	1951	*50445K	Foglamp	1950	31201B
Flasher relay (U.S.A.)	1952-54	*35003A	"	Later	*50954A	Knob	—	*316218
Fuse box	1951-54	033239	"	1952-53	50941A	Heater or fan	1950-54	31201B
Generator	1950-51	*22250E/F	L.H.D., dip right	1948-50	*A50792B	Knob	1950-51	*316217
"	Later	22258D	"	1951	*A50445K	"	1952-54	*316244
Horn			"	1951-53	*50804D	Ignition	1952-54	31287A
Low note	1950-54	*69011F	"	1953-54	*51337A	Ignition and lighting	1950-51	*34061A
High note	1950-54	*69012F	Head, Export Europe (not France)	1948-50	*B50792A	Lighting	1952-54	31303A
Horn relay	1950-54	*33116B	ditto	1951	*B50445K	Knob	—	316622
Inspection lamp sockets	1952-54	38604A	ditto	1951-53	*50963A	Panel	1950-54	31201B
LAMPS			ditto	1953-54	51339A	Knob	1950-51	*316220
Boot	1948-50	*53056A	Head, Export France	1951	50790E	"	1952-54	*317501
Boot and bonnet	1953-54	53163A	"	1951-52	*50962A	Reverse lamp	1952-54	*31077A
Fog	1950	*55063B	"	1953-54	*51341A	Solenoid, starting motor	1950-54	*76411D
"	1951	*55077A	Head, Export U.S.A.	1953	*50919B	Solenoid operating	1950-51	31363A
"	1952-54	*55085A	Number plate illumination	1950-51	*53186A	"	1952-54	31281B
Head, Home			Reverse	1952-54	53097E	Stop lamp	1950-54	*315723
R.H.D., dip left (L.H.)	1948-50	*50792B	"	1951	53223A	Spring	1950-54	031046
" non-dip (R.H.)	1948-50	*50578E	Side (U.S.A.)	1951-54	52139B	Trafficator	1950-54	31201B
" dip left (L.H.)	1951	*50445K	"	1951-54	*52162A	Windshield wiper	1950-51	*316219
" non-dip (R.H.)	1951	*50446K	Stop tail	1950	*53150B	Knob	1952-54	*317502
			"	1950-54	*53204B	"	1950	*54014D
			"			Trafficators	1951-54	*54041A

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



JOWETT 'Javelin' De Luxe 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Windshield wipers			Windshield wipers—cont'd			Windshield wipers—cont'd		
Motor	1948-50	*75055K	Outer casing			Arm	1950	*737524
"	1951	*75055L	Motor to wheelbox ..	1948-51	739844	" left hand drive ..	1951-54	*737581
"	1952-54	75152A	"	1952-54	*739855	" right hand drive ..	1951-54	*737529
Wheelbox	1948-54	72590A/K	Wheelbox to wheelbox	1948-51	739937	Blade	1950	*737433
Crosshead and rack assy.			"	1952-54	*739955	"	1951-52	*738719
Cut to 27 1/8"	1948-51	736177	End tube "	1948-54	740031	"	1953-54	738724
Crosshead and rack assy.	1952-54	736364	Grommet, wheelbox ..	1948-54	735349			

JOWETT 'Jupiter' Sports 1951-54

Ammeter (plate fixing) ..	1951-52	36135A	LAMPS—continued			SWITCHES—continued		
(clamp fixing) ..	1951-54	36155A	Head, Export U.S.A. ..	1951	50942A	Trafficator	1951-54	031046
Battery	1951-52	SLG11E	"	1952-54	51067B	Windshield wiper ..	1951-54	31201B
"	1953-54	GT9A	Number plate illumination	1951-54	53093E	Knob	1951-52	*316226
Coil, ignition	1951-54	*45012A/D	Side	1951-54	52139B	" Later	1952-54	*317502
Control box	1951	37065E	Stop tail	1951-52	53178D	Trafficators	1951-54	*54041A
"	1952	*37076E	" Later	1952-54	*53204B			
" Later	1952-54	*37139D	Mirror	1951-54	*062567	Warning lights		
Distributor	1951-52	40115H	Panel light bulb holder ..	1951-54	39020B	Red glass	1951-54	*38013B
"	1953-54	*40317A	Starting motor	1951-54	25025A/D	Green glass	1951-54	*38042A
" (Racing Model)	1953-54	40318A/B	Steering column control ..	1951-52	32764D	Blue glass	1951-54	*38081A
Fuse box	1952-54	033240	ditto Later	1952-54	32877A	Windshield wipers		
Generator	1951-54	*22436A	Slip ring	1951-52	38252A	Motor	1951	*75075K
Horn	1951-54	*69011F	" Later	1952-54	38258A	"	1952	*75088M
Low note	1951-54	*69012E	SWITCHES			" Later	1952-54	75151A
High note	1951-54	*33116B	Dipper	1951-54	31284A	Wheelbox	1951-54	72590A/K
Horn relay	1951-54		Foglamp	1951-54	31201B	Crosshead and rack assy.		
			Knob	1951-52	*316288	Cut to 44 1/8"	1951-54	736307
			" Later	1952-54	*317503	Outer casing		
LAMPS			Heater or fan	1951-54	31201B	Motor to wheelbox ..	1951-54	*739832
Head, Home			Knob	1951-52	*316225	Wheelbox to wheelbox	1951-54	*739967
R.H.D., dip left (L.H.)	1951	50825A	" Later	1952-54	*316244	End tube	1951-54	740031
non-dip (R.H.)	1951	*50826A	Ignition and lighting ..	1951-53	*34067A	Grommet, wheelbox ..	1952-54	734697
R.H.D., dip left ..	1952-54	51065A	" Later	1953-54	31270A	Arm, left hand drive ..	1951-54	*737661
Head, Export			Knob	—	316285	" right hand drive ..	1951-54	*737660
R.H.D., dip left ..	1951	50825A	Panel	1951-54	31201B	Blade	1951-52	*737516
"	1952-54	51065A	Knob	1951-52	*316227	"	1953-54	737681
L.H.D., dip right ..	1951	A50825A	" Later	1952-54	*317501	Overdrive equipment		
"	1952-54	A51065A	Solenoid, starting motor	1951-54	*76411D	(optional)		
Head, Export Europe			Solenoid operating ..	1951-53	*31289A	Relay	1953-54	33094A
(not France)	1951	B50825A	" Later	1953-54	*31071A	Switches		
ditto	1952-54	B51065A	Stop lamp	1951-54	31281B	Gear lever	1953-54	*31077A
Head, Export France	1953-54	*51056A	Spring	—	*315723	Solenoid, gearbox ..	1953-54	*76500A

JOWETT 10 cwt. 'Bradford' Van 1946-54

Ammeter	1946-50	*369001	LAMPS, Head, Home—			SWITCHES—continued		
"	1951-52	*36110A	continued			Panel	1946-52	*314129
Battery	1946-50	SG11E	Non-dip (R.H.)	1946-52	*50570B	"	1953-54	*31400A
"	1951-52	GT7A	ditto (alternative)	1947-52	50646A/B	Solenoid, starting motor	1953-54	*76411D
"	1953-54	GT9A	R.H.D., dip left ..	1953	51344A	Solenoid operating ..	1953-54	*31294A
Coil, ignition	1946-50	*45016A	" Later	1953-54	*51407A	Starting motor	1946-47	*764247
"	1951-54	*45020A/B	Head, Export			Stop lamp	1951-52	*76429A
Control arm	1946	*310254	Vertical dip	1946	*50303A	"	1946-54	31281B
"	1947-48	31143A	"	1947-50	50569B	Spring	1953-54	*315723
"	1949-52	31124B	" (alternative)	1947-50	50645E	Windshield wiper ..	1953-54	*31399A
Control box	1946	*37050A	R.H.D., dip left ..	1953	51344A	Trafficators	1946-50	54002A
"	1947-48	*37033A	" Later	1953-54	*51407A	"	1951-52	*54036A
"	1949-50	37081E	L.H.D., dip right ..	1953	*51345A	"	1953-54	54044D
"	1951-52	37065E	" Later	1953-54	*51409A	Warning lights		
"	1953-54	*37138B	Head, Export Europe			Main beam	1951-52	*38015B
Distributor	1946	409607	(not France)	1953	51346A	"	1953-54	38052B
"	1947-52	40121A/H	ditto Later	1953-54	*51408A	Windshield wipers		
"	1953-54	40347A	Head, Export France ..	1953	51411A	Motor	1946-50	*75047A
Fuse box	1953-54	033239	"	1953	*51414A	"	1951-52	75128A
Generator	1946	*20900A	Side	1946	*52003A	"	1953-54	75179A
"	1947-48	*228365	" Later	1953-54	52139B	"	1953-54	72590A/K
"	1948-49	*224365	Stop tail and number plate	1946	*524752	Wheelbox		
"	1949-50	*22251F	"	1947-52	53060A	Crosshead and rack assy.		
"	1951-52	*22250F	Stop tail	1953-54	53178D	L.H.D. Cut to 25 1/8"	1953-54	736364
"	1952-54	22258D	Tail and number plate ..	1946	*53007B	R.H.D. " " 41 1/8"	1953-54	736307
Horn	1946-50	*069348	Mirror	1946-52	*062500	Outer casing		
"	1951-54	*069399	"	1953-54	*062574	Motor to wheelbox		
Junction box	1946-52	78266A	Panel light bulb holder ..	1951-54	39007A	L.H.D. and Utility ..	1953-54	739868
			Starting motor	1946-49	*255901	R.H.D., except Utility	1953-54	739866
			"	1950	25031D	Wheelbox to wheelbox		
			"	1951-54	25022A/F	Utility only	1953-54	739932
LAMPS			SWITCHES			End tube	1953-54	740031
Head, Home			Ignition	1953-54	31287B	Arm	1946-52	735065
Vertical dip (L.H.) ..	1946	*50141A	Lighting and horn ..	1953-54	*34085A	"	1953-54	*737529
Non-dip (R.H.) ..	1946	*50142A	" ignition ..	1946-52	*34020B	Blade	1946-52	727802
Vertical dip (L.H.) ..	1946-52	50569B				"	1953-54	738724
ditto (alternative)	1947-52	50645A/B						

JOWETT De Luxe Van and 6 Light Utility 1949-52

Ammeter	1949-50	*369001	Control arm	1949-52	31124B	Generator	1951-52	*22250F
"	1951-52	*36110A	Control box	1949-50	37081E	" Later	1952	22258D
Battery	1949-50	SG11E	"	1951-52	37065E	Horn	1949-50	069348
"	1951-52	GT7A	Distributor	1949-52	40121A/H	"	1951-52	069344
Coil, ignition	1949-50	*45016A	Generator	1949-50	*22251F	Junction box	1949-52	78266A
"	1951-52	*45020A/B						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JOWETT De Luxe Van and 6 Light Utility 1949-52—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Panel light bulb holder ..	1949-52	39007A	Warning lights	1949-50	*318504
Head, Home			Starting motor	1949	*255901	" "	1951-52	*38015B
Vertical dip (L.H.) ..	1949-50	50569B	" "	1950	25031D			
Non-dip (R.H.) ..	1949-50	*50570B	" "	1951-52	25022A/F	Windshield wipers		
Vertical dip (L.H.) ..	1951-52	50645E				Motor	1949-50	75073A
Non-dip (R.H.) ..	1951-52	50646E	SWITCHES			" "	1951-52	75129A
Head, Export			Ignition and lighting ..	1949-52	*34020B	Coupling bar	1949-50	727293
Vertical dip	1949-50	50659B	Panel	1949-52	*314129	" "	1951-52	*732907
" "	1951-52	50645E	Starting motor	1949-52	*76429A	Bearing, passenger side	1949-52	731721
Stop tail and number plate	1949-52	*53060A	Stop lamp	1949-52	31281B	Arm, left hand	1949-52	735133
ditto (De Luxe Van)	1949-52	*53029A	Spring	—	*315723	" right hand	1949-52	735132
Mirror	1949-52	*62006A	Trafficators	1949-50	54002A	Blade	1949-52	727707
			" "	1951-52	*54036A			

KARRIER 'Bantam' 1946-60

Ammeter	1946-50	*369263	LAMPS—continued			SWITCHES—continued		
Battery	1946-50	SG11A	Head, Export			Lighting (British		
" (Petrol)	1951-59	GT11A	R.H.D., dip left ..	1951	*50445K	Railways Model) ..	1950	*344544
" (Diesel)	1955-60	BT11A	" " " "	1951	*50954A	Lighting and ignition ..	1946	34054A
Coil, ignition	1946	*45020A	" " " "	1954	50941A	" " " "	1947-50	*34014B
" " " "	1947-56	*45012A/D	" " " "	1954	51336A	Lighting and ignition or		
" " " "	1956-57	*45054D/H	" " " "	1955-56	*50954A	main	1951-60	31194A/D
" " " "	1958	*45053J	" " " "	1957-60	50941A	Knob	1946-50	316285
" " " "	1959-60	*45054K/M	L.H.D., dip right ..	1951	*A50445K	Panel	1951-53	31113A
Control box	1946-47	*37032A	" " " "	1951-53	*50804D	Knob	1951-53	311512
" " " "	1948-52	37065E	" " " "	1955-59	*50804D	Panel (except Tractor) ..	1954-56	31248A
" " " "	1952-54	*37138A/B	" " " "	1960	50973A	Knob	—	316493
" " " "	1955-56	37182A	Head, Export Europe			Panel (except Tractor)		
" " " "	1955-56	*37139E	(not France)	1951	*B50445K	" " " "	1956-60	31113A/D
" " " "	1957-60	37182H	ditto	1951-53	*50963A	Knob	1956	315112
" " " "	1960	37182K & J	ditto	1954	51339A	" " " "	1957-60	*315143
Distributor	1946	*406319	ditto	1955-56	*50963A	Solenoid operating		
" " " "	1947-50	*409624	ditto	1957-59	50967A	(Diesel, serviced by		
" " " "	1951-53	40218A/D	(except France & Sweden)	1960	58340A	C.A.V.)	1956-60	1823410
" " " "	1953	40070A/E	Head, Export France ..	1951-53	*50962A	Starting motor	1946-48	76428A
" " " "	1954-56	*40376A/B	" " " "	1954	*51341A	" " " "	1949-50	76404B
" " " "	1957-59	40491A/F	Head, Export Sweden ..	1960	58585A	" " " " (Petrol)	1951-60	76423A
" " " "	1959-60	40667A/B	Head, Export Canada ..	1960	50811A	Coupling	1951-58	764428
Flasher unit (when fitted)	1960	35010A	Number plate illumination	1955-60	53343A	" " " "	1959-60	764466
Fuse box	1948-52	*385221	Side	1946	52036A	Trafficator	1955-60	31379A
" " " "	1952-56	033240	" " " "	1947-48	*52003A	Windshield wiper	1953-60	31248A/B
" " " "	1956-60	033239	" " " "	1949	52153A	Knob	1953-57	*316366
" " " " (Diesel heater, serviced by C.A.V.) ..	1958-60	1800020	" " " "	1950	52154A	" " " "	1958-60	312954
Generator	1946-48	22455A/B	Stop tail and number plate	1951-60	52139B/F	Trafficators (when fitted)	1955	*053830
" " " "	1948-49	*22446A	ditto	1951-54	*53063B	ditto	1955-56	54050A
" " " "	1950	*22435A/B	Stop tail (except Tractor)	1955-60	53178E/J	Warning light	1946-50	38015B
" " " "	1951-52	*22250E/F	Tail and number plate ..	1949-53	*50070B	Windshield wipers		
" " " " (Petrol)	1952-56	22258D	Magneto (British Railways Model)	1950	44088A/D	Motor	1946-52	*75027A
" " " " (Diesel)	1955-56	*22483A	Reflex reflector (except Tractor)	1955-60	57073B/D	" " " "	1953	*75074J
" " " "	1957-60	22258E/H	Starting motor	1946-50	*255378	" " " "	1953-60	75144A/B
Horn	1946-57	*069213	ditto (Petrol)	1951-60	25521B/D	" " " "	1953-60	72560A/K
Low note	1957-60	69046E/F	ditto (Diesel, serviced by C.A.V.) ..	1955-56	BS512L66	Wheelbox	1953-60	736307
High note (optional) ..	1957-60	69047E/F	ditto (Diesel)	1957	26133A/B	Crosshead and rack assy. Cut to 40 1/2" ..	1953-60	739833
Horn relay (when twins fitted)	1957-60	*33116B	ditto	1958-59	26133D/E	Outer casing	1953-60	739965
Junction box (Tractor Models only)	1948-50	78265A	ditto	1959-60	26133H & K	Motor to wheelbox ..	1953-60	*739965
LAMPS			ditto	1959-60	32937A/B	Wheelbox to wheelbox ..	1953-55	*739979
Head, Home			Brush	1956-57	331397	ditto	1956-60	739932
Non-dip	1946	50129A	" " " "	1958-60	333189	ditto	1953-60	740031
Vertical dip	1946-50	*50285A	SWITCHES			End tube	1956-60	738410
R.H.D., dip left (L.H.) ..	1951	*50445K	Battery master (British Railways Model) ..	1950	*768061	Ferrule, casing retaining	1953	729423
non-dip (R.H.)	1951	*50446K	Dipper	1956-60	31284A/D	Grommet, wheelbox ..	1953-60	734458
R.H.D., dip left	1951	*50954A	Heater, Diesel (serviced by C.A.V.)	1956-60	1823420	Arm	1946-52	*735061
" " " "	1952-53	50941A	Horn push and dipper ..	1946-50	*380148	" left hand	1953-56	*737629
" " " "	1954	51336A	" " " "	1951-56	*31325A	" right hand	1957-60	742275
" " " "	1955-56	*50954A	Ignition (British Railways Model) ..	1950	*314144	" " " "	1953-56	*737628
" " " "	1957-60	50941A				Blade	1946-52	727802
						" " " "	1953-60	727759

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine 1955-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-56	DPA3246020	Nozzle holder—continued ..	1959-60	BKB40S697K
" " " "	1957	DPA3246070	Nozzle	1955-58	BDN45P6188
" " " "	1958	DPA3246071	" " " "	1959-60	BDN45P6263
" " " "	1959-60	DPA3246103	Filter	1955-58	F4-1
Nozzle holder	1955-58	BKB40S697	" " " "	1959-60	F4B-3

KARRIER 'Cob' 1947-48

Ammeter	1947-48	*369263	LAMPS			SWITCHES—continued		
Coil, ignition	1947-48	*45020A	Fog	1947-48	*55027B	Starting motor	1947-48	76428A
Control box	1947	*37032A	Side	1947-48	*52003A	Warning light (ignition) ..	1947-48	*38015B
" " " "	1948	37065E	Starting motor	1947-48	*255378	Windshield wipers		
Distributor	1947-48	*409624	SWITCHES			Motor	1947-48	*75027A
Fuse box	1947-48	*385221	Ignition and lighting ..	1947-48	*34014B	Arm	1947-48	*755096
Generator	1947-48	*22446A	Panel	1947	*31285A	Blade	1947-48	727802
Horn	1947-48	069344						



KARRIER 3 ton CK3 1946-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-50	*369263	LAMPS			Starting motor	1946-47	*270490
"	1951-52	36001D	Head, Home			"	1948	26026A/B
Battery	1946-52	SG11A	R.H.D., dip left (L.H.)	1947-48	*50262A	"	1949-50	*26035A
Coil, ignition	1946-49	*45039A	" non-dip (R.H.)	1947-48	*50263A	"	1951-52	26041A/B
"	1950-52	*45012A/D	" dip left (L.H.)	1949	*50445K			
Control box	1946-47	*37032A	" non-dip (R.H.)	1949	*50446K	SWITCHES		
"	1948-50	37065E	" dip left (L.H.)	1950	*50878A	Horn push and dipper ..	1946-50	*380168
"	1950-52	*37076E	" non-dip (R.H.)	1950	*50880A	Ignition and lighting ..	1946-50	*34014B
"	1952	*37139D	" dip left (L.H.)	1951-52	*50445K	"	1951-52	34055A
Distributor	1946-49	*410700	Head, Export			Panel	1946-52	*31285A
"	1950-52	40135E/H	R.H.D., dip left ..	1947-48	*50262A	Starting motor	1946-49	76428A
Fuse box	1948-52	*385221	L.H.D., dip right ..	1949-52	*50445K	"	1949-50	76404B
"	1952	033240	"	1947-48	*A50262A	"	1951-52	76427B
Generator	1946-49	*22446A	Head, Export Europe			Spring	1946-52	315543
"	1950-52	*22435A/B	(not France)	1947-48	*B50262A	Warning light (ignition) ..	1946-50	*38015B
"	1952	*22456A/B	ditto	1949-52	*B50445K	"	1951-52	38046A
Horn	1946-52	*069213	Head, Export France ..	1951-52	*50962A	Windshield wipers		
Inspection lamp sockets ..	1946-52	39507A	Side	1947-49	*52003A	Motor	1946-52	*75027A
			"	1950	52154A	Arm	1946-52	*735061
			Stop tail and number plate	1951-52	*52079A	Blade	1946-52	727802
			"	1947-48	*53288B			
			"	1949	*53008D			
			"	1950-52	*53063B			

KARRIER 'Gamecock' (Municipal and Industrial) 1953-60

Battery (Petrol)	1953-59	GT11A	LAMPS—continued			Trafficators	1954-55	*053830
" (Diesel)	1960	BT11A	Head, Export France ..	1953-55	*51341A	"	1955-59	54050A
Coil, ignition	1953-55	STXT19E	"	1956-60	*51341B/E	Warning light (direction		
Control box	1953-54	*45012A/D	"	1960	58231A/E	indicator) (when fitted)	1959-60	38191A
"	1955-59	*45054D/M	Number plate illumination	1955-60	53343A	Windshield wipers		
Distributor	1953	*37139D	Side	1953-60	52139A/F	Motor	1953-58	75144A
"	1954	37183A/H	Stop tail and number plate	1953-54	*53063B	"	1959-60	75289B
"	1954	37183K & L	Stop tail	1955-60	53178E/J	"	1960	75398A
"	1954	*40305D	Reflex reflector	1955-60	52073B/D	Wheelbox	1953-58	72560A/K
"	1954	40359A/B	Starting motor	1953-54	26086A	"	1959-60	72660A
"	1954	40359D/F	(Petrol)	1955-60	26094A	Crosshead and rack assy.		
Flasher unit (when fitted)	1957	*35003A	(Diesel, serviced by			Cut to 40"	1953-58	736307
"	1958-60	35010A	C.A.V.)	1955-58	1340010	Crosshead and rack assy.	1959-60	743722
"	1958-60	033239	ditto	1959-60	1320061	Outer casing		
"	1958-60	*37137A	Steering column control ..	1955-60	32937A/B	Motor to wheelbox ..	1953-58	739833
"	1958-60	*22456A/B	Suppressor (G.P.O.) ..	1953-59	78106A	ditto (left hand) ..	1959-60	743708
"	1955-56	*22483A	SWITCHES			ditto (right hand) ..	1959-60	743709
"	1957-59	*22483D	Battery master (G.P.O.)	1953-59	76605A/B	Wheelbox to wheelbox	1953-58	*739979
"	1960	22489B/D	Dipper	1955-60	31284A/D	End tube	1953-58	740031
Horn	1955-56	*069213	Flasher (when fitted) ..	1957-60	31564A/D	"	1959-60	740746
Low note (alternative) ..	1955-56	*69011J	Heater (Diesel)	1959-60	31425A/B	Ferrule, casing retaining	1957-58	738410
"	1956-60	69046A/F	Knob	1953-54	54330528	Grommet, wheelbox ..	1953-58	734458
High note (optional)	1956-60	69047A/F	Horn push and dipper ..	1953-54	*31325A	Arm, left hand	1953-56	*737629
Horn relay (when twins			Lighting and ignition or			"	1957-58	742275
fitted)	1956-60	*33116B	main	1953-60	31194A/E	"	1959-60	741845
junction box	1957-60	78265A	Knob	—	316285	"	1960	54711558
LAMPS			Solenoid, starting motor	1953-60	*76411D/E	"	1953-58	742275
Flasher (optional)	1957-60	52314A	Solenoid operating			"	1959	*741294
Head, Home			(Petrol)	1955-60	31115A/E	"	1953-56	*737628
R.H.D., dip left ..	1953-55	51336A	Knob	—	*317315	"	1957-58	742274
"	1956-60	51336B/J	(Diesel, serviced by			"	1959-60	741844
Head, Export			C.A.V.)	1955-58	1823410	"	1950	54711557
R.H.D., dip left ..	1953-55	51336A	(Diesel)	1959-60	31810A	"	1953-58	742275
"	1956-60	51336B/J	Knob	—	*317315	"	1959	*741295
L.H.D., dip right ..	1953-54	*51337A	Trafficator (when fitted)	1954-60	31379A	Blade	1953-58	727759
"	1955	*51337B	" (G.P.O.)	1953-54	031046	"	1959-60	737897
"	1956-59	*51337D/E	Windshield wiper	1955-59	031296	"	1959	737883
"	1959-60	*51337F/K	"	1955-60	31248A/B	Plug, 8-pin	1953-58	809797
Head, Export Europe			Knob	1960	34266A	Socket, 8-point	1953-58	809798
(not France)	1953-55	51339A	"	1955-56	*316366			
ditto	1956-59	51339B/H	"	1957-60	312954			
ditto	1959-60	58230A/E						

§ FUEL INJECTION EQUIPMENT
(Rootes TS3 Engine 1955-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-58	NL3F80-97	Nozzle—continued	1957-58	BDLL10S6213
Governor	1955	LP9	Feed pump	1955-57	DFP3-13
"	1956-58	LPB25	"	1958	DFP3-26
Coupling	1955-57	FCB3	Venturi	1955-56	BEPKE85-99V
"	1958	FCB5	"	1957-58	BEPKE85-117
Nozzle holder	1955-58	BKBL52S656	Filter	1955	F2-9
Nozzle	1955-56	BDLL10S6134	"	1956-58	F2-13

(Perkins C305 Engine 1959-60)

Fuel pump	1959	DPA3264003	Filter	1959	F4-3
"	1960	DPA3264035	"	1960	F4B-3
Nozzle holder	1959-60	BKB32S630	Thermostart	1959-60	285-2A
Nozzle	1959-60	BDL110S6267			

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

KARRIER-LAGONDA

KARRIER 1¼/1½ ton Passenger Chassis 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-60	STXWT 19E	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Coil, ignition	1957-60	*45054 D/M	Head, Export Europe (not France)	1957-59	51339B/H	Solenoid operating (Diesel, serviced by C.A.V.)	1957-60	1823410
Control box	1957-59	37183H	ditto Later	1959-60	58230A/E	Starting motor (Petrol)	1957-60	76423A
Distributor	1957-59	40491A/B	Head, Export France	1960	58231A/E	Coupling	1957-58	764428
Fuse box	1960	40667A	Number plate illumination	1957-60	53343A	Windshield wiper	1959-60	764466
Generator	1957-59	033239	Side	1957-60	52139F	Knob Later	1960	31248B
Horn	1957-59	*22483D	Stop tail	1957-60	53178F/J	Terminal block	1959-60	312954
Low note Later	1957-60	22489B/D	Reflex reflector	1957-60	57073B	Warning light (ignition)	1957-60	*38065A
High note (optional)	1959-60	*069213	Starting motor (Petrol)	1957-60	25521D	Windshield wipers		
Horn relay (when twins fitted)	1959-60	*33116B	" " (Diesel)	1957	26133B	Motor	1957-60	75144A
LAMPS			" " Later	1958-60	26133D/E	Wheelbox	1957-60	72655A
Head, Home			Steering column control	1957-60	26133H & K	Crosshead and rack assy.	1957-60	736307
R.H.D., dip left	1957-60	51336B/J	Suppressor	1957-60	32937A/B	Outer casing		
Head, Export			SWITCHES			Motor to wheelbox	1957-60	739844
R.H.D., dip left	1957-60	51336B/J	Dipper	1957-60	31284A/D	Wheelbox to wheelbox	1957-60	739972
L.H.D., dip right	1957-59	*51337D/E	Heater (Diesel, serviced by C.A.V.)	1957-60	1823420	End tube	1957-60	740031
" " " " Later	1959-60	*51337F/K	Ignition and lighting or main	1957-60	*31288A/D	Ferrule, casing retaining	1957-60	73802A
			Knob	—	316285	Arm, left hand	1957-60	737496
			Panel	1957-60	31248B	" right hand	1957-60	737495
			Knob	1957	*316365	Blade	1957-60	727803
			" " " " Later	1957-60	313655			

§ FUEL INJECTION EQUIPMENT

(Rootes TS3 Engine 1957-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1957-58	NL3F80-97	Nozzle	1957-58	BDLL10S6213
Governor	1957-58	LPB25	Feed pump	1957	DFP3-13
Coupling	1957	FCB-3	" " " "	1958	DFP3-26
" " " "	1958	FCB-5	Venturi	1957-58	BFPKE85-117
Nozzle holder	1957-58	BKBL52S656	Filter	1957-58	F2-13

(Perkins C305 Engine 1959-60)

Fuel pump	1959	DPA3264003	Filter	1959	F4-3
" " " "	1960	DPA3264035	" " " "	1960	F4B-3
Nozzle holder	1959-60	BKB32S630	Thermostart	1959-60	285-2A
Nozzle	1959-60	BDL110S6267			

LAGONDA 2½ litre 1949-52

Ammeter	1951-52	36144A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1949-52	SG11E	Head, Export Europe (not France)	1949-50	*B50445K	Solenoid, starting motor	1949	76022B
Coil, ignition	1949-52	*45012A/D	ditto Later	1951-52	*50963A	ditto	1949-52	*76411D
Control box	1949-52	37105A	Head, Export France	1951-52	*50962A	Solenoid operating	1949-52	*31071A
" " " " Later	1952	*37139D	Number plate illumination	1949-52	53093E	Stop lamp	1949-52	31281B
Distributor	1949-50	40125A/D	Reverse tail	1949-52	52120D	Trafficator	1949-52	031046
" " " "	1951-52	40125E/F	Side	1949-52	52047A	Windshield wiper	1949-52	*31322A
" " " " Later	1952	40264A/B	Stop tail	1949	*53082B	Terminal block	1951-52	37082A
Fuse box	1949-52	*37107A	" " " "	1950-52	53194B	" " " " (U.S.A.)	1951-52	37101A
Generator	1949-52	23000A/J	Petrol reserve valve	1949-52	78006A	Trafficators	1949-52	*54039A
Horn	1952	*22462A/E	Starting motor	1949-50	*270244	Warning lights		
Low note	1949-52	*69021A	" " " " Later	1950-52	26043A	Choke	1949-52	*38019B
High note	1949-52	*69022A	Steering column control	1949-52	32756A	Ignition	1949-52	*38013B
LAMPS			SWITCHES			Petrol reserve	1949-52	*38042A
Fog	1949-52	*55055B	Battery Master	1949-52	*76604A	Windshield wipers		
Head, Home			Choke warning light	1949-52	*31323A	Motor	1949-50	*75062J
R.H.D., dip left (L.H.)	1949-50	*50445K	Dipper	1949-52	31284A	" " " " Later	1951-52	*75062K
" non-dip (R.H.)	1949-50	*50446K	Foglamp	1949-52	*31320A	Wheelbox	1952	75161A
" dip left	1951-52	*50954A	Ignition and lighting	1949-52	*34018A	Crosshead and rack assy.	1949-52	*72548A/K
Head, Export			Interior light	1949-52	*31276A	Cut to 55 1/8"	1949-52	738223
R.H.D., dip left	1949-50	*50445K	Panel	1949-52	*31321A	Motor to wheelbox	1949-52	739858
" " " "	1951-52	*50954A	Petrol gauge	1949-52	*31321A	Wheelbox to wheelbox	1949-52	*739956
L.H.D., dip right	1949-50	*A50445K	Petrol reserve	1949-52	31295A	End tube	1949-52	740031
" " " "	1951-52	*50804D	Reverse lamp	1949-52	*31319A	Arm	1949-52	*736418
					*31077A	Blade	1949-52	736414

LAGONDA 3 litre Saloon and Coupé 1954-58

Ammeter	1954-58	36144A	Horn			LAMPS— <i>continued</i>		
Battery	1954-58	SG11E	Low note	1954-57	*69011F	Head, Export U.S.A.	1956-57	51067B
(Export)	1954-58	STGW11E	High note	1958	69046F	Head, Export Mexico	1956-58	51482E
Coil, ignition	1954-58	*45012D	" " " "	1954-57	*69012F	Number plate illumination		
Control box	1954-55	*37139D	Horn relay	1958	69047F	and reverse	1954-58	53097E
" " " " Later	1955-58	37183A/H	Inspection lamp sockets	1954-58	33135B	Side (2-door)	1954-55	52139B
Distributor	1954-58	40125F	LAMPS			" (4-door)	1955	*52162B
Flasher relay	1955-58	33117A/D	Fog	1954-58	*55055B/D	Side and flasher	1956-58	52240D
" (headlamp)	1958	*33116B	Head, Home			Stop tail	1954-55	53174E
Flasher unit	1958	35010A	R.H.D., dip left	1954-55	51065A	Stop tail and flasher Later	1955-58	53330A/D
Fuse box	1954-55	*37130A	" " " "	1956-58	51560A	Petrol reserve valve	1954-57	78006A
" " " " Later	1955-58	*37137A	Head, Export			" " " "	1958	78034A
" " " " (horn)	1954-58	*37107A	R.H.D., dip left	1956-58	51560A	Starting motor	1954-58	26043A
Generator	1954-58	*22462A/E	Head, Export France	1956-58	51561A	Steering column control	1954-58	32756A
						Slip ring	1954-58	348048
						Suppressor	1954-58	78105A

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued



LAGONDA 3 litre Saloon and Coupé 1954-58—*continued*

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Battery master	1954	*76604A	Solenoid, starting motor	1954-58	*76411D/E	Motor	1954-58	*75236A
"	1955-58	76605A	Solenoid operating	1954-58	*31071A	Wheelbox	1954-58	72639D
Dipper	1954-55	31284A	Stop lamp	1954-58	31281B	Crosshead and rack assy.		
Foglamp	1954-58	*31320A/B	Trafficator	1954	031046	Cut to 49 1/2"	1954-58	741264
Heater	1954-58	*31328A	Under-bonnet light	1955-57	*31327A	Outer casing		
Ignition and lighting	1954-58	*34018A/B	"	1958	*31532A	Motor to wheelbox	1954-58	740867
Interior light	1954	*31276A	Windshield wiper	1954-58	*31302A	Wheelbox to wheelbox	1954-58	740782
"	1958	*31327A	Knob	—	316646	End tube	1954-58	740746
Map light	1955-58	*31536A	Terminal block	1954-58	37101A/B	Ferrule, casing retaining	1954-58	740715
Panel	1954-55	*31321A	Trafficators	1954-55	54044D	Arm	1954	*741300
"	Later	1955				"	1955	745075
Knob	—	768913	Warning lights			"	1955-57	*741294
Petrol and oil gauge	1954-58	31295B	Ignition	1954-58	*38013B	"	1958	745080
Petrol reserve	1954-58	*31319A	Petrol	1954-58	*38042A	Blade	1954-55	738734
Reverse lamp	1954-58	*31077D/E				"	1955-58	*738735

LAMBOURNE, C. F. 'Lamb-Kar' 1952-54

Battery	1952-54	GU11E	LAMPS			SWITCHES		
Fuse box	1952-54	*385211	Side	1952-54	52139B	Ignition	1952-54	31201B
Horn	1952-54	*069239	Tail and number plate	1952-54	*53140B	Knob	—	314026
Horn push	1952-54	31269A	Panel light bulb holder	1952-54	39007A	Windshield wipers		
						Motor	1952-54	*75121A
						Arm	1952-54	*735045
						Blade	1952-54	727802

LANCHESTER 10 h.p. LD10 1946-51

Battery	1946-51	SG9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1946-51	*45012A/D	Head, Export	1948-51	50654A	Panel	Later	1951
Control box	1946-50	*37031A	Vertical dip	1946-47	*53045B	Knob	—	31113A
"	1951	37057E	Number plate illumination	1948	*53061A	Starting motor	1946-51	76428A
Distributor	1946-47	*409929	"	1951	53093E	Stop lamp	1946-51	31281B
"	1948-51	40112A	Side	1946-47	52057A	Spring	—	315543
Generator	1946-51	22449B	"	1948	*52078A	Trafficators	1946-50	*54014D
"	Later	22449D	"	1951	52057A	"	1951	*54041A
Horn			Stop tail	1951	53173B	Windshield wipers		
Low note	1946-50	*69021A	Mirror	1946-51	*62007A	Motor	1946-51	†75066A
"	1951	*69011F	Starting motor	1946-51	*25000A/D	Clutch housing	1946-51	737085
High note	1946-50	*69022A	Steering column control	1946-51	32711A/F	Bracket, with shaft and		
"	1951	*69012F				coupling	1946-50	735395
Inspection lamp sockets	1946-51	301187	SWITCHES			Shaft, short	1946-50	737243
LAMPS			Battery master	1951	76605B	Coupling	1946-50	729036/S
Fog	1951	*55029E	Dipper	1946-51	31284A	Grommet, housing	1946-50	734181
Head, Home	1946	*50098A	Heater or fan	1951	*78221A	Arm	1946-51	*735050
"	Later	*50211A	Knob	—	768378	Blade	1946-51	727707
"	1948-51	*50623A	Ignition and lighting	1946-51	*344890			
			Panel	1946-50	*359350			
			Knob	1951	*78235A			
				—	768378			

LANCHESTER 14 h.p. 1952-53

Battery	1952-53	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1952-53	*45012A/D	Head, Export Europe	1952-53	*50963A	Solenoid operating	1952-53	31115A
Control box	1952-53	*37138A/B	(not France)	1953	51339A	Knob	—	*317335
Distributor	1952-53	40294A/B	ditto	Later	*50962A	Stop lamp	1952-53	31281B
"	Later	40337A/D	Head, Export France	1952-53	*50962A	Spring	—	315543
Flasher unit	1953	*35003A	"	Later	51342A	Windshield wiper	1952-53	31113A
Fuse box	1952-53	033239	Number plate and reverse	1952-53	53161D	Knob	—	*316491
Generator	1952-53	22258D	Side	1952-53	53210D	Terminal block	1952-53	37101A
Horn			Side and flasher (U.S.A.)	1952-53	*52162A	Trafficators	1952	*54041A
Low note	1952-53	*69011F	Stop tail	1952-53	53199B	Windshield wipers		
High note	1952-53	*69012F	Stop tail and flasher			Motor	1952-53	75152A
Inspection lamp sockets	1952-53	38604A	(U.S.A.)	1952-53	53153E	Wheelbox	1952-53	*72548A/K
Junction box	1952-53	78266A	Starting motor	1952-53	25521B/D	Crosshead and rack assy.		
"	Later	78264A	Steering column control	1952-53	32866A/H	Cut to 45 1/2"	1952-53	736307
LAMPS			SWITCHES			Outer casing		
Head, Home	1952	*50623A	Dipper	1952-53	31284A	Motor to wheelbox	1952-53	*739907
Non-dip	1953	*50954A	Heater or fan	1952-53	78250A	Wheelbox to wheelbox	1952-53	739937
Dip left	1953	*51336A	Knob	—	*768663	End tube	1952-53	740031
"	Later		Ignition and lighting	1952-53	31194A	Grommet, wheelbox	1952-53	734652
Head, Export			Knob	—	316287	Arm, left hand drive	1952-53	*737603
Vertical dip	1952-53	50654A	Panel	1952-53	31113A	"	1952-53	*737602
L.H.D., dip right	1952-53	*50804D	Knob	—	*316492	Blade	1952-53	*738719
"	Later	1953	Reverse lamp	1952-53	31281B	"	1953	738724
"	Later	1953	Solenoid, starting motor	1952-53	*76411D	"	Later	

LANCHESTER 'Sprite' 1955-56

Ammeter	1955-56	36224A	Flasher unit (U.S.A.)	1955-56	*35003A	Horn		
Battery	1955-56	GT7A	Flasher relay (U.S.A.)	1955-56	33117D	Low note	1955-56	69046B/E
Coil, ignition	1955-56	*45054H	Fuse box	1955-56	033239	High note	1955-56	69047B/E
Control box	1955-56	37182D/F	Generator	1955-56	22258D	Inspection lamp sockets	1956	38604A
Distributor	1955-56	*40507A/D	"	Later	22258E	Junction box	1955	78266A
"	Later	40547A/D						

* See Supersession Chart

† No longer available—refer to Wiper Conversion Set Section

L.H.D. . . . Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



LANCHESTER 'Sprite' 1955-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Starting motor	1955-56	25058D	SWITCHES—continued		
Driving	1955	55132A	Steering column control ..	1955-56	32969B	Windshield wiper ..	1955	*31557A
Fog	1955	55128A				"	1956	*31498A
Head, Home			SWITCHES			Knob	1955-56	316371
R.H.D., dip left ..	1955	51336A	Blower	1955-56	*31557A	Trafficators	1955-56	54044E
"	1956	51336B/J	Knob		312897	Warning lights		
Head, Export			Dipper	1955-56	31284A	Gear selection	1955-56	*38153A
R.H.D., dip left ..	1955	51336A	Ignition and lighting ..	1955-56	31194D	Oil pressure	1955-56	38144A
"	1956	51336B/J	Knob	1955	316435	Trafficator	1955-56	38143A
L.H.D., dip right ..	1955	*51337B	Panel	1955-56	78299B	Windshield wipers		
"	1956	*51337D/E	Knob		313600	Motor	1955-56	*75200A
Head, Export Europe			Reverse lamp	1955-56	31281B	Wheelbox	1955-56	72660A
(not France)	1955	51339A	Switch circuit breaker			Crosshead and rack assy.	1955-56	*743231
ditto	1956	51339B/H	(Borg Warner			Outer casing		
Head, Export France			transmission)	1956	*31077E	Motor to wheelbox ..	1955-56	743149
"	1955	*51341A	Solenoid, starting motor	1955-56	*76411E	Wheelbox to wheelbox	1955-56	744150
"	1956	*51341B/E	Solenoid operating ..	1955-56	31115E	End tube	1955-56	740746
Number plate illumination			Knob		*317379	Arm, left hand drive ..	1955-56	745072
and reverse	1955-56	53161D	Stop lamp	1955-56	31082E	" right hand drive ..	1955-56	745071
Side	1955-56	53210D				Blade	1955-56	738724
Side and flasher (U.S.A.)	1955-56	*52162E						
Stop tail and flasher	1955-56	53410B						

LANCIA 'Appia' and 'Flamina' Coupés 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Windshield wipers			Windshield wipers—cont'd		
Stop tail and flasher			('Appia')			Outer casing		
('Appia', U.S.A.) ..	1959-60	53541A	Motor	1959-60	75213A	Motor to wheelbox ..	1959-60	744327
('Flamina')	1959-60	53639A	Wheelbox	1959-60	72699B	Wheelbox to wheelbox	1959-60	744217
(" U.S.A.) ..	1959-60	53710A	Crosshead and rack assy.	1959-60	*743212	End tube	1959-60	740746
						Arm	1959-60	743527
						Blade	1959-60	737897

LARMAR ENGINEERING Invalid Carriage 1948-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-50	*369076	LAMPS			SWITCHES		
Battery	1952-54	SG9E	Head	1948-54	50129A	Ignition and lighting ..	1948-49	34055A
Coil, ignition	1948-50	*45036A	Side	1948-54	*A52066A	Solenoid, starting motor	1952-54	76022B
Distributor	1948-50	40079D	Tail and number plate ..	1948-54	*A53056A	Solenoid operating ..	1952-54	*31071A
Horn	1948-54	069343	Mirror	1949-54	*62003A	Windshield wipers		
Horn push	1948-54	76205A	Regulator	1948-49	*33018A	Motor	1948-54	*75127A
			Starting motor	1952-54	25032A	Arm	1948-54	*735031
						Blade	1948-54	727801

LAYTON SPORTS CARS 'Iomar' (T.V.R.) 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1959-60	*36117B	LAMPS—continued			SWITCHES—continued		
Battery	1959-60	BT7A	Flasher, rear (U.S.A.) ..	1959-60	53600A/E	Lighting	1959-60	*31251A
Bulb holder, warning light			Head, Home	1959-60	51336B/J	Knob		316154
Bulb			Head, Export U.S.A. ..	1959	58493A	Panel light	1959-60	31201D
Coil, ignition	1959-60	*45054J/M	"	1960	58618A	Knob		314026
Control box			Number plate illumination	1959-60	53093B	Solenoid, starting motor	1959-60	*76411E
(Climax Engine) ..	1959-60	37298A/B	Panel	1959-60	52405B	ditto Later	1960	*76445A
(Ford Engine)	1959-60	37182H	Side	1959-60	*52182D	Stop lamp	1959-60	31082E
ditto Later	1960	37182J & K	Stop tail and reflex ..	1959-60	53377B	Windshield wiper ..	1959-60	31201D
Distributor			Starting motor			Knob		314026
(Climax Engine) ..	1959-60	40565B	(Climax Engine) ..	1959-60	25063E/F	Warning lights		
(Ford Engine)	1959-60	40402J	(Ford Engine)	1959	25022M	Flasher	1959-60	38192A
Flasher unit	1959-60	35011A	"	1960	25022N/Q	Main beam	1959-60	38190A
Fuse box	1959-60	37110A	Steering column control ..	1959-60	33553A	Windshield wipers		
Generator			Stator tube		54300350	Motor	1959-60	75296E
(Climax Engine) ..	1959-60	22290A/E	SWITCHES			Wheelbox	1959-60	72694A
(Ford Engine)	1959-60	22258E/H	Dipper	1959-60	31780D	Crosshead and rack assy.	1959-60	*743214
Horn			" (U.S.A.) ..	1959-60	31800A	Outer casing		
Low note	1959-60	69046F	Fan	1959-60	31201D	Motor to wheelbox ..	1959-60	54711025A
High note	1959-60	69047F	Knob		314026	Wheelbox to wheelbox	1959-60	54711026A
Horn relay	1959-60	33188A	Flasher	1959-60	31476A	End tube	1959-60	740746
LAMPS			Ignition and starting ..	1959-60	31912A	Arm	1959-60	745650
Flasher, front and rear	1959-60	52337A				Blade	1959-60	737897
Flasher, front (U.S.A.)	1959-60	52345A						

LEA FRANCIS 14 h.p. 1946-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-54	36052B	Fuse box	1949-54	*37107A	LAMPS—continued		
Battery	1946-50	SG11A	Generator	1946-49	*22447A	Fog	1951	*55055B
"	1951-54	GT11A	"	1950-53	*22435A/B	"	1952-54	*55094A
Coil, ignition	1946-48	*45020A	" Later	1953-54	*22456A/B	Head, Home		
"	1949-54	*45012A/D	Horn			R.H.D., dip left (L.H.)	1946-50	*50325A/B
Control arm (6 light			Low note	1946-49	*69002B	" non-dip (R.H.)	1946-50	*50326A/B
Saloon)	1949	31143A	" Later	1949-54	*69011F	" dip left (L.H.)		
Control box	1946-48	*37032A	High note	1946-49	*69003B	" Mk. V and VI)	1950	*50445K
"	1949	37065E	" Later	1949-54	*69012F	" non-dip (R.H.,		
"	1950-54	*37076E	LAMPS			Mk. V and VI)	1950	*50446K
Distributor	1946-48	*405570	Boot (Saloon)	1951-54	53163A	" dip left ..	1951	*50954A
"	1949-53	*40148A/F	Fog	1946-50	*55010A	"	1952	50941A
" Later	1953-54	40245B/D				"	1953-54	51336A

* See Supersession Chart

L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



LEA FRANCIS 14 h.p. 1946-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Starting motor	1946-48	*255378	Windshield wipers		
Head, Export			ditto	1949	*255721	Motor (4 Light Saloon and Utility) ..	1946-50	†75066A
Vertical dip	1950	50349A/B	ditto (6 Light Saloon)	1949	*255378	" (6 Light Saloon)	1949	*75068K
R.H.D., dip left (Mk. V and VI)	1950	*50445K	ditto	1950-54	25521B/D	"	1950	*75063K
R.H.D., dip left	1951	*50954A	Steering column control ..	1946-48	322890	"	1951-52	*75063L
"	1952	50941A	ditto (4 Light Saloon and Utility)	1949-50	32738A	"	1953-54	75158A
"	1953-54	51336A	ditto (6 Light Saloon)	1950	32738A	Clutch housing	1946-50	735691
L.H.D., dip right	1950	*A50445K	ditto	1951-54	32845F	Bracket, with shaft and coupling	1946-50	735395
"	1951-52	*50804D	SWITCHES			Shaft, short	1946-50	737243
"	1953-54	*51337A	Battery master	1946-54	76605B	Coupling	1946-50	729036/S
Head, Export Europe (not France)	1950	*B50445K	Foglamp	1946-54	31201B	Link	1946-50	737274
ditto	1951-52	*50963A	Knob	—	314403	Wheelbox	1949	72560A/K
ditto	1953-54	51339A	Heater or fan	1950-53	*78211A	"	1950-54	*72548A/K
Number plate illumination (Saloon Mk. V and VI)	1946-50	*53064A	Knob	—	768473	Crosshead and rack assy.		
Number plate illumination (Estate Car)	1951-54	53097E	Ignition and lighting ..	1946-54	*34026D	Cut to 49 1/8"	1949	738499
Roof	1946-52	*56017B	Panel	1946-48	314026	" " " "	1950	736307
Side	1946-48	*52042A	Knob	—	31024A	" " " "	1951-54	738499
" Later	1948	52070A	Reverse lamp	1949-54	*31068A	Outer casing		
"	1949-50	*52092A	Knob	—	*314665	Motor to wheelbox ..	1949	*739832
"	1951-54	52160A	Reverse lamp (6 Light Saloon)	1949-50	*31077A	" " " "	1950	739868
" (Mk. V and VI)	1950	52151B	Reverse lamp	1951-54	*31077A	" " " "	1951-52	*739855
" (Mk. V and VI, U.S.A.)	1950-54	*52130A	Solenoid, starting motor	1946-49	*760080	Wheelbox to wheelbox	1949	*739971
Stop tail	1948	*53091A	Solenoid operating	1950-54	*76411D	End tube " "	1950-54	*739960
Stop tail and flasher (Mk. V and VI, U.S.A.)	1950	53183B	" " " "	1946-48	*31071A	Grommet, housing ..	1946-50	733874
Stop tail and reverse	1950-52	53203B	" " " "	1949-53	*317063	" " " "	1946-50	729378
" " " " Later	1952-53	53198B	Stop lamp	1946-54	31281B	" " " "	1949	734558
Mirror	1946-48	*580785	Spring	—	315543	" " " "	1950	735824
"	1949	*62030A	Windshield wiper	1949-54	31201B	" " " "	1951-54	733874
"	1950-54	*062574	Knob	—	*314691	Arm (4 Light Saloon and Utility)	1946-50	*735050
Panel light bulb holder	1950-54	39007A	Trafficators	1946-49	*54018D	" (6 Light Saloon) ..	1949	*736418
Relay, side lamp ..	1949-54	33052A	" " " "	1950-54	*54039A	Blade (4 Light Saloon and Utility) ..	1946-50	727707
			Warning lights			" (6 Light Saloon) ..	1949	736428
			Ignition	1946-48	*318505	" " " "	1951-52	736428
			" " " "	1949-54	*38013B	" " " "	1953-54	736412
			Side lamp	1949-54	*38042A			

LEA FRANCIS 18 h.p. 4 Light Saloon 1951-54

Ammeter	1951-54	36052B	LAMPS—continued			SWITCHES—continued		
Battery	1951-54	GT11A	Head, Export Europe (not France)	1951-52	*50963A	Solenoid, starting motor	1951-54	*76411D
Coil, ignition	1951-54	*45012A/D	ditto	1953-54	51339A	Solenoid operating ..	1951-52	*317063
Control box	1951-54	*37076E	Number plate illumination	1951	*53111A	Stop lamp	1951-54	31281B
Distributor	1951-52	40206D/E	Roof	1952-54	53097E	Spring	—	315543
" " " " Later	1952-54	40239A/B	Side	1951	*56017B	Windshield wiper ..	1951-54	31201B
Flasher unit	1952-54	*35003A	" (U.S.A.)	1952-54	56047A	Knob	—	*314691
Fuse box	1951-54	*37107A	Stop tail	1951	52160A	Trafficators	1951	*54018D
Generator	1951-52	*22435A/B	Stop tail and flasher (U.S.A.)	1952-54	*52130A	" " " "	1952-54	*54039A
" " " " Later	1952-53	*22456A/B	Stop tail and reverse	1953-54	53153E	Warning lights		
Horn			Mirror	1951-54	*062574	Ignition	1951-54	*38013B
Low note	1951-54	*69011F	Panel light bulb holder	1951-54	39007A	Side lamp	1951-54	*38042A
High note	1951-54	*69012F	Relay, side lamp	1951-54	33052A	Windshield wipers		
LAMPS			Starting motor	1951-52	26045A	Motor	1951-52	*75063L
Boot	1951-54	53163A	" " " " Later	1952-54	26041A/B	" " " "	1953-54	75158A
Fog	1951-54	*55094A	Steering column control ..	1951-54	32845F	Wheelbox	1951-54	*72548A/K
Head, Home			SWITCHES			Crosshead and rack assy.		
R.H.D., dip left ..	1951-52	*50954A	Battery master	1951-54	76605B	Cut to 49 1/8"	1951-54	738499
" " " " Later	1952	50941A	Foglamp	1951-54	31201B	Outer casing		
" " " "	1953-54	51336A	Knob	—	314403	Motor to wheelbox ..	1951-52	*739855
Head, Export			Heater or fan	1951-53	*78211A	" " " "	1951-54	*739907
R.H.D., dip left ..	1951-52	*50954A	Knob	—	768473	Wheelbox to wheelbox	1951-54	*739960
" " " " Later	1952	50941A	Ignition and lighting ..	1951-54	*34026D	End tube	1951-54	740031
" " " "	1953-54	51336A	Panel	1951-54	*31024A	Arm	1951-54	*736418
L.H.D., dip right ..	1951-52	*50804D	Reverse lamp	1951-54	*31077A	Blade	1951-52	736428
" " " "	1953-54	*51337A				" " " "	1953-54	736412

LEA FRANCIS 18 h.p. 6 Light Saloon 1950-53

Ammeter	1950-53	36052B	LAMPS—continued			LAMPS—continued		
Battery	1950-53	GT11A	Fog	1952-53	*55094A	Number plate illumination	1950-53	53100A
Coil, ignition	1950-53	*45012A/D	Head, Home			Roof	1951	*56017A
Control box	1950-53	*37076E	R.H.D., dip left (L.H.)	1950	*50445K	" " " "	1952-53	56047A
Distributor	1950-52	40206D/E	" " " " non-dip (R.H.)	1950	*50446K	Side	1950-53	52151B
" " " " Later	1952-53	40239A/B	" " " " dip left ..	1951-53	*50954A	" (U.S.A.)	1950-53	*52130A
Flasher unit	1952-53	*35003A	" " " " " " " " Later	1953	51336A	Stop tail (U.S.A.) ..	1950	*53145B
Fuse box	1950-53	*37107A	Head, Export			Stop tail and flasher (U.S.A.)		
Generator	1950-52	*22435A/B	R.H.D., dip left ..	1950	*50445K	" " " "	1953	53153E
" " " " Later	1952-53	*22456A/B	" " " " " " " " Later	1951-53	*50954A	Stop tail and reverse	1950	*53143B
Horn			" " " "	1953	51336A	" " " " " " " " Later	1950	53203B
Low note	1950-53	*69011F	L.H.D., dip right ..	1950	*A50445K	" " " " " " " " ..	1951-53	53198B
High note	1950-53	*69012F	" " " " " " " " Later	1951-53	*50804D	" " " " " " " " ..	1950-53	*062574
LAMPS			" " " " " " " " ..	1953	*51337A	Panel light bulb holder	1950-53	39007A
Bonnet	1952-53	53163A	Head, Export Europe (not France)	1950	*B50445K	Relay, side lamp ..	1950-53	33052A
Fog	1950	*55063B	ditto	1950	*50963A	Starting motor	1950-52	26045A
" " " "	1951	*55055B	ditto Later	1951-52	51339A	" " " " " " " " Later	1952-53	26041A/B
						Steering column control ..	1950	32738A
						" " " " " " " " ..	1951-53	32845F

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



LEA FRANCIS 18 h.p. 6 Light Saloon 1950-53—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Battery master	1950-53	76605B	Windshield wiper ..	1950-53	31201B	Crosshead and rack assy.		
Foglamp	1950-53	31201B	Knob	—	*314691	Cut to 44 1/2"	1950	736307
Knob	—	314403	Trafficators	1950-51	*54018D	" " 49 1/2"	1951-53	738499
Heater or fan	1950-52	*78211A	"	1952-53	*54039A	Outer casing		
Knob	—	768473	Warning lights			Motor to wheelbox ..	1950	739868
Ignition and lighting ..	1950-53	*34026D	Ignition	1950-53	*38013B	" "	1951-52	*739855
Panel	1950-53	*31024A	Side lamp	1950-53	*38042A	" "	1953	*739907
Reverse lamp	1950-53	*31077A	Windshield wipers			Wheelbox to wheelbox	1950-53	*739960
Solenoid, starting motor	1950-53	*76411D	Motor	1950	*75063K	End tube	1950-53	740031
Solenoid operating ..	1950-52	*317063	"	1951-52	*75063L	Grommet, wheelbox ..	1950	735824
"	1953	*31318A	"	1953	75158A	"	1951-53	733874
Stop lamp	1950-53	31281B	Wheelbox	1950-53	*72548A/K	Arm	1950-53	*736418
Spring	—	315543				Blade	1950-52	736428
						"	1953	736412

LEA FRANCIS 1 1/2 litre Sports 1949: 2 1/2 litre Sports 1950-54

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
AMMETER			LAMPS—continued			SWITCHES—continued		
Ammeter	1949-54	36052B	Head, Export Europe	1952	*50963A	Stop lamp	1949-54	31281B
Battery	1949	SG11A	(not France)	1952	*51339A	Spring	—	315543
Coil, ignition	1949-54	*45012A/D	ditto	1953-54	*56021A	Windshield wiper ..	1950-54	31201B
Control box	1949	37065E	Map reading	1949	*53097E	Knob	—	*314691
Distributor	1950-54	*37076E	Number plate illumination	1949-54	*56017B	Trafficators	1949-50	*54018D
"	1949	*40148A/F	Roof	1949-50	*56017B	"	1951-54	*54039A
"	1950-52	40206D/E	Side	1950-54	56047A	Warning lights		
" Later	1952-54	40239A/B	(U.S.A.)	1950-54	*52151B	Ignition	1949-54	*38013B
Flasher unit	1952-54	*35003A	Stop tail and number plate	1953-54	*53031D	Side lamp	1949-54	*38042A
Fuse box	1949-50	*37107A	Stop tail and reverse ..	1950	*53143B	Windshield wipers		
Generator	1949	*22447A	Stop tail	1951-54	53199B	Motor	1949	75051D
"	1950-52	*22435A/B	Mirror	1950-54	*062574	"	1950	*75063K
"	1953-54	*22456A/B	Panel light bulb holder ..	1949-54	39007A	"	1951-52	*75063L
Horn			Relay, side lamp	1949-54	33052A	"	1953-54	75158A
Low note	1949	*69002B	Starting motor	1949	*255721	Coupling bar	1949	732191
"	1950-54	*69011F	"	1950-52	26045A	Bearing, passenger side	1949	731721
High note	1949	*69003B	" Later	1952-54	26041A/B	Wheelbox	1950-54	*72548A/K
"	1950-54	*69012F	Steering column control ..	1949-50	32738A	Crosshead and rack assy.		
			"	1951-54	32845F	Cut to 44 1/2"	1950	736307
						" " 49 1/2"	1951-54	738499
LAMPS			SWITCHES			Outer casing		
Fog	1952-54	*55094A	Battery master	1949-54	76605B	Motor to wheelbox ..	1950	739868
Head, Home			Foglamp	1949-54	31201B	" "	1951-52	*739855
R.H.D., dip left (L.H.)	1949-50	*50793B	Knob	—	314403	" "	1953-54	*739907
" non-dip (R.H.)	1949-50	*50362F	Heater or fan	1950-53	*78211A	Wheelbox to wheelbox	1950-54	*739960
" dip left	1951-52	*50954A	Knob	—	768473	End tube	1950-54	740031
" " " Later	1952-53	50941A	Ignition and lighting ..	1949-54	*34026D	Grommet, wheelbox ..	1950	735824
" " " "	1953-54	51336A	Panel	1949-54	*31024A	"	1951-54	733874
Head, Export			Reverse lamp	1949-54	*31077A	Arm, left hand	1949	*732927
R.H.D., dip left ..	1952	*50954A	Solenoid, starting motor	1949	*760080	" right hand	1949	*732926
" " " Later	1952-53	50941A	"	1950-54	*76411D	"	1950-54	*736418
" " " "	1953-54	51336A	Solenoid operating ..	1949-52	*317063	Blade	1949	727784
L.H.D., dip right ..	1952-53	*50804D	"	1953-54	*317063	"	1950-52	736428
" " " "	1953-54	*51337A				"	1953-54	736412

LEWIS, H. T. Pedestrian Controlled Battery Vehicle 1951-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Junction box	1951-55	78264A	LAMPS—continued			SWITCH		
LAMPS			Tail and number plate ..	1951-55	*53041B	Lighting	1951-55	31201B
Side	1951-55	52034A	2-pin plug	1951-55	545025	Knob	—	314026
			2-pin socket	1951-55	770419			

LIGHT DELIVERY VEHICLES 'Bi-Van' and Tri-Van' 1949-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Alternator	1951	47068H	LAMPS			SWITCHES		
Battery	1949-51	PUW7E-4	Head, Home			Dipper	1949-50	*380521
Coil, ignition	1951	*45036A	('Bi-Van')	1949-51	*50306D	Ignition	1949-51	31246A
Horn	1949-51	*70001D	('Tri-Van')	1949-51	*50292D	Lighting	1949-51	*31254A
Horn push	1949-51	76204A	Side ('Tri-Van')	1949-51	A52036A			
Rectifier	1951	*47072A	Tail and number plate					
			('Bi-Van')	1949-51	*53140B			
			('Tri-Van')	1949-50	*A53007B			
			"	1951	*53133A			

LLOYD '650' Roadster 1948-50

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-50	*364576	LAMPS			SWITCHES—continued		
Battery	1948-50	SG9E	Head, Home			Stop lamp	1948-50	31281B
Coil, ignition	1948-50	*45016A	Vertical dip (L.H.) ..	1948-50	*50647D	Spring	—	315543
Control arm	1948-50	31168A	Non-dip (R.H.) ..	1948-50	*50648B	Trafficators	1948-49	*54012A
Control box	1948-50	37081E/H	Stop tail and number plate	1948-50	*A53071B	"	1950	54037A
Distributor	1948-50	40094A/D	ditto (Export)	1948-50	*A53029A	Warning light (ignition)	1948-50	*38012B
Generator	1948-50	*22433A	Starting motor	1948-50	25032A	Windshield wipers		
Horn	1948-50	069343				Motor	1948-50	*75121A
						Bearing, passenger side	1948-50	731721
						Arm, left hand	1948-50	735119
						" right hand	1948-50	735118
						Blade	1948-50	727784

* See Supersession Chart L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive



LOTUS Mk. VII and Mk. VIII (Ford 100E Engine) 1958

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958	36001D	LAMPS			SWITCHES		
Coil, ignition	1958	*45053J	Driving	1958	55132B	Dipper	1958	31291A
Control box	1958	37182H	Fog	1958	55128B	Ignition	1958	*31631A
Distributor	1958	40402A/N & Q/T	Number plate illumination	1958	53518A	Lighting (Mk. VII)	1958	31126E
Fuse box	1958	033239	Side	1958	*52182D	" (Mk. VIII)	1958	31183H
Generator	1958	22258F	Stop tail	1958	53330D	Solenoid, starting motor	1958	*76411E
Horn	1958	70141B	Starting motor	1958	25022M & N/Q	Stop lamp	1958	31082E
Horn push (Mk. VIII)	1958	76229A	Steering wheel centre (Mk. VII)	1958	76231A			

LOTUS Mk. IX (Climax or M.G. Engine) 1958-59

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958-59	*36117A	Horn	1958-59	70141B	Starting motor	1958-59	25022M
Coil, ignition	1958-59	*45054K				" " .. . Later	1959	25063B
Control box	1958-59	37182H	LAMPS			SWITCHES		
" .. . Later	1959	37204E	Flasher, front (U.S.A.)	1958-59	52338A	Flasher (U.S.A.)	1958-59	31476B
Distributor	1958-59	40566A/B	Flasher, rear (U.S.A.)	1958-59	53600A	Horn push and dipper	1958-59	31438A
(Climax Engine)	1958-59	40510B/D	Head, Home	1958-59	51960A	Lighting	1958-59	*34018A
(M.G. Engine)	1958-59	35010A	Side	1958-59	*52182D	Solenoid, starting motor	1958-59	*76411E
Flasher unit (U.S.A.)	1958-59	*37137A	Stop tail	1958-59	53178F/J	Solenoid operating	1958-59	*31071A
Fuse box	1958-59	*37137A	Stop tail and number plate	1958-59	53244B/D	Stop lamp	1958-59	31082E
Generator	1958-59	22265E	Reflex reflector	1958-59	*57035D			
(Climax Engine)	1958-59	22290A						
(M.G. Engine)	1958-59	22258F						

LOTUS 'Elite' 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1959-60	*36246B	LAMPS—continued			SWITCHES—continued		
Battery	1959-60	FRVZ9A	Head, Home			Heater	1959-60	*31900A
Bulb holder, warning lights			R.H.D., dip left	1959-60	58260A/D	Knob	—	*54331339
Flasher and main beam	1960	*860547	Head, Export			Ignition and starting	1959-60	*31846A
Ignition	1960	*861113	R.H.D., dip left	1959-60	58260A/D	Lighting	1959-60	31662A
Bulb	1960	987	L.H.D., dip right	1960	58263B	Knob	—	54332710
Coil, ignition	1959-60	*45054K	Head, Export Europe			Solenoid, starting motor	1959-60	*76411E
Control box	1959	*37187L	(except France & Sweden)	1959-60	58560A	Windshield wiper	1959-60	*31954A
" .. . Later	1959-60	37307A/B	Head, Export France	1959-60	58561A	Knob	—	*318167
" (95')	1959-60	37298A/B	Head, Export Sweden	1959-60	58631A	Warning light (flasher)	1959	38102A
Distributor	1959-60	40566B	Number plate illumination	1959-60	*52463A	Shade and window	1960	54360259
Flasher unit	1959-60	35010A	Side	1959-60	52449B	Windshield wipers		
Fuse box	1959-60	*37131A	Stop tail and reflex	1959-60	53819A	Motor	1959-60	75311A
Generator	1959-60	22296A	Relay, horn	1959-60	33188A	Wheelbox	1959-60	72686B
Horn	1959-60	69046F	Relay, lighting	1959-60	33209A	Crosshead and rack assy.	1959-60	744258
Low note	1959-60	69047F	Starting motor	1959	25063B/D	Outer casing		
High note	1959-60	69047F	" .. . Later	1959-60	25063E	Motor to wheelbox	1959-60	54710413
LAMPS			SWITCHES			Wheelbox to wheelbox	1959-60	54710551
Flasher, front	1959-60	52337A	Dipper	1959-60	31800A	End tube	1959-60	740746
" (N.A.D.A.)	1959-60	52345A/B	Door pillar	1959-60	*31222A	Arm	1959	745082
Flasher, rear	1959-60	*52462A	Flasher	1959-60	*31905A	" .. . Later	1959	745650
" (N.A.D.A.)	1959-60	53861A	Knob	—	*311097	Blade	1960	54711569

LOTUS Mk. VII Series II 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Coil, ignition			Generator			Starting motor		
(Austin A40 and Ford 100E Engine)	1960	*45053M	(Austin A40 and Ford 105E Engine)	1960	22700D	(Austin A40 and Ford 100E Engine)	1960	25022N/Q
(Ford 105E Engine)	1960	45111D	ditto (temporary alternative)	1960	*22704A	(Ford 105E Engine)	1960	25071A/D
Control box	1960	37183L	(Ford 100E Engine)	1960	22258H	Steering wheel centre	1960	76231A/D
(Austin A40 Engine)	1960	37182K	Horn	1960	70141A	SWITCHES		
(Ford 100E Engine)	1960	37290D	LAMPS			Driving lamp	1960	*31851A
" (105E " ")	1960		Driving	1960	55132E	Horn	1960	34307A
Distributor	1960	40675B	Fog	1960	55128E	Ignition	1960	31889A
(Austin A40 Engine)	1960	*40706A	Side	1960	*52182D	Lighting	1960	31788B
(Ford 100E Engine)	1960	40652B/F				Starting motor	1960	76427D
" (105E " ")	1960	033283				Stop lamp	1960	31802D
Fuse box	1960							

MEYNELL (See also Paramount) 'Cub' Mk. I, 'Vixen' and 'Flying Fox' Roadster and Coupé Mk. I 1952

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1952	*36072D	LAMPS—continued			SWITCHES—continued		
Battery	1952	GT7A	Head, Export Europe			Panel	1952	*31251A
Coil, ignition	1952	*45020A/B	(not France)	1952	*50961A	Knob	—	315042
Control box	1952	37065E	Head, Export France	1952	*50978A	Starting motor	1952	*764150
" .. . Later	1952	*37138A/B	Number plate illumination	1952	53093E	Windshield wiper	1952	31248A
Distributor	1952	40286A	Side	1952	52139B	Knob	—	315042
Fuse box	1952	033239	Stop tail	1952	53178D	Trafficators	1952	*54039A
Generator	1952	22258D	Mirror	1952	062587	Warning light holder (ignition)	1952	304994
Horn	1952	*69011F	" (Coupé)	1952	*062579	Windshield wipers		
Low note	1952	*69012F	Starting motor	1952	26009A	Motor	1952	75151A
High note	1952		Steering column control	1952	32843D/F	Wheelbox	1952	72590A/K
LAMPS			SWITCHES			Crosshead and rack assy. Cut to 31 1/2"	1952	738764
Fog	1952	*55094A	Foglamp	1952	31248A	Outer casing		
Head, Home			Knob	—	315042	Motor to wheelbox	1952	740482
R.H.D., dip left	1952	*50959A	Ignition	1952	31287A	Wheelbox to wheelbox	1952	739973
Head, Export			Interior light	1952	*31251A	End tube	1952	740031
R.H.D., dip left	1952	*50959A	Knob	—	315042	Arm, left hand	1952	*737431
L.H.D., dip right	1952	*50528M	Lighting	1952	*31251A	" right hand	1952	*737430
			Knob	—	315042	Blade	1952	727707

* See Supersession Chart

N.A.D.A. .. North American Dollar Area

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



M.G. 1 1/4 litre 1947-53

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various components like Ammeter, Battery, Coil, Distributor, Fuse box, Generator, LAMPS, Head, Horn, Junction box, Mirror, Panel light bulb holder, Suppressor, SWITCHES, Dipper, Foglamp, Knob, Ignition, Lighting, and various lamps and switches.

M.G. 'Midget' 1946-55: MGA 1956-59: MGA 1600 1959-60

Table with 9 columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. It lists various components for the Midget series, including Ammeter, Battery, Bulb holder, Coil, Control box, Distributor, Flasher unit, Fuse box, Generator, Head, Horn, Inspection lamp sockets, LAMPS, Mirror, Panel light bulb holder, Suppressor, SWITCHES, Dipper, Foglamp, Knob, Ignition, Lighting, and various lamps and switches.

* See Supersession Chart L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive continued



M.G. 'Midget' 1946-55: MGA 1956-59: MGA 1600 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Warning lights—continued		
Side	1946-51	52030A	Foglamp	1946-53	*31276A	Main beam bulb holder	1959-60	554734
Side and flasher (U.S.A.)	1952-54	*52197A	"	1955	31248B	Bulb	1959-60	987
"	1953-54	52134B	Knob	1955	316390	Petrol reserve	1950-53	38054A
"	1954-55	52134A	Foglamp	1956-60	*31515A	"	1954-55	38101A
"	1956-59	*52236A	Knob	—	312866	Windshield wipers		
" (U.S.A.)	1960	52425D	Headlamp flasher (when fitted)	1959-60	31898A	Motor	1946-53	75051D
Stop tail and number plate	1946-49	*53029A	Horn push and dipper ..	1946-50	*380191	"	1954-55	75144A
Stop tail	1950	*53197A	Ignition	1954-55	31187D	" Later	1956-59	75297A/D
"	1951-52	*53220A	"	1956-60	*31449A/F	Coupling bar	1959-60	75297E
Stop tail and flasher	1953-55	53178D/E	Ignition and lighting ..	1946-53	*34018A	Bearing, passenger side	1946-53	732191
Mirror	1956-60	53330D	Lighting	1954-60	*31251A/E	Wheelbox, with switch	1954-55	731721
" (optional)	1954	*580435	Knob	1954-55	*316136	" less switch ..	1954-55	72659A
" (left hand)	1956-60	*062604	"	1956-60	316154	"	1956-60	*72674A/B
" (right hand)	1956-60	062590	Map light	1956-60	*31515A	Crosshead and rack assy.	1954-55	738499
Reflex reflector	1953	*57035A	Knob	—	316102	Cut to 46"	1956-60	743221
" Later	1953-54	*57052A	Panel	1946-51	*31276A	Crosshead and rack assy.	1956-60	743221
Relay, flasher	1955	57031A	"	1952-53	78294A	Outer casing	1954-55	*739832
Relay, foglamp (U.S.A.)	1951-59	33117A/D	Knob	—	*768896	Motor to wheelbox ..	1954-55	743664
Relay, headlamp flasher (when fitted)	1958-60	33169B	"	1954-55	*31251A	Wheelbox to wheelbox	1954-55	*739979
Sleeve, Lucas connector	1959-60	33135B	Panel	1956-59	78311A	"	1956-60	743665
14 amp.	1960	54190042	Knob	1960	78346A	End tube	1954-55	740031
35 amp.	1960	54190043	"	1956-60	768945	"	1956-60	740746
Starting motor	1946-49	*255378	Starting motor	1946	76428A	Ferrule, casing retaining	1956-60	740715
"	1950-57	25022A/L	"	1947-48	*76406E	Grommet, wheelbox ..	1956-60	740811
"	1958-59	25022M	"	1949	76428A	Arm, left hand	1946-52	*732927
"	1960	25022N/Q	Coupling	1950-60	76423A	"	1953	735111
Suppressor	1951-54	78114A	Stop lamp	1954-60	764428	" right hand ..	1946-52	*732926
" (when fitted)	1959	78106A	Windshield wiper	1956-60	31082B/J	"	1953	735110
SWITCHES			Knob	1956-60	*31515A	" left hand ..	1954-55	*737517
Auxiliary	1954	31248A	Warning lights	—	312865	" right hand ..	1956-57	745084
Knob	—	316390	Flasher	1953	*38013B	" left hand drive	1956-57	745075
Dipper	1953-60	31284A/D	"	1954-55	38102A	" Later	1957-60	745083
Flasher	1953-60	31250A/H	Ignition	1956-60	38132A	" Later	1957-60	745082
Knob	1953-55	*311132	"	1946-49	*38013B	Blade	1946-53	727784
Lever	1956-60	*311097	" bulb holder	1950-53	38049A	"	1954-55	737680
				1954-55	38100A	"	1956	738724
				1959-60	863511	"	1957-60	737910

M.G. 'Magnetite' 1954-59

Ammeter	1954-59	*36180A/B	LAMPS—continued			SWITCHES—continued		
Battery	1954-58	GT9A	L.H.D., dip right	1954	*51345A	Panel	1954-59	*31251A/D
"	1959	BT9A	"	1955	*51345B	Knob	1954-56	316137
Coil, ignition	1954	*45020A	"	1956-59	*51345D/F	"	1957-59	*316158
"	1955-56	*45053A/D	Head, Export Europe (not France)	1954-55	51346A	Reverse lamp	1954-59	*31077A
"	1957-59	*45054H/K	ditto	1956-59	51346B/E	Solenoid, starting motor	1954-59	*76411D/E
Control box	1954-55	*37138A/D	(except France & Sweden) ..	1954-59	58272A/B	Solenoid operating ..	1954-59	31253A/E
" Later	1959	37182J	Later	1959	51411A	Knob	1954	317362
" (Police Car)	1958-59	*37189H/J	Head, Export France	1954-55	51411B	"	1955-56	317372
Distributor	1954-56	*40414A & E	" Later	1956-59	58273A/B	Stop lamp	1957-59	317381
" Later	1956	40509A/D	"	1959	51346B/E	Windshield wiper ..	1954-59	31082B/E
"	1957	40510A	Head, Export Sweden	1959	51346B/E	Knob	1954-59	31248A/B
"	1958	40587A	Head, Export U.S.A.	1955-59	51346B/E	Trafficators (Saloon)	—	316391
"	1959	40587B/D	Head, Export Canada	1958-59	51333D/F	" (R.H.D.) ..	1954	54044D
Flasher unit (L.H.D. and optional R.H.D.)	1955-56	*35003A	Number plate illumination and reverse	1954-59	53317A	"	1955-59	54044D/E
ditto	1957-59	35010A	Side	1954-59	52139B/D	Windshield wipers		
Fuse box	1954-59	033239	Side and flasher (L.H.D. and optional R.H.D.) ..	1955	*52162B	Motor	1954-55	*75192D
Generator	1954-56	22258D	ditto	1956-59	52240B	" Later	1956-59	75296A/D
" Later	1956-59	22258E/F	Stop tail and flasher ..	1954	*53298A	"	1959	75296E
" (Police Car) ..	1958-59	*22483D	"	1955-59	53377A/B	Wheelbox	1954-59	72645D
Horn	1954-55	*69011F/J	Mirror	1954-55	062602	Crosshead and rack assy.	1954-55	*743220
Low note	1956-59	69046A/F	"	1956-59	062615	Cut to 32"	1956-59	743221
"	1957-59	707083	(alternative in 1959) ..	1955-59	33117A	" 32"	1956-59	743221
Gauze and rubber	1954-55	*69012F/J	Relay, flasher (when fitted)	1954-59	*33116B	Outer casing	1954-59	745050
High note	1956-59	69047A/F	Relay, horn	1954-57	25022A/L	Motor to wheelbox ..	1954-59	745032
"	1957-59	707085	Starting motor	1958-59	25022M	Wheelbox to wheelbox	1954-59	740746
Gauze and rubber	1957-59	690936	Suppressor (when fitted) ..	1954-57	78105A	End tube	1954-59	740746
Grommet	1957-59	690936	"	1958-59	78106A	Ferrule, casing retaining	1954-59	740715
LAMPS	55128B		SWITCHES			Grommet, wheelbox ..	1959	740811
Fog	1954-59		Dipper	1954-59	31284A/D	Arm, left hand	1954	741837
Head, Home	1954-55	51538A	Foglamp	1954-59	*31251A	" right hand ..	1954	741836
R.H.D., dip left	1956-59	51538B	Knob	1954-56	316140	" left hand drive	1955-58	741839
" Later	1959	51538D/E	"	1957-59	*316159	"	1959	743524
Head, Export			Ignition	1954-57	31187D	" right hand drive	1955-58	741838
R.H.D., dip left	1954-56	51344A	"	1958-59	*31484B	"	1959	743523
" Later	1956-59	51344B	Lighting	1954-59	*31251A/D	Blade	1954-56	*738735
"			Knob	1954-55	316136	"	1957-59	737897
"			"	1956-59	316141	"		

M.G. 'Magnetite' Mk. III 1959-60

Ammeter	1959-60	36247A/B	Bulb holder, panel light (1 off)	1959-60	861845	Control box	1959	37283A/B
Battery	1959-60	BT9A	Bulb	—	989	"	1960	37290D/E
Bulb holder, panel light (3 off)	1959-60	554734	Coil, ignition	1959	*45103A/D	Distributor	1959-60	40644A/B & F
Bulb	—	987	"	1960	*45113D	" Later	1960	40644D & F
						Flasher unit	1959-60	35020A
						Fuse box	1959-60	033285

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



M.G. 'Magnette' Mk. III 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Generator	1959	22297A	Reflex reflector	1959-60	57113A	Windshield wipers—cont'd		
"	1960	22700D	Relay, horn	1959-60	33188A	Wheelbox		
" (temporary alternative)	1960	*22704A	Sleeve, Lucar connector			Driver side	1959-60	72713A/B
Horn			14 amp.	1959-60	54190042	Passenger side	1959-60	72707A
Low note	1959-60	69046F	35 amp.	1959-60	54190043	Crosshead and rack assy.	1959-60	744254
High note	1959-60	69047F	Twin	1960	54190119	Outer casing		
LAMPS			Starting motor	1959	25022M	Motor to wheelbox	1959-60	54710207
Head, Home			"	1960	25022N/Q	Wheelbox to wheelbox	1959-60	54710208
R.H.D., dip left	1959-60	58251A/F	SWITCHES			End tube	1959-60	740746
Head, Export			Dipper	1959-60	31800A	Ferrule, casing retaining	1959-60	740715
R.H.D., dip left	1959-60	58251A/F	Flasher	1959-60	31885A	Grommet, wheelbox	1959-60	740811
L.H.D., dip right	1959-60	58252A/F	Heater	1959-60	31828A	Arm, left hand drive	1959	744134
Head, Export Europe (except France & Sweden)	1959-60	58253A/E	Ignition and starting	1959	*31781A/D	" right hand drive	1960	54711539
Head, Export France	1959-60	58254A/E	"	1960	31973B	"	1960	54711538
Head, Export Sweden	1959	58315A/E	Lighting	1959-60	31841A/D	Blade	1959	*737907
" Later	1959	58446A/D	Panel light	1959-60	31840A/D	"	1960	54711283
"	1960	*58545B	Reverse lamp	1959-60	31849A	Windshield wipers (later)		
Head, Export U.S.A.	1959	58255A/B	Solenoid, starting motor	1959-60	*76465A	From Chassis No. 11012		
"	1960	*58488A/D	ditto Later	1960	76464A	Motor, left hand drive	1960	75357A
Number plate illumination	1959-60	53763A	ditto (automatic transmission)	1959	*76466A	" right hand drive	1960	75358A
ditto Later	1960	53814A	Stop lamp	1959-60	31882A	Wheelbox		
Reverse	1959-60	53787A/D	Windshield wiper	1959-60	31839A/D	Driver side	1960	72707A
Side and flasher			Warning lights			Passenger side	1960	72713A/B
Left hand	1959-60	52432A/E	Ignition, bulb holder	1959-60	863511	Crosshead and rack assy.	1960	744254
Right hand	1959-60	52433A/E	Main beam, bulb holder	1959-60	554734	Outer casing		
Left hand (N. America)	1959-60	52434A/E	Bulb	—	987	Motor to wheelbox	1960	54710207
Right hand	1959-60	52435A/E	Windshield wipers			Wheelbox to wheelbox	1960	54710208
Stop tail and flasher			Motor, left hand drive	1959-60	75358A	End tube	1960	740746
Left hand	1959-60	53792A/E	" right hand drive	1959-60	75357A	Ferrule, casing retaining	1960	740715
Right hand	1959-60	53793A/E				Grommet, wheelbox	1960	740811
Left hand (N. America)	1959-60	53794A/E				Arm, left hand drive	1960	54711538
Right hand	1959-60	53795A/E				" right hand drive	1960	54711539
						Blade	1960	54711283

MIDLAND VEHICLES Battery Vehicle 1951-55

Horn	1951-55	*069206	LAMPS—continued			Trafficators	1951-55	54028D
Horn push	1951-55	76205A	Tail and number plate	1951-55	*53041B	Windshield wipers		
Junction box	1951-55	78264A	Mirror	1951-55	62515A	Motor	1951-55	*75120A
LAMPS			SWITCHES			Arm	1951-54	*735045
Head	1951-55	50124B	Stop lamp	1951-55	31281B	Blade	1951-54	727802
Side	1951-55	—	Spring	—	315543			

MORGAN 3-wheeler 1948-52

Ammeter	1948-52	*369047	Inspection lamp sockets	1948-52	*39511A	Panel light bulb holder	1948-52	39007A
Battery	1948-52	SLG11E	LAMPS			Starting motor	1948-50	*250498
Coil, ignition	1948-52	*45016A	Dash	1948-50	A56031A	"	1951-52	25043A
Control box	1948-52	*332179	Head, Home	1952	*A56030A	SWITCHES		
Distributor	1948-52	40286A	Dip left (L.H.)	1948-52	50414D	Dipper	1948-52	*359831
Generator	1948-52	22005B	Non-dip (R.H.)	1948-52	50415D	Ignition and lighting	1948-52	*344694
Horn	1948-52	069225	Tail and number plate	1948-52	*A53007B	Starting motor	1948-52	*764150
Horn push	1948-52	*76213A				Warning light (ignition)	1948-52	*38012B

MORGAN 'Plus Four' 1946-60

Ammeter	1946-50	*36036A	Distributor—continued			LAMPS—continued		
"	1951-60	36023F	('Vanguard' Eng.)	1959-60	40548D	Flasher, front and rear	1955-60	52337A
Battery			Flasher unit (Export, Coupé & Special Orders)	1955-57	*35003A	Flasher, rear (U.S.A.)	1960	53600B
(2-seater and Coupé)	1950-51	SLG11E	ditto	1958-59	35010A	Fog (U.S.A. and Special Orders)	1946-51	*55063B
(2-seater Tourer)	1952-55	SG9E	ditto	1960	35020A	ditto	1952-55	*55049B
"	1956-58	STXW9E	Fuse box	1951-53	37134A	ditto Later	1955-60	55128B
"	1959-60	STGW9E	" Later	1953-59	033240	Head, Home		
(4-seater)	1946-55	SLG11A	Generator	1960	033285	R.H.D., non-dip	1946-47	*50102A
"	1956-58	SLTW11A	"	1946-48	*228137	"	1948-50	50753A
"	1959	SLG11A	"	1949-50	22449A	"	1951	*50798D
"	1960	STGK9E	"	1951-53	*22250E/F	" dip left	1952-53	*50995A
Bulb holder, panel light	1946-60	39007A	" Later	1953-55	22258D	"	1953	*51353A
Bulb	—	987	"	1956-60	22258E/H	"	1954	51344A
Coil, ignition	1946-57	*45012A/D	Horn	1946-52	069344	" Later	1954-55	51336A
"	1958-60	*45054J	"	1953-55	*69012F/J	"	1956-60	51336B/J
Control box	1946-48	*332202	Horn push	1956-60	69047D/F	Head, Export		
"	1949-50	37057E	(2 and 4-seater)	1946-54	*76208A	Vertical dip	1946-47	*50291A
"	1951-53	*37048E	(Coupé)	1946-54	*76211A	R.H.D., dip left	1949-50	*50458A
" Later	1953-55	*37138A/D	Horn push	1955-60	*76211B/D	"	1951	*50821D
"	1956-59	37182H	Inspection lamp sockets	1946-60	78266A	" Later	1952-53	*50995A
"	1960	37290D/E	Junction box	1946-50	78266A	"	1953	*51353A
Distributor	1946-47	*406345	LAMPS	1946-50	78266A	"	1954	51344A
"	1948-50	*409639	Flasher, front	1951-55	78264A	" Later	1954-55	51336A
"	1951-54	*40201A/B	(Export, Coupé and Special Orders)	1955-58	*52246A	"	1954-55	51336B/J
" (TR2/3 Engine)	1955-57	*40403D	(U.S.A.)	1960	52345A	" Later	1956-60	51336B/J
"	1958-59	*40480A				L.H.D., dip right	1951	*A50821D
"	1960	40698A				"	1952	50877B
"	1960	40698B				"	1953	*50775E
" Later	1960	*40365D				"	1953-54	*51355A
" ('Vanguard' Eng.)	1956-57	40559A						
"	1958							

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



MORGAN 'Plus Four' 1946-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS, Head, Export— continued			SWITCHES—continued			Windshield wipers—cont'd		
L.H.D., dip right ..	1954	*51337A	Solenoid operating ..	1951-58	31253A/B	Outer casing ..		
" " " ..	1955	*51337B	Knob .. " ..	1959-60	31377A	Motor to wheelbox ..		
" " " ..	1956-59	*51337D/E	" " " ..	1951-54	*317364	(Coupé) ..	1951-52	*739855
" " " Later ..	1959-60	*51337F/K	Starting motor ..	1955-58	317362	" " " ..	1953-55	739870
Head, Export Europe			Stop lamp ..	1946-50	76428A	(2-seater) ..	1954	739868
(not France) ..	1951-53	*50996A	Spring ..	1946-50	31281B	(2 and 4-seater) ..	1955	739868
ditto ..	1953-54	*51354A	Trafficator ..	1946-50	315543	(All Models) ..	1956-60	739868
ditto .. Later ..	1954-55	51339A	" (when fitted) ..	1946-48	31379A	Wheelbox to wheelbox ..		
ditto ..	1956-59	51339B/H	Windshield wiper ..	1949-60	*31306A	(Coupé) ..	1951-55	*739956
ditto .. Later ..	1959-60	58230A/B	Knob ..	1951-57	31248A/B	(2-seater) ..	1954	*739979
Head, Export U.S.A.			" " " ..	1958-60	*31557A	(2 and 4-seater) ..	1955	*739979
(not France) ..	1951-53	*50775E	Trafficators (when fitted) ..	1955-57	315042	(All Models) ..	1956-60	*739979
ditto ..	1953	*51355A	" " " ..	1958-60	316393	End tube ..	1951-60	740031
ditto .. Later ..	1954-60	51509A/E	Warning lights ..	1946-55	*54039A	Grommet (Coupé) ..		
Number plate illumination			Ignition ..	1956-60	54044E	(Housing or wheelbox) ..	1946-55	729313
Side ..	1946-52	52030A	" " " ..	1946-50	*38013B	(Scuttle) ..	1946-50	729378
ditto .. Later ..	1952-60	*52182B	" " " ..	1951-57	38059A	Arm ..		
Stop tail and number plate			" " " ..	1958-60	38145A	L.H.D. and R.H.D. ..		
Stop tail ..	1946-50	*53031D	" " " ..	1953-55	75144A	(Coupé) ..	1946-50	735099
ditto ..	1951-54	53178D	" " " ..	1955-57	38052B	L.H.D. (Coupé) ..	1951-55	737678
ditto ..	1955-58	53178E/H	" " " ..	1958-60	38059A	R.H.D. ..	1951-55	737651
ditto ..	1959-60	53330D	" " " ..	1958-60	38150A	L.H. (2-seater) ..	1946-53	735103
Starting motor			Windshield wipers			R.H. " " ..	1946-53	735102
" " " ..	1946-48	*250231	Motor (Coupé) ..	1946-50	†75066A	L.H. (4-seater) ..	1946-50	735111
" " " ..	1949-50	25017A	" " " ..	1951-52	*75074J	" " " ..	1951-52	735103
" " " ..	1951-54	25526A/J	" (2 and 4-seater) ..	1953-55	75144A	" " " ..	1953	*735107
" " (TR2/3 Eng.) ..	1955-60	25541H	" (4-seater) ..	1946-50	*75059A	R.H. " " ..	1946-50	735110
" " ('Vanguard' Eng.) ..	1959-60	25550A	" (2-seater) ..	1951-54	*733147	" " " ..	1951-52	735102
			" " " ..	1951-53	*733147	" " " ..	1953	*735107
SWITCHES			" (2 and 4-seater) ..	1954	75150A	L.H.D. (2 and 4-seater) ..	1954-55	737814
Dipper ..	1949-59	31284A/D	" (All Models) ..	1955	75150A	R.H.D. " " ..	1954-55	*737815
" " " ..	1960	31800A	Shaft, short (Coupé) ..	1956-60	75150A/B	L.H.D. " " ..		
" " " ..	1955	31248B	Coupling (Coupé) ..	1946-50	737243	(Coupé and 4-seater) ..	1956	742159
Knob ..	—	315042	Coupling bar ..	1946-50	729036/S	R.H.D. ..		
Flasher (when fitted) ..	1955-60	31476A/B	(2 and 4-seater) ..	1946-50	727293	(Coupé and 4-seater) ..	1956	742158
Foglamp (when fitted) ..	1951-57	31248A/B	(4-seater) ..	1951-54	732968	L.H.D. and R.H.D. ..		
" " " ..	1958-60	31434B	" " " ..	1951-53	732968	(Coupé and 4-seater) ..	1957-60	742291
Knob ..	1951-54	*316374	Bearing, passenger side ..	1946-50	732583	R.H.D. ..	1956	742156
" " " ..	1955	315042	(2 and 4-seater) ..	1951-54	731721	(2-seater Tourer) ..	1956	742157
" " " ..	1956-57	*316374	(2-seater) ..	1951-53	731721	L.H.D. and R.H.D. ..		
" " " ..	1958-60	313619	Wheelbox ..	1951-54	*72548A/K	(2-seater Tourer) ..	1957-60	742295
Ignition and lighting ..	1946-50	*34027B	(Coupé) ..	1955	72662A	Blade ..		
" " " ..	1951-60	31270A/B	(2-seater) ..	1954	72629A/D	(Coupé) ..	1946-50	727784
Knob ..	1951-54	*316425	" " " ..	1955	72629A/D	" " " ..	1951-55	*737653
" " " ..	1955-60	316276	(All Models) ..	1956-60	72629A/D	(" " and 4-seater) ..	1956-60	737680
Panel ..	1946-50	31201B	Crosshead and rack assy. ..			(2-seater) ..	1946-53	727809
" " " ..	1951-57	31248A/B	(Coupé) ..	1951-55	736177	(4-seater) ..	1946-52	727809
" " " ..	1958-60	*31557A	" " " ..	1954	736307	" " " ..	1953	727784
Knob ..	1946-50	314026	(2 and 4-seater) ..	1955	736307	(2 and 4-seater) ..	1954-55	737811
" " " ..	1951-54	*316373	(All Models) ..	1956-60	736307	(2-seater Tourer) ..	1956-60	737811
" " " ..	1955-57	315042						
" " " ..	1958-60	312955						
Solenoid, starting motor ..	1951-59	*76411D/E						
" " " ..	1960	*76465B						

MORGAN 'Four-Four' (Standard Engine) 1949-50

Ammeter ..	1949-50	*36036A	LAMPS—continued			Windshield wipers		
Battery			Head, Home			Motor (Coupé) ..	1949-50	†75066A
(4-seater) ..	1949-50	SLTW11A	Non-dip ..	1949	*50490A	" (2 and 4-seater) ..	1949	*75059A
(2-seater and Coupé) ..	1949-50	SLTW11E	" " " ..	1950	50753A	" " " ..	1950	732480
Coil, ignition ..	1949	402032	Head, Export			" " " ..		
" " " ..	1950	*45012A/D	Vertical dip ..	1949-50	*50458A	Clutch housing ..	1949-50	737412
Control box ..	1949-50	37057D	Side ..	1949-50	52030A	Coupling bar ..		
Distributor ..	1949-50	*409639	Stop tail ..	1949-50	*53031B	(2 and 4-seater) ..	1949	*725151
Generator ..	1949	*228139	Starting motor ..	1949-50	25017A	" " " ..	1950	727293
" " " ..	1950	22449A				Bearing ..	1950	732583
Horn			SWITCHES			" " " ..		
Horn push ..	1949-50	069344	Dipper ..	1949-50	*360007	Arm ..		
(Coupé) ..	1949-50	76205B	Ignition and lighting ..	1949-50	34055A	(Coupé) ..	1949-50	735099
(2 and 4-seater) ..	1949-50	76218A	Panel ..	1949	*314014	L.H. (2-seater) ..	1949-50	735103
Inspection lamp sockets ..	1950	39507A/B	" " " ..	1950	031218	R.H. " " ..	1949-50	735102
Junction box ..	1949	*770017	Starting motor ..	1949	*764251	L.H. (4-seater) ..	1949-50	735111
" " " ..	1950	78266A	" " " ..	1950	76428A	R.H. " " ..	1949-50	735110
			Stop lamp ..	1949-50	*315725	Blade ..		
LAMPS			Trafficator ..	1949	*310656	(Coupé) ..	1949-50	727784
Fog or pass ..	1949	*55049A	Trafficators (Coupé) ..	1950	31190A	(2 and 4-seater) ..	1949	727804
" " " ..	1950	*55063A	Warning light (ignition) ..	1949-50	*54018D	" " " ..	1950	727809
					*38013B			

MORGAN 'Four-Four' Series II (Ford Engine) 1956-60

Ammeter ..	1956-60	36226A	Flasher relay ..	1956-58	33117D	LAMPS		
Battery ..	1956-58	GLT7A	Fuse box ..	1956-60	033240	Flasher, front (Coupé, Export & Special Orders)	1956-58	*52246A
" " " ..	1959-60	BT7A	Generator ..	1956-60	22258E/H	ditto ..	1959-60	52337A
Coil, ignition ..	1956-60	*45053D/K	Horn ..	1956-57	*69012F	ditto (U.S.A.) ..	1960	52345A
Control box ..	1956-60	37182H	" " " ..	1958-60	69047E	Flasher, rear ..	1959-60	52337A
Distributor ..	1956-60	*40402H/N & Q/T	Horn push ..	1956-60	*76211B/D	(U.S.A.) ..	1960	53600B
Flasher unit (Coupé, Export & Special Orders)	1956-57	*35003A	Inspection lamp sockets ..	1956-60	39507A	Fog (L.H.D. and optional R.H.D.) ..	1956-60	55128B
ditto ..	1958-60	35010A	Junction box (L.H.D.) ..	1956-57	78264A			

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand

R.H. .. Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORGAN 'Four-Four' Series II (Ford Engine) 1956-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
<i>LAMPS—continued</i>			SWITCHES			Trafficators (when fitted) 1956-60 54044E		
Head, Home			Dipper	1956-60	31284A/D	Warning lights		
R.H.D., dip left ..	1956-60	51336B/J	Flasher (when fitted) ..	1956-60	31476A/B	Ignition	1956-60	38145A
Head, Export			Foglamp (when fitted) ..	1956-57	31248B	Main beam	1956-60	38150A
R.H.D., dip left ..	1956-60	51336B/J	Knob	—	*31637A	Windshield wipers		
L.H.D., dip right ..	1956-60	*51337D/E & F/K	Foglamp (when fitted) ..	1958-60	31434B	Motor	1956-60	75150A/B
Head, Export Europe (not France)	1956-58	51339E	Knob	—	313619	Wheelbox	1956-60	72629A/D
ditto	1959-60	58230A	Ignition and lighting ..	1956-60	31270B	Crosshead and rack assy. Cut to 44"	1956-60	736307
Head, Export France ..	1956-60	*51590A/H	Knob	—	316276	Outer casing		
Number plate illumination	1956-60	53093H	Panel	1956-57	31248B	Motor to wheelbox ..	1956-60	739868
Side	1956-60	*52182D	Knob	—	315042	Wheelbox to wheelbox	1956-57	*739956
Stop tail	1956-58	53178F	Panel	1958-60	*31557A	Knob	1958-60	*739979
.. .. .	1959-60	53330D	Knob	—	312955	Solenoid, starting motor	1956-60	*76411E
.. .. .	1956-58	25022F/L	ditto	1960	*76445A	ditto	1960	*76445A
Starting motor	1959-60	25022M	Solenoid operating ..	1956-60	31377A	.. right hand drive ..	1956-57	742156
.. .. .	1959	25022N/Q	Trafficator (when fitted)	1956-60	*31306A	.. left hand drive and	1956	742157
.. .. .	1960		Windshield wiper ..	1956-60	*31557A	right hand drive ..	1957-60	742295
			Knob	—	316393	Blade	1956-60	737811

MORRIS 8 h.p. 1946-48

Battery	1946-48	SG9E	<i>LAMPS—continued</i>			Windshield wipers		
Coil, ignition	1946-48	*45016A	Stop tail and number plate	1946-48	*53060B	Motor	1946-48	†75065A
Control box	1946	*37033A	Mirror	1946-48	*58057A	Clutch housing	1946-48	735471
.. .. .	1947-48	37081H	Starting motor	1946-48	*250405	Bracket, with shaft and coupling	1946-48	734747
Distributor	1946	*406335	SWITCHES			Shaft, short	1946-48	737243
.. .. .	Later	*40056D	Dipper	1946-48	*360020	Coupling	1946-48	729036/S
Generator	1946-48	22448B	Ignition and lighting ..	1946-48	*344484	Link	1946-48	737285
Horn	1946-48	069343	Panel	1946-48	*314146	Grommet, scuttle ..	1946-48	729378
LAMPS			Starting motor	1946-48	*764401	Arm (Saloon)	1946-48	*735048
Head, Home			Stop lamp	1946-48	31281B	Blade (Saloon)	1946-48	727802
R.H.D., dip left (L.H.)	1946-48	*50089A	Spring	—	*315714			
.. non-dip (R.H.)	1946-48	*50088A	Trafficators (Saloon) ..	1946-48	*539322			
Head, Export			Warning light (ignition) ..	1946-48	*38012B			
Vertical dip	1948	50426A						

MORRIS 10 h.p. 1946-48

Ammeter	1946	*364536	<i>LAMPS, Head, Home—continued</i>			Trafficators		
.. .. .	1947-48	*364576	R.H.D., non-dip (R.H.)	1946-48	*50453A	Warning light (ignition) ..	1946-48	*38013B
Battery	1946-48	SG9A	Later	1946-47	Windshield wipers		
Coil, ignition	1946-48	*45020A	Side	1946-47	*524982	Motor	1946-48	†75066A
Control box	1946	*37031A	1948	*52110A	Clutch housing	1946-48	735471
.. .. .	1947-48	37057E	Stop tail and number plate	1946-47	*524753	Bracket, with shaft and coupling	1946-48	734453
Distributor	1946	*405569	Mirror	1948	*53060B	Shaft, short	1946-48	737243
.. .. .	Later	*40058A	Starting motor	1946-48	*620708	Coupling	1946-48	729036/S
Generator	1946-48	22449A	1946-48	*255378	Link, primary	1946-48	734457
Horn	1946-48	069344	SWITCHES			.. secondary	1946-48	734455
Junction box	1946-48	78264A	Dipper	1946-48	31284A	Grommet, housing ..	1946-48	734458
LAMPS			Ignition and lighting ..	1946	*344472	Arm	1946-48	*735048
Head, Home			Panel	1946-48	*34041B	Blade	1946-48	727802
R.H.D., dip left (L.H.)	1946	*50454A	1946-48	*314090			
.. non-dip (R.H.)	1946	*50455A	Stop lamp	1946-48	*315739			
.. dip left (L.H.)	1946-48	*50452A	Spring	—	*315714			

MORRIS 'Minor' 2-door Saloon and Tourer 1948-56: 4-door Saloon 1951-56: 'Traveller' 1954-56

Battery	1948-56	GT7A	LAMPS			<i>LAMPS, Head, Export—continued</i>		
Coil, ignition	1948-54	*45020A/B	Head, Home			L.H.D., dip right	1948-50	A 50529B
Control box	1956-56	*45053A/D	R.H.D., dip left (L.H.)	1948-50	50529B (2-door) ..	1951	A 50529B
.. .. .	1948-52	37065E	.. dip left (L.H.)	1948-50	*50537B (4-door) ..	1951	*A 50445K
.. .. .	Later	*37138B/D	1951	50529B	1951-53	*50804D
Distributor	1956	37182A/H	.. non-dip (R.H.)	1951	*50537B	1953-54	*51338A
.. .. .	1948-52	*40056A/J	1951		1954-56	*51337A & D/E
.. .. .	1952	40251F	.. dip left (L.H.)	1951	*50445K	Head, Export Europe (not France)	1948-50	B 50529B
.. .. .	1953-56	*40299E & L	1951		ditto (2-door) ..	1951	B 50529B
.. .. .	1956	40494A	1951	*50446K	ditto (4-door) ..	1951	*B 50445K
.. .. .	Later	40333A	1951		ditto	1951-52	*50963A
.. .. .	1953	*35003A	1951		ditto	1953	*51340A
Flasher unit (L.H.D.)	1954-56	33117A	R.H.D., dip left (L.H. and R.H.)	Later	1951-52	ditto	1953-56	51339A & B/H
Flasher relay (L.H.D.)	1954-56	033239	1952	*50954A	1950	50822B
Fuse box	1948-49	*22250A	1953	50941A	Head, Export France ..	1951	50822B
Generator	1949-52	*22250E/F	1953-54	51336A	ditto (2-door) ..	1951	*50790E
.. .. .	1952-55	22258D	1955-56	51336B/J	ditto	1951-52	*50790E
.. .. .	1956	22258E	Head, Export			ditto	1952	*50962A
Horn	1948-56	*069399	R.H.D., dip left ..	1948-50	50529B	ditto	1953-56	*51341A & B/F
Low note (U.S.A. and Canada)	1950-55	*69011F/J (2-door) ..	1951	50529B	Head, Export U.S.A. and Canada	1948-49	A 50529B
.. .. .	1956	69046A (4-door) ..	1951	*50445K	1950-52	*50804M
High note (U.S.A. and Canada)	1950-55	*69012F/J	1951-52	*50954A	1953-56	51343A & B/E
.. .. .	1956	69047A	1953	50941A	Number plate illumination	1950-56	53101E/J
..	1953-54	*51335A	ditto (4-door) ..	1951	53093E
..	1955-56	51336B/J	ditto ("Traveller")	1954-56	53093E

* See Supersession Chart L.H.D. .. Left hand drive † No longer available—refer to Wiper Conversion Set Section L.H. .. Left hand R.H. .. Right hand continued
A104 Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS 'Minor' 2-door Saloon and Tourer 1948-56: 4-door Saloon 1951-56: 'Traveller' 1954-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers		
Side	1950-56	52139B/F	Panel	1948-56	*31140A	Motor	1948-50	*75088L
Side/Flasher (L.H.D.)	1953-55	*52162A/B	Starting motor	1948-50	*764401	"	1951-56	75151A
	1956	52240D	"	1951-56	76423A	Wheelbox	1948-52	72590A/K
Stop tail ('Traveller')	1954-56	53178D/F	Coupling	1951-56	764428	"	1953-56	72642A/E
" (Export)	1949	*53102D	Stop lamp	1954-56	31082B/E	Crosshead and rack assy.	1948-50	738006
	1950	*53102D	Trafficator (2-door)	1948-53	31190A	Cut to 3 1/8"	1951-56	738764
Stop tail and number plate	1948-49	*53029A	" (4-door)	1951-52	031046	Outer casing		
ditto	1951	53200A	"	1952-53	31250A	Motor to wheelbox	1948-56	740482
ditto	1952-53	*53197A	Knob " Later	1952-53	*311132	Wheelbox to wheelbox	1951-56	739973
ditto " Later	1953-54	53288A	Trafficator	1954	31190A	ditto (Export)	1948-50	739973
Stop tail and flasher	1955-56	53330A/D	" (2-door, Tourer & 'Traveller')	1955-56	31190A	End tube	1948-56	740031
Mirror	1948-50	*62030A	" (4-door)	1956	031296	Arm, left hand (2-door)	1948-54	737445
"	1951	062556	Windshield wiper	1948-54	*31271A	ditto (4-door)	1950-54	*737431
"	1952-56	062592	Knob	—	*315094	ditto	1955	*737431
Reflex reflector ('Traveller')	1954-56	57052A/B	Windshield wiper	1955-56	*31515A	ditto ('Traveller')	1955-56	737445
Panel light bulb holder	1948-55	39015A	Knob	—	316388	ditto (Saloon and Tourer)	1956	742273
Starting motor	1948-56	25022A/F	Windshield wiper	1955-56	—	Arm, right hand (2-door)	1948-54	737444
Suppressor	1951-53	78105A	Knob	—	—	ditto (4-door)	1950-54	*737430
"	1954-55	78106A	Trafficators	1948-49	*54017B	ditto	1955	*737430
			(2-door)	1950-51	*54040A	ditto ('Traveller')	1955-56	737444
			" " " Later	1951-52	*54048A	ditto (Saloon and Tourer)	1956	742272
			" (R.H.D.)	1952-53	*54049A	Blade (2-door)	1948-54	727802
			(4-door)	1954-56	*54049A	" (4-door)	1950-54	727707
			"	1951-52	*54041A	" (Saloon and Tourer)	1955-56	727707
			('Traveller' and 4-door)	1953	54044D	" ('Traveller')	1955-56	727802
			(R.H.D.)	1954-56	54044D			
			Warning light (ignition)	1948-56	*38013B			

MORRIS 'Minor 1000' Series III and 'Traveller' 1957-60

Battery	1957	GT7A	LAMPS—continued	1957-59	51739B	SWITCHES—continued	1957	31633B
"	1958-60	BT7A	Head, Export France	1957-59	58271A	Horn push and indicator	1958-59	31756D/F
Coil, ignition	1957-60	*45053	" " " Later	1959-60	58231B	" " " flasher	1958-59	31755D/F
		H/M	" " " " Later	1960	58450A	" " " trafficator	1957-60	31287B/F
Control box	1957-59	37182H & J	Head, Export Sweden	1959-60	58456B	Ignition	1957-60	*31251A/E
"	1960	37183K & L	" " " " Later	1960	51741B	Lighting	1957-60	—
Distributor			Head, Export U.S.A.	1957-59	*58497A	Knob	—	316154
High compression	1957-58	40561B	"	1960	53101H/J	Panel	1957-60	31140B
" " Later	1958-59	40561D/H & K	Number plate illumination	1957-60	53836A/B	Starting motor	1957-60	76423A
" " " " Later	1960	40561J & L	ditto (Denmark)	1960	53837A/B	Coupling	—	764428
Low compression	1957-58	40569A	ditto ('Traveller', Denmark)	1960	52139E	Boot, rubber	—	860556
" " Later	1958-59	40569B/F	Side flasher	1957-60	52240B	Stop lamp	1957-60	31082E/J
" " " " Later	1960	40569J	Left hand drive	1957-60	52338A	Trafficator	1960	31924A
Flasher unit (L.H.D.)	1957-60	35010A	(Switzerland)	1960	53178F/H	Windshield wiper	1957-60	*31515A
Flasher relay (L.H.D.)	1957-60	33117D	Stop tail ('Traveller')	1957-60	—	Knob	—	312865
Fuse box	1957-60	033239	Stop tail and reflex			Trafficators		
Generator	1957-59	22258E/H	Left hand	1957-60	53577A	Right hand drive	1957-60	*54049E
" (temporary alternative)	1960	22700D	Right hand	1957-60	53576A	(2-door and Tourer)	1957-60	54044E
Horn			Stop tail and flasher			(4-door and 'Traveller')		
Low note	1957-60	69046E/F	Left hand (L.H.D.)	1957-60	53577A	Warning lights (bulb holders)		
High note (N. America and optional)	1957-60	69047E/F	Right hand (L.H.D.)	1957-60	53576A	Ignition and oil pressure	1959-60	863511
			Reflex reflector ('Traveller')	1957-58	57052B	Main beam	1959-60	554734
			" (Switzerland)	1959-60	51724A	Bulb	—	987
			"	1960	57098A	Windshield wipers		
			Mirror	1957	062592	Motor	1957	75213A
			"	1958-59	062636A/B	"	1958-59	75295B/D
			Sleeve, Lucar connector			" " " Later	1959-60	75295E
			14 amp.	1960	54190042	Wheelbox	1957-60	72693A/B
			35 amp.	1960	54190043	Crosshead and rack assy.	1957-60	743251
			Starting motor	1957-59	25022A/L & M	Outer casing		
			"	1960	25022N/Q	Motor to wheelbox	1957-60	744546
			Suppressor (when fitted)	1958-60	78106A	Wheelbox to wheelbox	1957-60	744547
			SWITCHES			End tube	1957-60	740746
			Dipper	1957-60	31284A/D	Ferrule, casing retaining	1957-60	740715
			Flasher			Grommet, wheelbox	1957-60	740811
			(N. America)	1958	31760A	Arm, left hand	1957-60	745075
			"	1959	31883A	" right hand	1957-60	745084
			Other left hand drive destinations	1959-60	31883A	Blade	1957-60	738734

MORRIS 'Mini-minor' 850 1959-60: Quarter Ton 'Minivan' 1960

Battery	1959-60	GLT7A	Horn	1959-60	70141B	LAMPS—continued		
"	1960	BLT7A	"			Side and flasher (Export)	1959-60	52338A/D
" (cold climates)	1959	BT7A	LAMPS			Stop tail and flasher		
(Van)	1960	GLT9A	Flasher, front (Home)	1959-60	52337A	Left hand	1959-60	53797B
Bulb holder, panel light and parcel shelf	1959-60	554734	Head, Home			Right hand	1959-60	53798B
Bulb	—	987	R.H.D., dip left	1959-60	58388A/E	Left hand (N. America)	1959-60	53799B
Coil, ignition	1959-60	*45113D	Head, Export			Right hand	1959-60	53800B
Control box	1959	37290A/B	R.H.D., dip left	1959-60	51336B/J	(Van)	1960	53833A
"	1960	37290D	L.H.D., dip right	1959-60	*51337F/K	(Van, U.S.A.)	1960	53846A
Distributor	1959-60	40648A/D & F	Head, Export Europe (except France & Sweden)	1959-60	58230A/E	Sleeve, Lucar connector		
" (low grade fuel, special orders)	1960	40648E & H	Head, Export France	1959-60	58231A/E	14 amp.	1959-60	54190042
Flasher unit	1959-60	40707A/D	Head, Export Sweden	1959-60	58456B	25 amp.	1959-60	54190043
Fuse box	1959-60	033283	Head, Export U.S.A.	1959-60	*58497B	14 amp. twin	1959-60	54190119
Generator	1959-60	22700D	Number plate illumination	1959-60	53101H/J	Starting motor	1959	*25071A/B
" (temporary alternative)	1959-60	*22704A	ditto	1960	53837A/B	"	1960	25075A
			ditto (De Luxe)	1959-60	53093H/J	" (alternative)	1960	*25071A/B
			ditto " Later	1960	53836A/B			

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



MORRIS 'Mini-minor' 850 1959-60: Quarter Ton 'Minivan' 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Dipper	1959-60	31800A	Windshield wiper ..	1959-60	31780B	Outer casing ..		
Flasher	1959-60	31945B				Motor to wheelbox ..	1959-60	54711059
Heater	1959-60	78339A				Wheelbox to wheelbox ..	1959-60	54711060
" Later	1960	78384A				End tube	1959-60	740746
Knob	—	54331278	Windshield wipers			Arm, left hand drive ..	1959-60	54711556
Ignition	1959-60	31899A	Motor	1959	75315D	ditto Later	1960	54712031
Lighting	1959-60	31788B	"	1960	75385A	Arm, right hand drive ..	1959-60	54711555
Starting motor ..	1959-60	76438B	" Later	1960	75385B	ditto Later	1960	54712030
Stop lamp	1959-60	31802D	Wheelbox	1959-60	72728A	Blade	1959-60	73873A
			Crosshead and rack assy.	1959-60	743209	" Later	1960	54711613

MORRIS 'Cowley' Van and Pick-up Truck 1950-53

Ammeter	1950-52	*36072D	LAMPS, Head, Export—			Starting motor	1950-53	25021A/F
" Later	1952-53	36149A	<i>continued</i>			Suppressor	1950-53	78105A
Battery	1950-53	GT9A	R.H.D., dip left ..	1950-51	*50445K	SWITCHES		
Coil, ignition ..	1951-53	*45020A/B	" Later	1951-52	*50954A	Dipper	1950-53	31284A
Control box	1950-52	37065E	"	1952	50941A	Ignition	1950-53	31287A
" Later	1952-53	*37138D	"	1953	*51335A	Lighting	1950-53	31126B
Distributor	1950	40152B	" Later	1953	51336A	Knob	—	*316117
"	1951-53	*40237A/B	L.H.D., dip right, pilot			Panel	1950-53	*31271A
Fuse box	1950-52	*385211	type	1950-51	*A50793B	Knob	—	315062
" Later	1952-53	033239	L.H.D., dip right ..	1950-51	*A50445K	Panel Later	1953	*78292A
Generator	1950-52	*22250E/F	" Later	1951-52	*50804D	Knob	—	*768890
" Later	1952-53	22258D	"	1953	*51338A	Starting motor	1950-53	76423A
Horn	1950-52	*069399	" Later	1953	*51337A	Coupling	—	764428
LAMPS			Head, Export Europe	1950-51	*B50793B	Windshield wiper ..	1950-53	*31199A
Head, Home			(not France), pilot type			Trafficators	1950	*54036A
R.H.D., dip left, pilot	1950-51	*50793B	Head, Export Europe			Warning lights		
type (L.H.)			(not France)	1950-51	*B50445K	Ignition	1950-53	*38013B
R.H.D., non-dip, pilot	1950-51	*50362F	ditto Later	1951-52	*50963A	Main beam	1950-53	*38087A
type (R.H.)	1950-51	*50445K	ditto	1953	*51340A	Windshield wipers		
R.H.D., dip left (L.H.)	1950-51	*50446K	ditto Later	1953	51339A	Motor	1950	*75084K
non-dip (R.H.)	1950-51	*50446K	Head, Export France, pilot	1950-51	50679E	"	1951	*75084L
R.H.D., dip left	1951-52	*50954A	type	1950-51	*50790E	Wheelbox	1950-52	75143A
(L.H. and R.H.)	1952	50941A	Head, Export France ..	1951-52	*50962A	" Later	1952-53	72590A/K
"	1953	*51335A	"	1953	*51341A	Crosshead and rack assy.		
" Later	1953	51336A	"	1953	51342A	Cut to 39"	1950-53	736307
Head, Export			Head, Export U.S.A. ..	1953	51343A	Outer casing		
R.H.D., dip left, pilot	1950-51	*50793B	Number plate illumination	1950-53	53101E	Motor to wheelbox ..	1950-53	740482
type			Roof	1950-53	56022D	Wheelbox to wheelbox	1950-53	739972
			Side	1950-53	52139B	End tube	1950-53	740031
			Stop tail	1950-53	53178D	Arm, left hand	1950-53	737496
			Panel light bulb holder	1950-53	39015A	" right hand ..	1950-53	737495
						Blade	1950-53	727803

MORRIS 'Cowley' Saloon 1955-59

Ammeter	1955-56	36182B	LAMPS—continued			SWITCHES—continued		
"	1957-59	36234A	Head, Export Europe	1955	51339A	Heater or blower		
Battery	1955-56	GT9A	(not France)	1956	51339B/H	(optional)	1956	31126B
"	1957	GT7A	ditto	1955	51341A	Knob	—	316162
"	1958	BT7A	ditto	1957-59	51738B/D	Ignition	1955-56	31497A
"	1959	GT9A-3	Head, Export France ..	1956	*51341B/E	Ignition and lighting	1957-59	31655A
Coil, ignition ..	1955-59	*45053A/L	"	1956	51739B	Knob	—	316449
Control box	1955	*37138D	Head, Export U.S.A. ..	1955	51343A	Lighting	1955-56	31126B
"	1956-59	37182A/H	"	1956	51343B/E	Knob	—	316144
" Later	1959	37182J	"	1957-59	51741B	Panel	1955-59	78311A
Distributor	1955-56	*40452B/E	Head, Export Canada ..	1957-58	51987A/B	Knob	1955-56	768930
"	1957-58	40499A	Number plate illumination	1955-59	53093E/H	"	1957-59	768945
" Later	1958-59	40499B/D	Side	1955-59	52215A/D	Starting motor	1955-59	76423A
Flasher unit (L.H.D.)	1955-56	*35003A	Side flasher (L.H.D.)	1955-59	52216A/D	Coupling	—	764428
"	1957-59	35010A	Stop tail (R.H.D.) (L.H.)	1955-56	53310D	Boot, rubber	1955-59	860556
Fuse box	1955-52	033239	" (R.H.)	1955-56	53311D	Stop lamp	1955-59	31082D/H
Generator	1955-56	22258D	"	1957	†53589A	Trafficators (R.H.D.)	1955-59	54044D/E
" Later	1956-59	22258E/F	"	1957	†53589B	Warning light (side lamp,		
Horn	1955-56	*069399	" Later	1957-59	†53589E/F	bulb holder)	1956	39007A
"	1957-59	69046E/F	Stop tail and flasher			Bulb	—	987
Low note (U.S.A. and	1955	*69011J	L.H.D. (left hand) ..	1955-56	53313D	Windshield wipers		
Canada)	1956-59	69046A/F	" (right hand) ..	1955-56	53312D	Motor	1955	*75238A
ditto			U.S.A.	1957	53590A	"	1956-57	75295A
High note (U.S.A. and	1955	*69012J	" Later	1957	53590B	"	1958-59	75212D/E
Canada)	1956-59	69047A/F	"	1957-59	53590E/F	"	1955-56	72666A
ditto			Other models	1959	53590H	Wheelbox	1956-59	72680A/B
Horn relay (U.S.A. and	1955-59	*33116B	"	1957	53588A	" Later	1955-56	*743232
Canada)			"	1957	53588B	Crosshead and rack assy.	1955-56	*743232
LAMPS			Mirror	1955	*062605	Cut to 44"	1957-59	743235
Head, Home			"	1956-59	062612	Outer casing		
R.H.D., dip left ..	1955	51336A	Starting motor	1955-57	25022F/L	Motor to wheelbox ..	1955-59	745150
"	1956	51336B/J	"	1958-59	25022M	Wheelbox to wheelbox	1955-59	745151
"	1957-59	51736B/D	Suppressor	1955	78113A	End tube	1955-59	740746
Head, Export			"	1956-59	78106A	Ferrule, casing retaining	1955-59	740715
R.H.D., dip left ..	1955	51336A	SWITCHES			Arm, left hand	1955	741838
"	1956	51336B/J	Dipper	1955-59	31284A/D	" right hand ..	1955-59	743524
"	1957-59	51736B/D	Heater or blower			"	1955	741839
L.H.D., dip right ..	1955	*51337B	(optional)	1955	31474A	Blade	1955-56	*738735
"	1956	*51337D/E	Knob	—	318378	"	1957-59	737897
"	1957-59	51737B				"		

* See Supersession Chart † When trafficator fitted L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive



MORRIS 'Oxford' Saloon Series I-III 1948-59: 'Traveller' Series I-IV 1953-60: 'Hindustan' Series I-III 1955-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950-51	*36072D	LAMPS—continued			SWITCHES—continued		
"	1952-54	36149A	Head, Export Europe			Dipper	1948-60	31284A/D
" Later	1954-56	36182B	(not France)	1951	*B50445K	Heater or fan	1948-54	78206A
Battery	1957-60	36234A	ditto Later	1951-53	*50963A	Knob	—	768378
"	1948-57	GT9A	ditto	1953	*51340A	Heater or fan Later	1954-55	31474A
"	1958-59	GT9A-3	ditto	1953-56	51339A & B/H	Knob	—	318378
"	1960	BT9A	ditto	1957-59	58008B	Heater or fan	1956	31126B
Bulb holder, panel light ..	1950-54	39015A	(except France & Sweden)			Knob	—	316162
ditto ('Traveller') ..	1955	39015A	Later	1959-60	58268A	Ignition	1948-54	31287A
Bulb holder, warning light	1956	39007A	Head, Export France, pilot			" Later	1954	31187D
Bulb	—	987	type	1948-51	50679E	" and lighting	1955-56	31497A
Coil, ignition	1948-54	*45020A	Head, Export France ..	1951	*50790E	"	1957-60	31655A/E
"	1955-60	*45053	" Later	1951-52	*50962A	Knob	—	316449
		A/M	"	1953	*51341A	Lighting	1948-56	31126B
Control box	1948-52	37065E	" Later	1953-54	51342A	Knob	1948-54	*316117
" Later	1952-55	*37138A/D	"	1955-56	*51341A & B/E	"	1955-56	316144
"	1956-59	37182A/H	"	1957-59	58009B	Panel	1948	31140A
"	1960	37183K & L	" Later	1959-60	58269A	"	1949-51	*31217A
" ('Hindustan')	1960	37182J & K	Head, Export Sweden ..	1959-60	58008B/D	Knob	1948-51	315062
Distributor	1948-49	40152A	Head, Export U.S.A. ..	1949-52	*50804D	Panel	1952-54	*78292A
"	1950	40152B	"	1953-56	51343A & B/E	Knob	—	*768890
"	1951-53	*40237A/B	"	1957-60	58011B	Panel Later	1954-59	78311A
" Later	1953-54	40358A/B & D/H	" (indirect)	1959-60	58010B	"	1960	78346A
"	1954-56	*40427D & F	Number plate (Export) ..	1948-49	53101E	Knob Later	1954-56	768930
"	1956	40499A	"	1950-51	53093E	"	1957-60	768945
High compression	1957-58	40570A	" ('Oxford')	1952-54	53101E	Panel ('Traveller')	1955	*78292A
"	1959-60	40570B/D & F	" Later	1954-59	53093H	Starting motor	1948-49	76428A
" Later	1960	40570E & H	" ('Hindustan')	1955-60	53093H/J	" Later	1949-50	*764401
Low compression	1957-60	40499A/D & F	" ('Traveller')	1955-57	53101H	"	1951-60	76423A
" Later	1960	40499E & H	"	1958-60	53630A	Coupling	1951-60	764428
Flasher unit (L.H.D. and optional)	1954-56	*35003A	Side (U.S.A.)	1948-50	*52142D	Boot, rubber	1955-60	860556
ditto	1957-60	35010A	" Later	1951-54	52139B	Stop lamp	1954-60	31082B/J
Fuse box	1948-52	*37107A	"	1954-60	52215A/D	Windshield wiper ..	1948-54	*31179A
" Later	1952-60	033239	Side and flasher (L.H.D. and optional R.H.D.)	1955-60	52216A/D	Knob	1954-56	31248B
Generator	1948-49	*22250A	Stop tail ('Traveller')	1953-56	53178D/F	Windshield wiper ..	1957-60	*31515A
" Later	1949-52	*22250E/F	Stop tail and number plate	1948-49	*53060A	Knob	—	312865
"	1952-56	22258D	Stop tail (Export)	1948-49	53131E	Trafficators	1948-49	*54013B
"	1956-59	22258E/H	"	1950	53102A	"	1950	*54036A
" (temporary alternative)	1960	22700D	"	1951	53200A	"	1951-52	*54041A
" ('Hindustan')	1960	*22704A	" Later	1952-53	*53197A	" (R.H.D.)	1952-53	54044A/D
"	1960	22258E/H	Stop tail and reflex R.H.D.	1953-54	53288A	"	1954-60	54044D/E
Horn	1948-49	*069344	Left hand	1955-56	53310B	Warning lights		
Low note	1950-55	*69011F/J	Right hand	1955-56	53311B	Ignition	1948-54	*38013B
High note	1950-55	*69012F/J	When trafficators fitted	1957	53589B	Main beam	1951-54	*38087A
"	1956-60	69047A/F	Stop tail and flasher ..	1958-60	53588E/F	Windshield wipers		
LAMPS			Stop tail and reflex L.H.D.	1957	53588A	Motor	1948-50	*75084K
Boot	1948-49	56035E	Stop tail, flasher and reflex L.H.D.	1957	53588E/F	"	1951	*75084L
Head, Home			Left hand	1955-56	53312B	" Later	1951-54	75143A
R.H.D., dip left, pilot type (L.H.)	1948-51	*50793B	Right hand	1955-56	53313B	"	1954	*75247A
R.H.D., non-dip, pilot type (R.H.)	1948-51	*50362F	Except U.S.A.	1957	53588B	"	1954-55	*75238A
R.H.D., dip left (L.H.)	1951	*50445K	U.S.A.	1957	53588E/F	"	1956-57	75295A
non-dip (R.H.)	1951	*50446K	"	1957	53590B	" Later	1958-59	75212D/E
R.H.D., dip left (L.H. and R.H.)	Later	1951-52	Mirror	1958-59	53590E/F	Wheelbox	1959-60	75212F
"	1952	50941A	"	1960	53590H	"	1948-52	72590A/K
"	1953	*51335A	"	1948-51	*62031A	" Later	1953-54	72629A/D
" Later	1953-56	51336A & B/J	"	1952-54	06259E	"	1954-56	72666A
"	1957-58	58006B	"	1955	*062605	Crosshead and rack assy. Cut to 39 1/2"	1948-54	736307
"	1959-60	58006D/E	Reflector, rear (Home)	1956-60	062612	Crosshead and rack assy. Later	1954-56	*743232
Head, Export			Reflex reflector ('Traveller')	1948-49	65423A	ditto Cut to 44 1/2"	1957-60	743235
R.H.D., dip left, pilot type	1948-51	*50793B	Relay, flasher ('Traveller', U.S.A.)	1955-56	57052A/B	Outer casing		
R.H.D., dip left	1951	*50445K	Relay, horn (Series I)	1955	33117A	Motor to wheelbox ..	1948-54	740482
" Later	1951-52	*50954A	Relay, horn (Series II-IV)	1950-54	33095A	" Later	1954-60	745150
"	1952	50941A	Starting motor	1954-60	*33116B	Wheelbox to wheelbox	1948-54	739972
"	1953	*51335A	"	1948	*25015A/D	ditto Later	1954-60	745151
" Later	1953-56	51336A & B/J	"	1949-54	25021A/H	End tube	1948-54	740031
"	1957-58	58006B	"	1954-57	25022F/L	"	1954-60	740746
"	1959-60	58006D/E	" Later	1958-59	25022M	Ferrule, casing retaining	1954-60	740715
L.H.D., dip right, pilot type	1948-51	*A50793B	"	1960	25022N/Q	Arm, left hand	1948-54	*737526
L.H.D., dip right	1951	A50445K	Suppressor ('Traveller')	1955	25021F	" Later	1954-55	741838
"	1951-53	*50804D	"	1951-54	78105A	"	1956-59	743523
"	1953-54	*51338A	"	1955	78113A	"	1960	54711571
"	1954-56	*51337A/B & D/E	SWITCHES	1956-60	78106A	" right hand	1948-54	*737525
"	1957-60	58007A/E	Boot lamp	1948-49	*31180A	"	1954-55	741839
Head, Export Europe (not France), pilot type	1948-51	*B50793B				Blade	1948-54	727759
						" Later	1954-56	*738735
						"	1957-60	737897

MORRIS 'Oxford' Saloon Series V 1959-60

Battery	1959-60	BT9A	Flasher unit	1959-60	35020A	LAMPS		
Bulb holder, panel light ..	1959-60	554734	Fuse box	1959-60	033285	Head, Home		
Bulb	1959	987	Generator	1959	*22297A	R.H.D., dip left	1959-60	58251A/F
Coil, ignition	1959	*45103D	" (temporary alternative)	1960	22700D	Head, Export		
"	1960	*45113D	Horn			R.H.D., dip left	1959-60	58251A/F
Control box	1959	37283A	Low note	1959-60	69046F	L.H.D., dip right	1959-60	58252A/F
"	1960	37290D/E	High note (De Luxe and optional)	1959-60	69047F	Head, Export Europe (except France & Sweden)	1959-60	58253A/E
Distributor	1959-60	40643A/D & F				Head, Export France	1959-60	58254A/E
High compression	1959-60	40643E & H						
Low compression	1959-60	40624A/D & F						
" Later	1960	40624E & H						

* See Supersession Chart

L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS 'Oxford' Saloon Series V 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export Sweden ..	1959	58315A/E	Ignition and starting ..	1959	31781D	Ferrule, casing retaining	1959-60	740715
" " " " Later	1959	58446A/D	Lighting ..	1960	31973B	Grommet, wheelbox ..	1959-60	740811
" " " " ..	1960	*58545B	Panel ..	1959-60	31837A/D	Arm, left hand drive ..	1959	744134
Head, Export U.S.A. ..	1959	58255A/B	Reverse lamp (optional)	1959-60	31828A	" " right hand drive ..	1960	54711539
" " " " ..	1960	*58488A/D	Solenoid, starting motor	1959-60	31849A	" " " " " " ..	1959	744133
Number plate illumination	1959-60	53763A	ditto .. Later	1960	*76465A	Blade ..	1960	54711538
ditto .. Later	1960	53814A	ditto (automatic transmission)	1959	76464A	" " " " " " ..	1959	*737907
Side and flasher			Stop lamp ..	1959-60	*76466A	" " " " " " ..	1960	54711283
L.H. ..	1959-60	52422B/F	Windshield wiper ..	1959-60	31882A	Windshield wipers (later)		
R.H. ..	1959-60	52427B/F	Warning lights		31836A/B	(from Chassis No.38193)		
L.H. (N. America) ..	1959-60	52423B/F	Ignition, bulb holder ..	1959-60	863511	Motor (L.H.D.) ..	1960	75357A
R.H. ..	1959-60	52428B/F	Main beam, bulb holder	1959-60	554734	" (R.H.D.) ..	1960	75358A
Stop tail, flasher and reflex	1959-60	53750A/B	Bulb ..	—	987	Driver side ..	1960	72707A
ditto (N. America)	1959-60	53751A/B	Windshield wipers			Passenger side ..	1960	72713B
Relay, horn ..	1959-60	33188A	Motor, left hand drive	1959-60	75358A	Crosshead and rack assy.	1960	744254
Sleeve, Lucas connector			" " right hand drive	1959-60	75357A	Outer casing		
14 amp. ..	1959-60	54190042	Wheelbox			Motor to wheelbox	1960	54710207
35 amp. ..	1959-60	54190043	Driver side ..	1959-60	72713A/B	Wheelbox to wheelbox	1960	54710208
Starting motor ..	1959	25022M	Passenger side ..	1959-60	72707A	End tube ..	1960	740746
" " " " ..	1960	25022N/Q	Crosshead and rack assy.	1959-60	744254	Ferrule, casing retaining	1960	740715
SWITCHES			Outer casing			Grommet, wheelbox	1960	740811
Dipper ..	1959-60	31800A	Motor to wheelbox ..	1959-60	54710207	Arm, L.H.D. ..	1960	54711538
Flasher ..	1959-60	31885A	Wheelbox to wheelbox	1959-60	54710208	" R.H.D. ..	1960	54711539
Heater ..	1959-60	31828A	End tube ..	1959-60	740746	Blade ..	1960	54711283

MORRIS 'Oxford' Taxi and Hire Car 1947-51

Ammeter ..	1947-50	*364428	LAMPS			SWITCHES—continued		
" " " " ..	1951	36047D	'For Hire' sign ..	1947-51	*52115A	Panel ..	1947-51	31201B
Battery ..	1947-51	SG13E	Head, Home			Knob ..	—	314026
Coil, ignition ..	1947-51	*45020A	Dip left (L.H.) ..	1947-50	*50460D	Reverse lamp ..	1949-51	*31077A
Control arm ..	1947-51	*31090A	Non-dip (R.H.) ..	1947-50	*50461D	Solenoid, starting motor	1947-50	76022B
Control box ..	1947-48	*37032A/B	Dip left (L.H.) ..	1951	*50914B	Solenoid operating ..	1947-50	*31071A
" " " " ..	1949-50	37065E	Non-dip (R.H.) ..	1951	*50915B	Starting motor ..	1951	76427A
" " " " ..	1951	*37076E	Number plate illumination	1947-49	*53064A	Stop lamp ..	1947-51	31281B
" " " " Later	1951	*37139D	" " " " ..	1950	*53111A	Spring ..	—	*315714
Distributor ..	1947-49	40064A/F	" " " " ..	1951	53101E	Trafficators	1947-51	*54039A
" " " " ..	1950-51	40142A/F	Reverse ..	1951	53210F/H	Warning light (ignition) ..	1947-51	*38013B
Fuse box ..	1947-49	*385019	Side ..	1947-49	*52113A	Windshield wipers		
" " " " ..	1950	*385221	" " " " ..	1950	52121A	Motor ..	1947-50	*75074H
" " " " ..	1951	033239	" " " " ..	1951	52154A	" " " " " " ..	1951	*75074J
Generator ..	1947-50	*22446A	Stop tail ..	1951	53178D	Wheelbox (with switch)	1947-51	72583A/F
" " " " ..	1951	*22435A/B	Mirror ..	1947-51	*620128	" " " " " " (less switch)	1947-51	72584A/D
" " " " Later	1951	*22456A/B	Starting motor ..	1947-50	*255378	Crosshead and rack assy.		
Horn ..	1947-49	*69008B	Suppressor ..	1951	25533A/B	Cut to 22 1/2" ..	1947-51	736177
" " " " ..	1950-51	*69040A	SWITCHES			Outer casing		
Inspection lamp sockets ..	1947-51	39507A	Battery master ..	1947-51	*76605B	Motor to wheelbox ..	1947-51	739833
Junction box ..	1947-51	78266A	Ignition and lighting ..	1947-51	*34018B	Wheelbox to wheelbox	1947-51	739937
" " " " ..	1950-51	78264A				End tube ..	1947-51	740031
						Arm ..	1947-51	735064
						Blade ..	1947-51	727803

MORRIS 'Six' Saloon 1948-54

Ammeter ..	1948-51	*36072D	LAMPS, Head, Export—			LAMPS—continued		
" " " " ..	1952-54	36149A	R.H.D., dip left	1951	*50445K	Stop tail ..	1952-53	*53197A
Battery ..	1948-54	GT9A	" " " " Later	1951-52	*50954A	" " " " " " Later	1953-54	53288A
Coil, ignition ..	1948-53	*45039A	" " " " ..	1952	50941A	Mirror ..	1948-50	*62031A
" " " " ..	1954	*45012D	" " " " ..	1953	*51335A	" " " " " " ..	1951-52	062552
Control box ..	1948-52	*37076E	" " " " Later	1953-54	51336A	Panel light bulb holder ..	1950-54	39015A
" " " " ..	1952-54	*37139D	L.H.D., dip right, pilot			Starting motor ..	1948-54	25518A/E
Distributor ..	1948-49	40157B/D	type ..	1948-51	*A50793B	Suppressor ..	1951-54	78105A
" " " " ..	1950-54	40181A	L.H.D., dip right	1951	*A50445K	" " " " " " (sparking plug)	1951-54	78113A
Flasher relay (U.S.A.) ..	1948-52	33095A	" " " " Later	1951-53	*50804D	SWITCHES		
Fuse box ..	1948-52	*37107A	Head, Export Europe	1953-54	*51338A	Boot lamp ..	1948-49	*31180A
" " " " ..	1952-49	033239	(not France), pilot type	1948-51	*B50793B	Dipper ..	1948-54	31284A
" " " " Later	1948-49	22434D	Head, Export Europe			Heater or fan ..	1948-53	78206A
Generator ..	1950-53	*22435A/B	(not France) ..	1951	*B50445K	Knob ..	—	768378
" " " " Later	1953-54	*22456A/B	ditto .. Later	1951-52	*50963A	Heater or fan ..	1954	31248A
Horn ..	1948-54	*69011F	ditto ..	1953	*51340A	Knob ..	—	*316490
Low note ..	1948-54	*69012F	ditto .. Later	1953-54	51339A	Ignition ..	1948-54	31287A
High note ..	1948-54		Head, Export France, pilot			Lighting ..	1948-54	31126B
LAMPS			type ..	1948-51	50679E	Knob ..	—	*316117
Boot ..	1949	56035E	Head, Export France ..	1951-52	*50962A	Panel ..	1948-52	*31217A
Head, Home			" " " " Later	1953	*51341A	Knob ..	—	315062
R.H.D., dip left, pilot	1948-51	*50793B	" " " " ..	1953-54	51342A	Panel ..	1953-54	*78292A
type (L.H.) ..			Head, Export U.S.A. ..	1948-52	*50804D	Knob ..	—	*768890
R.H.D., non-dip, pilot	1948-51	*50362F	" " " " ..	1953-54	51343A	Starting motor ..	1948-50	*764401
type (R.H.) ..	1951	*50445K	Number plate illumination	1948-50	53093E	Coupling " " " " ..	1951-54	76423A
R.H.D., dip left (L.H.)	1951	*50446K	" " " " ..	1951-52	53101E	Stop lamp ..	1954	31082B
" " " " non-dip (R.H.)	1951		Side ..	1953-54	53093E	Windshield wiper	1948-54	*31199A
R.H.D., dip left			" " " " ..	1951-54	52139B	Knob ..	—	315075
(L.H. and R.H.) Later	1951-52	*50954A	" (U.S.A.) ..	1948-52	*52142D	Trafficators		
" " " " " " ..	1952	50941A	Stop tail ..	1948-49	*53151A	" " " " " " ..	1948-49	*54013B
" " " " " " ..	1953	*51335A	" " " " ..	1950	*53102B	" " " " " " ..	1950	*54036A
" " " " " " ..	1953-54	51336A	" " " " ..	1951	53200A	" " " " " " ..	1951-52	*54041A
Head, Export			" " " " ..			" " " " " " Later	1952-54	54044D
R.H.D., dip left, pilot	1948-51	*50793B						
type ..								

* See Supersession Chart L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive R.H.D. ... Right hand drive continued



MORRIS 'Six' Saloon 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers— <i>cont'd</i>			Windshield wipers— <i>cont'd</i>		
Ignition	1948-54	*38013B	Motor	1951	*75084L	Outer casing		
Main beam	1951-54	*38087A	"	1952-54	75143A	Motor to wheelbox ..	1948-54	740482
Windshield wipers			Wheelbox	1948-52	72590A/K	Wheelbox to wheelbox	1948-54	739972
Motor	1948-50	*75084K	"	1953-54	72629A/D	End tube	1948-54	740031
			Crosshead and rack assy.			Arm, left hand	1948-54	*737526
			Cut to 36 $\frac{1}{8}$ "	1948-54	736307	" right hand	1948-54	*737525
						Blade	1948-54	727759

MORRIS 'Isis' Saloon 1956-57: Series II 1958: 'Isis Traveller' 1956-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1956	36182B	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
"	1957-58	36234A	Side and flasher (L.H.D. and optional R.H.D.) ..	1956-58	52216B	Starting motor	1956-58	76423A
Battery	1956-57	GT9A	Stop tail ("Traveller") ..	1956-57	53178F	Coupling	—	764428
"	1958	GT9A-3	Stop tail and reflex			Boot, rubber	—	860556
Coil, ignition	1956-58	*45054D/J	Saloon (when trafficators fitted)			Stop lamp	1956-58	31082E
Control box	1956-58	37183A/H	Saloon (when trafficators fitted)			Windshield wiper	1956	31248B
Distributor	1956-57	40442D	Left hand	1956	53310D	Knob	—	316393
Premium Petrol	1958	40580A/B	Right hand	1956	53311D	Windshield wiper	1957-58	*31515A
Export, low grade Petrol	1956-58	40470A	Saloon (when trafficators fitted)			Knob	—	312865
Flasher unit (L.H.D. and optional R.H.D.) ..	1956	*35003A	ditto	1957	53589B	Trafficators (R.H.D.) ..	1956-58	54044D/E
ditto	1957-58	35010A	Stop tail, flasher and reflex			Windshield wipers		
Flasher relay ("Traveller")	1956-57	33117D	Saloon (L.H.D. and optional R.H.D.) ..			Motor	1956-57	75295A
Fuse box	1956-58	033239	Left hand	1956	53312D	"	1958	75212D
Generator	1956	*22483A	Right hand	1956	53313D	Wheelbox	1956	72666A
"	1957-58	*22483B/D	Except U.S.A.	1957	53588B	" Later	1956-58	72680A/B
Horn			U.S.A.	1958	53588E	Crosshead and rack assy.	1956	*743232
Low note	1956-58	69046A/F	"	1957	53590B	Cut to 44 $\frac{3}{8}$ "	1957-58	743235
High note	1956-58	69047A/F	U.S.A.	1957	53590B	Outer casing		
Horn relay	1956-58	*33116B	"	1958	53590E	Motor to wheelbox ..	1956-58	745150
			Mirror	1956	062612	Wheelbox to wheelbox	1956-58	745151
LAMPS			Reflex reflector			End tube	1956-58	740746
Head, Home			("Traveller")	1956-57	57052B	Ferrule, casing retaining	1956-58	740715
R.H.D., dip left ..	1956	51336B/J	Starting motor	1956-58	25521D	Arm, left hand	1956-58	743524
"	1957-58	51736B/D	Suppressor	1956-58	78106A	" right hand	1956-58	743523
Head, Export			SWITCHES			Blade	1956	*738735
R.H.D., dip left ..	1956	51336B/J	Dipper	1956-58	31284A	"	1957-58	737897
"	1957-58	51736B/D	Heater or fan	1956	31126B	Borg Warner automatic		
L.H.D., dip right ..	1957-58	51737B	Knob	1956	316162	transmission (optional)		
Head, Export Europe			Ignition	1956	31497A	Gear indicator quadrant		
(not France)	1956	51339B/H	Ignition and lighting ..	1957-58	31655A	Left hand drive	1957-58	56069A
ditto	1957-58	*51738B	Lighting	1956	31126B	Right hand drive	1957-58	56068A
Head, Export France			Knob	1956	316144	Switch		
"	1957-58	*51341B/E	Panel rheostat	1956-58	78311A	Cutout	1957-58	*31077E
"	1957-58	51739B	Knob	1956	768930	Borg Warner overdrive		
Head, Export U.S.A. ..	1957-58	*51741B	Solenoid, starting motor			equipment (optional)		
Head, Export N. America			(automatic transmission)	1957-58	*76443A	Relay	1957-58	33177A
(except U.S.A.)	1957-58	51987A/B	Solenoid operating			Switches		
Number plate illumination			(automatic transmission)	1957	*31446B	Kick-down	1957-58	31632A/B
Saloon	1956-58	53093H	ditto	1958	*31247D	Centrifugal	1957-58	76112A/D
"Traveller"	1956-57	53101H	Knob	1957-58	313668			
Side (when trafficators fitted)	1956-58	52215B						

MORRIS 5 cwt. Van 1946-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946	*364647	LAMPS			SWITCHES		
"	1947	*364510	Dash	1951-53	A56029B	Dipper	1946-53	*360020
Battery	1948-53	36047D	Head, Home			Ignition and lighting ..	1946-53	*344694
"	1946-53	BNW9F	R.H.D., vertical dip ..	1946-47	*50370A	ditto (Export)	1948-53	*34018A
Bulb holder, panel light	1950-53	39007A	" dip left (L.H.) ..	1948-49	*50632D	Starting motor	1946-50	*764401
"	1950-53	39010A	" non-dip (R.H.) ..	1948-49	*50633D	"	1951-53	76423A
Coil, ignition	1946-53	*45016A	" dip left (L.H.) ..			Coupling	1951-53	764428
Control box	1946-50	*332195	" Later	1949-53	50649B	Stop lamp	1946-53	31281B
"	1951-53	332151	" non-dip (R.H.) ..			Spring	—	*315714
" (Export)	1948-53	37081H	" Later	1949-53	50746B	Trafficator	1946-53	31379A
Distributor	1946-53	*40056A/J	Head, Export			Trafficators	1946-50	*54015B
Fuse box	1947-53	*37130A	R.H.D., dip left ..	1948-49	*50632D	"	1951-53	*54043A
Generator	1946-51	22007B	" Later	1949-53	50649B	Warning light (ignition) ..	1946-53	*38012B
"	1951-52	22448B	Stop tail and number plate			Windshield wipers		
" Later	1952-53	22448D	ditto Later	1947-53	*A53008B	Motor	1946-51	*75121A
"	1953	22472A	Mirror	1950-53	62515A	"	1952-53	75165A
" (Export)	1946-52	22448B	Starting motor	1946-50	*250405	Arm	1946-53	*735049
Horn	1946-53	*069376	" Later	1951-52	25032A	Blade	1946-53	727802
Horn push	1946-51	*762190	Suppressor	1951-53	78105A			

MORRIS Quarter Ton Van and Pick-up Truck 1954-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1954-57	GT7A	Distributor	1954-55	*40299E	Generator	1954-55	22258D
"	1958-60	BT7A	" Later	1956	*40299L	"	1956-59	22258E/H
Coil, ignition	1954	*45020A	" (high compression)	1957-58	40494A	"	1960	22700D
"	1955-60	*45053	" Later	1958-59	40561B	" (temporary alternative)	1960	*22704A
Control box	1954-56	*37138D	" (low compression)	1957-58	40561H/L	Horn	1954-56	*069399
" Later	1956-58	37182A/H	" Later	1958-59	40569A	Low note (N. America)	1954-55	*69011F/J
"	1959	37182J	" Later	1958-59	40569B/F	ditto	1956-60	69046A/F
"	1960	37183K & L	" Later	1960	40569J	High note (N. America)	1954-55	*69012F/J
			Fuse box	1954-60	033239	ditto (and optional)	1956-60	69047A/F
						Horn push	1960	*31010B

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS Quarter Ton Van and Pick-up Truck 1954-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			Warning lights—continued		
Head, Home			Side	1954-60	52139B/E	Ignition bulb holder ..	1959-60	863511
R.H.D., dip left ..	1954-55	51336A	Stop tail	1954-60	53178D/H	Bulb	1959-60	987
" " " ..	1956	51336B/J	Reflex reflector	1955-60	57047A/D	Main beam, bulb holder ..	1954-57	39007A
" " " ..	1957-60	51736B/D	Sleeve, Lucar connector			" " " " ..	1959-60	554734
" " " ..	1960	51336B/J	14 amp.	1960	54190042	Bulb	—	987
Head, Export			35 amp.	1960	54190043	Oil, bulb holder	1959-60	863511
R.H.D., dip left ..	1954-55	51336A	Starting motor	1954-57	25022F/L	Bulb	—	987
" " " ..	1956	51736B/D	" " " " ..	1958-59	25022M	Petrol reserve	1955	*38013B
" " " ..	1957-60	51736B/J	Suppressor (when fitted)	1960	25022N/Q	Side lamp, bulb holder ..	1954	39007A
" " " ..	Later	1960		1954-60	78106A	Bulb	—	987
L.H.D., dip right ..	1954	*51337A	SWITCHES			Windshield wipers		
" " " ..	1955	*51337B	Dipper	1954-60	31284A/D	Motor	1954-56	75151A
" " " ..	1956	*51337D/E	Ignition	1954-60	31287A/F	" " " " ..	1957	75295E
" " " ..	1957-60	51737B	Lighting	1954-56	31126B	" " " " ..	1958-59	75295E
" " " ..	Later	1960	Knob	—	*316117	Wheelbox	1954-56	72642A/E
Head, Export Europe			Knob	1957-60	*31251A/F	" " " " ..	1957-60	72693A/B
(not France)	1954-55	51339A	Lighting	—	316154	Crosshead and rack assy.		
ditto	1956	51339B/H	Panel	1954-60	31140A/B	Cut to 31 1/2"	1954-56	738764
ditto	1957-59	51738B	Starting motor	1954-60	76423A	Crosshead and rack assy.	1957-60	743251
(except France & Sweden)			Coupling	—	764428	Outer casing		
ditto	1959-60	58270A	Boot, rubber	1954-60	860556	Motor to wheelbox	1954-56	740482
Head, Export France ..	1954-55	*51341A	Stop lamp	1954-60	31082B/J	" " " " ..	1957-60	744546
" " " ..	1956	*51341B/E	Windshield wiper	1954	*31217A	Wheelbox to wheelbox ..	1954-56	739973
" " " ..	1957-59	51739B	Knob	—	315062	" " " " ..	1957-60	744547
" " " ..	Later	1959-60	Windshield wiper	1955	31474A	End tube	1954-56	740031
" " " ..	1960	58231A/E	Knob	—	318378	" " " " ..	1957-60	740746
Head, Export Sweden ..	1959-60	58450A	Windshield wiper	1956-60	*31515A	Ferrule, casing retaining	1957-60	740715
Head, Export U.S.A. ..	1954-55	51343A	Knob	1956	316388	Grommet, wheelbox	1957-60	740811
" " " ..	1956	51343B/E	Warning lights			Arm, left hand	1954-56	737444
" " " ..	1957-59	51741B	Flasher, bulb holder ..	1954-57	39007A	" " " " ..	1957-60	745075
" " " ..	1960	*58497A/B	Bulb	—	987	" " " " ..	1954-56	737445
Head, Export Canada ..	1959	51987A/B	Ignition	1954	*38013B	Blade	1957-60	745084
Number plate illumination	1954-60	53291A/B				" " " " ..	1954-56	727802
						" " " " ..	1957-60	738734

MORRIS Quarter Ton Van (G.P.O.) 1954-60

Battery	1954-57	GT9A	Reflex reflector	1955-60	57047D	SWITCHES—continued		
" " " ..	1958-59	GT9A-3	Sleeve, Lucar connector			Windshield wiper	1955-60	*31515A
" " " ..	1960	BT9A	14 amp.	1960	54190042	Knob	1955-59	316388
Bulb holder, panel light ..	1954	39015A	35 amp.	1960	54190043	" " " " ..	1960	312865
Coil, ignition	1954	*45020A	Starting motor	1954-59	25022A/L & M	Trafficators	1954-58	54050A
" " " ..	1955-60	*45053	" " " " ..	1960	25022N/Q	Warning lights		
Control box	1954-56	D/J/M	Steering column control ..	1960	33526B	Bulb holder, ignition and		
" " " ..	Later	*37138D	Slip ring	1960	38269A	oil pressure	1958-60	863511
" " " ..	1956-59	37182A/H	Suppressor (when fitted)	1954-60	78106A	Bulb holder, main beam	1958-60	554734
" " " ..	1960	37183K & L				Bulb	—	987
Distributor	1954-55	*40299E	SWITCHES			Windshield wipers		
" " " ..	1956	*40299L	Dipper	1954-60	31284A/D	Motor	1954-59	75143A
" " " ..	Later	40494A	Flasher	1960	31883A	" " " " ..	1960	75295E
" " " ..	1960	40494B/D & F	Horn push and trafficator	1958	31755D/F	Wheelbox	1954-59	72654A
" " " ..	1960	40494E & H	Horn push and flasher			" " " " ..	1960	72693B
Flasher unit	1958-60	35012A	" " " " ..	1958-59	31756F	Crosshead and rack assy.		
Fuse box	1954-58	033239	Ignition	1954-57	31287A/B	Cut to 44 1/2"	1954-59	736307
" " " ..	Later	033239	" (Engineers' Van)	1958-60	31287F	Crosshead and rack assy.	1960	743251
Generator	1954-56	*37131A	" (Mail Van,)			Outer casing		
" " " ..	1954-56	22258D	serviced by G.P.O.) ..	1958-60	31786A/B	Motor to wheelbox	1954-59	739858
" " " ..	Later	22258E/F	Lighting	1954-57	31126B	" " " " ..	1960	744546
" " " ..	1956-59	222700D	Knob	—	*316117	Wheelbox to wheelbox ..	1954-59	739973
" " " ..	1960		Lighting	1958-60	*31251D	" " " " ..	1960	744547
" " " ..	(temporary alternative)		Knob	—	316154	End tube	1954-59	740031
Horn	1954-57	*22704A	Panel	1954-60	31140A/B	" " " " ..	1960	740746
" " " ..	1958-60	069399	Starting motor	1954-60	76423A	Ferrule, casing retaining	1954-59	738410
" " " ..	1958-60	69046F	Coupling	1954-60	76423A	" " " " ..	1960	740715
LAMPS			Boot, rubber	1954-60	860556	Arm, left hand	1954-59	737444
Flasher	1958-60	53778A	Stop lamp	1954-60	31082B/J	" " " " ..	1960	745075
Head			Trafficator	1954-60	31082B/J	" " " " ..	1954-59	737445
Metal wings	1954-56	51336A & B/J	Windshield wiper	1954	*31217A	Blade	1954-59	727803
" " " ..	1957-60	51736B/D	Knob	—	315062	" " " " ..	1960	738734
" " " ..	1955-57	51026A						
Number plate illumination	1954-60	53291A/B						
Side	1954-60	52139B/E						
Stop tail	1954-60	53178D/H						

MORRIS 10 cwt. Van 1946-50

Ammeter	1946-50	*364428	LAMPS, Head, Home—			Starting motor		
Battery	1946-50	BNW9A	<i>continued</i>			" " " " ..		
Coil, ignition	1946-50	*45020A/B	R.H.D., vertical dip	1948-49	*50632D	SWITCHES		
Control box	1946-47	*37003A	" (L.H.)	1948-49	*50633D	Battery master	1946-50	76605B
" " " ..	1948-50	37057E	" non-dip (R.H.)	1948-49		Dipper	1946-50	31284A
Distributor	1946-49	*406269	" vertical dip	1949	50649A/B	Ignition and lighting ..	1946-48	*34022A
" " " ..	1950	*40205A/B	" (L.H.) Later			" " " " ..	1949-50	*34026A
Generator	1946-50	22449A	" non-dip	1949	50746B	Panel	1946-50	*31276A
" " " ..	1946-50	069344	" (R.H.) Later	1950	50413D	Starting motor	1946-50	*764150
LAMPS			" dip left (L.H.)	1950	50746B	Trafficator	1946-50	031046
Head, Home			" non-dip (R.H.)	1950		Trafficators	1946-50	*54017B
R.H.D., non-dip ..	1946	50129A	Head, Export			Warning light (ignition) ..	1946-50	*38013B
" " " ..	1947	*50370A	Vertical dip	1948-49	*50632D	Windshield wipers		
" " " ..	1947	*50549A	" " " " ..	1949-50	50649A/B	Motor	1946-50	733179
" " " ..	(L.H.)		" " " " ..	1946-49	*53008B	Arm	1946-50	*735049
" " " ..	non-dip (R.H.)		Stop tail and number plate	1950	*53060A	Blade	1946-50	727802
			Stop tail					

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive



MORRIS Half Ton Van and Pick-up Truck 1954-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954-56	36149A	LAMPS—continued			SWITCHES—continued		
"	1957-60	36234A	Head, Export Europe			Starting motor	1954-60	76423A
Battery	1954-57	GT9A	(not France)	1954	*51340A	Coupling	1954-60	764428
"	1958-59	GT9A-3	ditto Later	1954-55	51339A	Boot	1954-60	860556
"	1960	BT9A	ditto	1956	51339B/H	Stop lamp	1955-60	31082D/J
Coil, ignition	1954-56	*45020A/B	ditto	1957-59	51738B/D	Windshield wiper	1954	*31199A
"	1957-60	*45053	(except France & Sweden)			Knob		315075
"			Later	1959-60	58270A	Windshield wiper	1955-56	31474A
Control box	1954-55	*37138A/D	Head, Export France	1954-55	51341A	Knob		318385
"	1956-59	37182A/H	"	1956	51341B/E	Windshield wiper	1957-60	*31515A
"	1959	37182J	"	1957-59	51739B	Knob		312865
"	1960	37183K	"	1959-60	58271A			
Distributor	1954-56	40358D/E	Head, Export Sweden	1959-60	58450A	Warning lights		
"	1957-59	40499A/D & F	Head, Export U.S.A.	1954-55	51343A	Flasher	1955-56	*38087A
"	1960	40499E & H	"	1956	51343B/E	Ignition	1954-56	*38013B
Flasher relay	1954-56	33117A	"	1957-60	51714B	Main beam	1954-56	*38087A
Fuse box	1954-60	033239	Head, Export Canada	1958-60	51987A/B			
Generator	1954-55	22258D	Number plate illumination	1954-60	53101E/J	Windshield wipers		
"	1956-59	22258E/F	Roof	1954-60	56022D	Motor	1954-56	75143A
"	1960	22700D	Side (R.H.D.)	1954-56	52139B	"	1958-59	75295A
"			Side and flasher (L.H.D.)	1954-56	*52162B/E	"	1959-60	75212D/E
"			"	1957-60	52216D	"	1959-60	75212F
"			Stop tail	1954-56	53178D/F	Wheelbox or clutch		
Horn	1954-56	*069399	Stop tail, flasher and reflex	1957-60	*53479D	housing	1954-56	72629A/D
Low note (N. America)	1955	*69011J	ditto (U.S.A.)	1957-60	53634A	ditto	1957-60	72680A/D
High note (N. America)	1955	*69012J	Reflex reflector	1955-56	57047A/D	Crosshead and rack assy.		
ditto (and optional)	1956-60	69047A/F	Starting motor	1954-56	25021A/F	Cut to 39 3/4"	1954-56	736307
Horn relay (when twins fitted)	1955-60	*33116B	"	1957-59	25022A/L & M	" 44 3/4"	1957-60	743235
LAMPS			Suppressor (when fitted)	1960	25022N/Q	Outer casing		
Head, Home			"	1954-57	78105A	Motor to wheelbox	1954-56	740482
R.H.D., dip left	1954	*51335A	"	1958-60	78106A	"	1957-60	745150
"	Later	51336A	SWITCHES			Wheelbox to wheelbox	1954-56	739972
"	1956	51336B/J	Dipper	1954-60	31284A/D	End tube	1957-60	745151
"	1957-60	51736B/D	Ignition	1954-56	31287A	"	1954-56	740031
Head, Export			Ignition and lighting	1957-60	31655A	"	1957-60	740746
R.H.D., dip left	1954	*51335A	Knob		316449	Ferrule, casing retaining	1957-60	740715
"	1954-55	51336A	Lighting	1954-56	31126B	Arm, left hand	1954-56	737496
"	1956	51336B/J	"		*316117	"	1957-59	743524
"	1957-60	51736B/D	Panel	1954-56	*78292A	"	1960	54711571
"	1954	*51338A	Knob	1954	*768890	"	1957-59	743523
"	1954	*51337A	Panel	1955-56	786651	"	1960	54711572
"	1955	*51337B	"	1957-59	78311A	Blade	1954-56	727803
"	1956	*51337D/E	"	1960	78346A	"	1957-60	737897
"	1957-60	51737B	Knob	1957-60	768945			

MORRIS COMMERCIAL 15/20 cwt. PV 1946-53

Ammeter	1946-47	*364510	LAMPS, Head, Home—			LAMPS—continued		
"	1948-53	36047D	continued			Stop tail and number plate	1946-49	*53031D
Battery	1946-50	SLT13A	R.H.D., non-dip (R.H.)	1946-47	*50432A	ditto	1950-52	*53063B
"	1951-53	GT11A	" dip left (L.H.)	1948-49	*50433A	ditto (G.P.O.)	1953	53295A
Coil, ignition	1946-53	*45020A/B	" non-dip (R.H.)	1948-49	50434A	Mirror	1947-53	*620601
Control box	1946-47	*37031A	" dip left (L.H.)	1950	*50854D	Starting motor	1946-48	*255378
"	1948-50	37057E	" non-dip (R.H.)	1950	*50855B	"	1949	*25524A
"	1951-52	37065E	" dip left			"	1950-53	25533A/D
"	1952-53	*37138A/B	(L.H. and R.H.)	1951	*50728D	Suppressor (distributor)	1951-53	78114A
Distributor	1946-49	40069A/B	ditto Later	1951-53	*51014A/F	" (plug)	1951-53	78106A
"	1950-53	40069D/H	Head, Export			SWITCHES		
Fuse box	1952-53	033240	R.H.D., dip left	1950	*50854D	Battery master (G.P.O.)	1951-53	76602B
Generator (L3-T3)	1946-49	24524A	"	1951	*50728D	Horn push and dipper	1946-48	*31061B
"	1946-49	22449A	"	Later	*51014A/F	"	1949-53	*31076B
"	1950-52	*22250E/F	L.H.D., dip right	1950	*A50854A	Ignition and lighting	1946-53	*34018A
"	1952-53	22258D	"	1951	*A50728D	Starting motor	1946-53	76427A
"	1946-53	*069213	"	1951-53	*51016A/F	Trafficator (G.P.O.)	1951-53	031296
Horn	1946-53	*39506A	Head, Export Europe			Trafficators (G.P.O.)	1951-53	*053830
Inspection lamp sockets	1946-53	78266A	(not France)	1950	*B50854D	Warning light (ignition)	1946-53	*38013B
Junction box	1946-53		ditto	1951	*B50728D	Windshield wipers		
LAMPS			ditto Later	1951-53	*51015A/F	Motor	1946-47	*733068
Dash	1949-53	56031A	Number plate illumination	1953	53101E	"	1948-53	*75049A
Head, Home			Roof	1949-53	56022D	"	1946-53	735065
R.H.D., dip left (L.H.)	1946-47	*50431A	Side	1950-53	52139B	Arm	1946-53	735063
			Stop tail	1953	53178D	Blade	1946-53	727805

MORRIS COMMERCIAL 25/30 cwt. LC3 1946-52

Ammeter	1946-49	*364428	Inspection lamp sockets	1946-52	39507A	LAMPS, Head, Export—		
"	1950-52	36047D	Junction box	1946-52	78266A	continued		
Battery	1946-51	SLT13A	LAMPS			R.H.D., dip left		
"	1952	GT11A	Dash (G.P.O.)	1951-52	56031A	(L.H. and R.H.)	1950	*50854D
Coil, ignition	1946-52	*45020A/B	Head, Home			ditto	1951	*50728D
Control box	1946-47	*37031A	R.H.D., dip left (L.H.)	1946-49	50440A	ditto Later	1951-52	*51014A/F
"	1948-49	37057E	" non-dip (R.H.)	1946-49	50441A	L.H.D., dip right	1950	*A50854D
"	1950-52	37065E	" dip left (L.H.)	1950	*50854D	"	1951	*A50728D
"	Later	1952	" non-dip (R.H.)	1950	*50855A	"	1951-52	*51016A/F
"	1946	*405516	" dip left			Head, Export Europe		
Distributor	1946-49	40069A/B	(L.H. and R.H.)	1951	*50728D	(not France)	1950	*B50854D
"	1950-52	40069D/H	ditto Later	1951-52	*51014A/F	ditto	1951	*B50728D
Fuse box	1952	033240	Number plate illumination	1953	53101E	ditto Later	1951-52	51015A/F
Generator	1946-49	22449A	Roof	1949-53	56022D	Side	1946-48	52105A
"	1950-52	*22250E/F	Side	1950-53	52139B	"	1949-52	52154A
"	1952	22258A/B	Stop tail	1953	53178D	Stop tail and number plate	1946-52	*53063B
"	Later	1952				Mirror	1946-52	*62528A
Horn	1946-52	*069213				Panel light bulb holder	1946-52	39007A

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS COMMERCIAL 25/30 cwt. LC3 1946-52—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Starting motor	1946-48	*255378	SWITCHES—continued			Warning light (ignition) ..	1946-49	*318505
" " " " " " " "	1949	*25524A	Horn push and dipper ..	1946-52	*31329A	" " " " " " " "	1950-52	*38013B
" " " " " " " "	Later	25533A/B	ditto (Export) ..	1946-52	*31061B	Windshield wipers		
Suppressor (distributor) ..	1951-52	78114A	Ignition and lighting ..	1946-49	*344540	Motor	1946-48	733071
" (plug)	1951-52	78106A	" " " " " " " "	1950-52	*34018A	" (steel cab)	1949-52	733071
SWITCHES			Starting motor	1946-52	76427A	" (Van)	1949-52	*75049A
Battery master (G.P.O.)	1951-52	76602B	Trafficator (G.P.O.) ..	1951-52	031296	" (L.H.D.)	1951-52	75138B
			Trafficators (G.P.O.) ..	1951-52	*053830	Arm	1946-52	*735045
						Blade	1946-52	727802

MORRIS COMMERCIAL 25/35 cwt. 1946

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946	*364428	LAMPS			SWITCHES—continued		
Battery	1946	SLT13A	Head			Ignition and lighting ..	1946	*344540
Coil, ignition	1946	*45020A	Non-dip	1946	50129A	Starting motor	1946	76427A
Control box	1946	*37031A	Side	1946	52036A	Adaptor plate	—	78275A
Distributor	1946	40069A/B	Stop tail and number plate	1946	*53028B	Warning light (ignition) ..		*318505
Generator	1946	22449A	Starting motor	1946	*255378	Windshield wipers		
Horn	1946	069344	SWITCHES			Motor	1946	733071
Junction box	1946	78266A	Horn push and dipper ..	1946	*380150	Arm	1946	*735045
						Blade	1946	727802

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-60: LCO 1956-57: LCO5 (Diesel) 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954-60	36125A/B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol)	1953-59	GT11A	R.H.D., dip left ..	1956-59	51344B	Panel	1953-54	31192A
" (Diesel)	1960	BT11A	" " " " " " " "	1959-60	51344D/F	Knob	—	315062
Bulb holder, speedo. light	1953-60	39007A	L.H.D., dip right ..	1953	*50528M	Panel	1955	31201D
" " " " " " " "	1953-60	39010A	" " " " " " " "	1954	*51345A	Knob	1956-60	*312850
Bulb	—	987	" " " " " " " "	1955	*51345B	Panel	1956-60	*31557A
Coil, ignition	1953-54	*45020A/B	" " " " " " " "	1956-60	*51345D/F	Knob	—	316132
" " " " " " " "	1955	*45053A	Head, Export Europe			Solenoid, starting motor		
" " " " " " " "	1956	*45054D	(not France)	1953	*50961A	(Diesel)	1956-60	*76443A
" " " " " " " "	1957-60	*45053	ditto	1954-55	51346A	Solenoid operating		
Control box	1953-54	H/M	ditto	1956-59	51346B/E	(Diesel)	1956-58	*31294A
" " " " " " " "	1954-55	37065E	(except France & Sweden)			Starting motor (Petrol)	1953-60	76423A
" " " " " " " "	Later	*37138A/D	Later	1959-60	58272A/B	Coupling	1953-60	764428
" " " " " " " "	1956-59	37182A/H	Head, Export France ..	1959-60	58273A/B	Stop lamp	1955-60	31082E/J
" " " " " " " "	1959-60	37182J	Head, Export Sweden ..	1960	58451A/B	Windshield wiper	1953-54	31192A
" " " " " " " "	1960	37182K	Head, Export U.S.A. ..	1960	*58499A/B	Knob	1955-60	315062
Distributor	1953	40069D/H	Number plate illumination	1953-60	53101E/J	Windshield wiper	1955	31201D
" " " " " " " "	1954-56	*40321E/F	Side	1953-60	52139B/E	Knob	1956-60	318385
" " " " " " " "	1957-59	40496A/B	Stop tail	1953-60	53178D/H	Windshield wiper	1956-60	*31557A
" " " " " " " "	1960	40496D & F	Sleeve, Lucas connector			Knob	—	316388
" " " " " " " "	Later	40496E & H	14 amp.	1960	54190042	Warning lights		
Fuse box	1953-60	033239	35 amp.	1960	54190043	Ignition	1953-60	38049A
Generator	1953-55	22258D	Starting motor (Petrol) ..	1953	25533A/B	Main beam	1953-60	38052B
" " " " " " " "	1956-59	22258E/F	" " " " " " " "	1954-60	26043A	Windshield wipers		
" " " " " " " "	1960	22700D	" " " " (Diesel) ..	1956-57	26122A	Motor	1953-60	75146A/B
" (temporary alternative)	1960	*22704A	" " " " " " " "	1958-59	26135A	Wheelbox	1953-60	72624A/H
Horn	1953-58	*069213	" " " " " " " "	1960	26051J	Crosshead and rack assy.		
" " " " " " " "	1959-60	69046F	" " " " " " " "	1960	26051K/L	Left hand drive ..	1953-60	738499
Junction box	1953-60	78265A	Suppressor (distributor) ..	1953-55	78114A	Right hand drive ..	1953-60	738987
LAMPS			(plug)	1953-60	78106A	Outer casing		
Head, Home			SWITCHES			Motor to wheelbox ..	1953-60	739870
R.H.D., dip left ..	1953	50992A	Fuel gauge (Diesel) ..	1959-60	*31294A/B	Wheelbox to wheelbox		
" " " " " " " "	1954-55	51344A	Horn push and dipper			Left hand drive ..	1953-60	*739974
" " " " " " " "	1956-59	51344B	Left hand drive ..	1953	*31386A	End tube	1953-60	740031
" " " " " " " "	Later	51344D/F	Right hand drive ..	1953	*31305A	Arm, left hand crank ..	1953-60	737639
Head, Export			Horn push and dipper ..	1954-60	*31305A	" " " " " " " "	1953-60	737640
R.H.D., dip left ..	1953	50992A	Ignition	1953-60	31187D/E	Blade	1953-60	727803
" " " " " " " "	1954-55	51344A	Lighting	1953-55	31126D			
			Knob	—	315042			
			Lighting	1956-60	*31251A/E			
			Knob	—	*316117			

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-59: LCO5X (Diesel) 1958-59 (G.P.O. Models)

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954-59	36125B	Distributor	1953	40069D/H	LAMPS—continued		
Battery (Petrol)	1953-59	GT11A	" " " " " " " "	1954-56	*40321E/F	Side	1953-56	52139E
" (Diesel)	1958-59	MT19E	" " " " " " " "	1956-59	40496A/B	" " " " " " " "	1957-59	*52105A
Bulb holder, panel light	1953-59	39010A	Fuse box	1953-59	033239	Stop tail and number plate	1953-59	53295A/B
" " " " " " " "	1953-59	39007A	Generator (Petrol) ..	1953-56	22258D	Reflex reflector	1955-59	57116A
Bulb	—	987	" " " " " " " "	1956-59	22258E/F	" " (alternative)	1956-58	57033D/E
Coil, ignition	1953-54	*45020A	" " " " (Diesel) ..	1958-59	*22483D	Starting motor (Petrol) ..	1953	25533B
" " " " " " " "	1955	*45053D	Horn	1953-59	*069213	" " " " (Diesel) ..	1954-59	26043A
" " " " " " " "	1956	*45054E	Junction box	1954-59	78265A	" " " " " " " "	1958-59	26125A
" " " " " " " "	1957-59	*45053	LAMPS			Suppressor (distributor) ..	1953-59	78114A
Control box (Petrol) ..	1953-54	H/M	Head	1953	*50992A	" (plug)	1953-59	78106A
" " " " " " " "	1954-55	37065E	" " " " " " " "	1954-55	51344B/D			
" " " " " " " "	1956-59	*37138D	" " " " " " " "	1956-59	51344B & D/F			
" " " " (Diesel) ..	1958-59	37182E/H						
" " " " " " " "	1958-59	37183H						

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-59: LCO5X (Diesel) 1958-59 (G.P.O. Models)—cont'd

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Battery master	1953-59	76602B	Solenoid, starting motor (Diesel)	1958-59	*76443A	Motor	1953-55	75146A
Fuel gauge (Diesel) ..	1958-59	*31294A	Starting motor (Petrol) ..	1953-59	76423A	" (Engineers' cab) ..	1956-59	75299A/B
Heater plug (Diesel) ..	1958-59	31425B	Coupling	—	764428	Wheelbox (offside) ..	1957-59	75146A/B
Knob	—	315042	Stop lamp	1953-59	31082D/H	" (nearside)	1953-59	72624H
Horn push and dipper..	1953-59	*31305A	Trafficator	1953-59	031296A/E	Crosshead and rack assy.	1953-59	72643A
Ignition	1953-55	31187D	Windshield wiper	1953-54	31192D	Outer casing	—	738499
"	1956-59	—	Knob	—	315062	Motor to wheelbox ..	1953-59	739870
"	—	—	Windshield wiper	1955	31201D	Wheelbox to wheelbox ..	1953-59	739972
Lighting	1953-55	31126B	Knob	—	318385	End tube	1953-59	740031
Knob	—	315042	Windshield wiper	1956-59	*31557A	Ferrule, casing retaining	1953-59	738410
Lighting	1956-59	*31251	Knob	—	316388	Arm, left hand crank ..	1953-55	737639
"	—	—	Trafficators	1953-59	54050A	ditto	1956-59	737496
Knob	—	*316117	Warning lights	—	—	ditto (Engineers' cab)	1957-59	737639
Panel	1953-54	31192D	Ignition	1953-55	38049A	Arm, right hand crank ..	1953-55	737640
Knob	—	315062	"	1956-59	*38013B	ditto	1956-59	737495
Panel	1955	*31201D	Main beam	1953-59	38052B	ditto (Engineers' cab)	1957-59	737640
Knob	—	*312850				Blade	1953-55	727803
Panel	1956-59	*31557A				"	1956-59	732642
Knob	—	316132				" (Engineers' cab) ..	1957-59	727803

§ FUEL INJECTION EQUIPMENT (B.M.C. 2.2 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958-59	BPE4A65U210S6355EL	Nozzle holder	1958-59	BKB35S668
Governor	1958	BEPAMZ80A131	Nozzle	1958-59	BDN12SP6A
"	1959	BEPBMZ80A131	Filter	1958	F2-9
Venturi	1958-59	BEPK42-42-111S	"	1959	F2B-9

MORRIS COMMERCIAL 35/40, 45/55 and 60/70 cwt., 5 ton Forward Control, Tipper and ECV13/3 1946-48

Ammeter	1946-47	*364510	LAMPS—continued			SWITCHES—continued		
"	1948	36047D	Head, Home			Ignition and lighting ..	1946-48	*344540
Battery	1946-48	SLT13A	R.H.D., dip left (L.H.)	1946-48	50440A	Solenoid, starting motor	1946-48	76022B
" (ECV13/3)	1946-48	ST11A	" non-dip (R.H.)	1946-48	50441A	(Forward Control) ..	—	—
Coil, ignition	1946-48	*45020A	Head, Export			Solenoid operating	1946-48	*317075
Control box	1946-47	*37032A	Vertical dip (L.H.) ..	1946-48	*50427A	(Forward Control) ..	1946-48	76427A
"	1948	37065E	" (R.H.) ..	1946-48	*50464A	Starting motor	1946-48	76427A
Distributor	1946-48	406354	Side	1946-48	*52110A	Stop lamp	1946-48	31281B
Generator	1946-48	238395	" (ECV13/3 & Tipper)	1946-48	*52105A	Spring	—	315543
Horn	1946-48	069344	Stop tail and number plate	1946-48	*53063B	Warning light (ignition) ..	1946-48	*38013B
Inspection lamp sockets ..	1946-48	*39511A	Mirror	1946-48	*620601			
Junction box	1946-48	78266A	Starting motor	1946-48	270468	Windshield wipers		
LAMPS			SWITCHES			Motor	1946-48	733071
Dash	1946-48	56031A	Horn push and dipper ..	1946-48	*380150	Arm	1946-48	*735045
						Blade	1946-48	727802

MORRIS COMMERCIAL CV Ambulance 1947-51

Ammeter	1947-49	*364510	LAMPS, Head, Home—			Starting motor	1947-48	270468
"	1950-51	36047D	continued			"	1949	26008A/B
Battery	1947-51	SLT13A	R.H.D., dip left (L.H.)	1948-49	50440A	"	1950-51	26038A
Coil, ignition	1947-51	*45020A	" non-dip (R.H.)	1948-49	50441A	Suppressor (distributor) ..	1951	78105A
Control box	1947	*37032A	" dip left (L.H.)	1950	*50854A	" (plug)	1951	78106A
"	1948-51	37065E	" non-dip (R.H.)	1950	*50855A			
"	1951	*37138A/B	" dip left			SWITCHES		
Distributor	1947-48	406354	" (L.H. and R.H.)	1951	*50728D	Horn push and dipper ..	1947-51	*31329A
"	1949-51	40129D/F	ditto .. Later	1951	*51014A/F	Ignition and lighting ..	1947-51	*34018A
Fuse box	1951	033240	Head, Export			Starting motor	1947-51	76427A
Generator	1947	*22446A	R.H.D., dip left ..	1950	*50854A	Stop lamp	1947-51	31281B
"	1948-49	238395	"	1951	*50728D	Spring	—	315543
"	1950-51	*22250E/F	"	1951	*51014A/F	Trafficator	1947-51	31190A
"	1951	22258D	L.H.D., dip right ..	1950	*A50854A	Trafficators	1947-48	*539911
Horn	1947-51	*069213	"	1951	*A50728D	"	1949-51	*54039A
Inspection lamp sockets ..	1947-51	39507A	"	1951	*51016A/F	Warning light (ignition) ..	1947-51	*38013B
Junction box	1947-51	78266A	Head, Export Europe			Windshield wipers		
LAMPS			(not France)	1950	*B50854A	Motor	1947-48	*733107
Dash	1950-51	56031A	ditto	1951	*B50728D	"	1949-51	75089B
Head, Home			ditto .. Later	1951	*51015A/F	Arm	1947-48	*735045
R.H.D., dip left (L.H.)	1947	*50442A	Side	1947-48	*52105A	"	1949-51	*735096
" non-dip (R.H.)	1947	*50443A	"	1949-51	52154A	Blade	1947-48	727802
			Stop tail and number plate	1947-51	*53031D	"	1949-51	727803

MORRIS COMMERCIAL CVF13/5 1946-47: CV11/30 1946-48: CV11/40 1946-51 (Lorries): CV9/40 1950-51: CV10 1946-48 (Tippers)

Ammeter	1946-48	*364428	Control box	1946	*37003A	Generator	1946-48	238395
"	1950-51	36047D	"	1947-48	*37032A	" (Export)	1946-48	*22446A
Battery	1946-48	SG11A	"	1950-51	37065E	"	1950-51	*22250E/F
"	1950-51	SLT13A	"	1951	*37138A/B	"	1951	22258D
Coil, ignition	1946-51	*45020A	Distributor	1946-48	406354	"	Later	
			"	1950-51	40129D/F	Horn	1946-51	*069213
			Fuse box	1951	033240	Junction box	1946-51	78266A

* See Supersession Chart R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS COMMERCIAL CVF13/5 1946-47: CV11/30 1946-48: CV11/40 1946-51 (Lorries): CV9/40 1950-51: CV10 1946-48 (Tippers)—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			SWITCHES—continued		
Dash	1950-51	56031A	Head, Export Europe (not France) .. .	1951	*B50728D	Solenoid operating (CVF13/5) .. .	1946-47	*317067
Head, Home			ditto .. . Later	1951	*51015E	Starting motor (except CVF13/5) .. .	1946-51	76427A
R.H.D., dip left (L.H.)	1946-48	*50336A	Side	1946-48	52036A	Stop lamp .. .	1950-51	31281B
.. non-dip (R.H.)	1946-48	*50337A	1950-51	52154A	Spring	1950-51	315543
.. dip left (L.H.)	1950	*50854D	Stop tail and number plate	1946-48	*53028B	Trafficator (G.P.O.) .. .	1951	031296
.. non-dip (R.H.)	1950	*50855B	1950-51	*53063B	Trafficators (G.P.O.) .. .	1951	*053830
.. dip left (L.H. and R.H.)	1951	*50728D	Mirror	1946-51	*620601	Warning light (ignition) .. .	1946-48	*318505
ditto .. . Later	1951	*51014E	Starting motor .. .	1946-48	270468	1949-51	*38013B
..	1950-51	26038A			
Head, Export			SWITCHES			Windshield wipers		
Vertical dip (L.H.) ..	1946-48	50338A	Battery master (G.P.O.)	1951	76602B	Motor	1946-51	*75049A
.. .. (R.H.) ..	1946-48	*50339A	Horn push and dipper ..	1946-51	*380150 (CV10/5) ..	1946-48	733071
R.H.D., dip left ..	1951	*50728D	ditto (G.P.O.) ..	1951	*31321A	Arm	1946-48	*735045
.. .. . Later	1951	*51014E	Ignition and lighting ..	1946-48	*344540	1950-51	735065
L.H.D., dip right ..	1951	*A50728D	1950-51	*34018A	Blade	1946-48	727802
.. .. . Later	1951	*51016E	Solenoid, starting motor (CVF13-5) .. .	1946-47	76022B	1950-51	727803

MORRIS COMMERCIAL ECV13/5 (Petrol) and ECVO13/5 (Diesel) 1949

Ammeter	1949	36047D	LAMPS—continued			SWITCHES—continued		
Battery (Petrol) .. .	1949	SLT13A	Head			Ignition and lighting (Petrol) .. .	1949	*344540
.. (Diesel)	1949	LMCXB	Vertical dip (L.H.) ..	1949	*50427A	Lighting (Diesel) .. .	1949	*34031A
Coil, ignition (Petrol) ..	1949	*45020A (R.H.) ..	1949	*50464A	Solenoid operating (Diesel) .. .	1949	*31071A
Control box	1949	37065E	Side	1949	*52105A	Starting motor (Petrol) .. .	1949	76427A
Distributor (Petrol) ..	1949	40129D	Stop tail and number plate	1949	*53063B	Stop lamp (Diesel) .. .	1949	31281B
Generator (Petrol) .. .	1949	*22446A	Mirror	1949	*620601	Spring	—	315543
.. .. . Later	1949	*22250E/F	Starting motor (Petrol) ..	1949	270468	Warning light (ignition) (Petrol) .. .	1949	*38013B
.. .. (Diesel) .. .	1949	*22424A Later	1949	26008A/B	Windshield wipers		
Horn	1949	069344 (Diesel, serviced by C.A.V.) ..	1949	BS524K60	Motor	1949	733071
Inspection lamp sockets ..	1949	39507A	SWITCHES			Arm	1949	*735096
Junction box	1949	78266A	Fuel gauge (Diesel) ..	1949	*31071A	Blade	1949	727802
LAMPS			Horn push and dipper ..	1949	*380150			
Dash	1949	56031A						

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949	BPE6A60Q320-3S338	Nozzle holder	1949	PNH1
Governor	1949	BEPMN80A59	Nozzle	1949	PN150-1
Coupling	1949	BZKG31-502	Filter	1949	BFA5P2
Venturi	1949	BEPK58-46-71			

MORRIS COMMERCIAL FV 1949-53: FVS 1954: FVS12/5 1955: Petrol Tanker 1951-52

Ammeter	1949-54	*36018B	LAMPS			Starting motor	1949	26008A/B
.. .. .	1955	36125B	Head, Home			1950-55	26038A
Battery	1949-51	SG11A	R.H.D., dip left (L.H.)	1949-51	*50728D	1951-52	26066A
.. .. .	1952-55	GT11A	.. non-dip (R.H.)	1949-51	*50729D	Suppressor (distributor) ..	1951-53	78105A
Bulb holder, panel light ..	1949-55	39007A	.. dip left			.. (plug)	1954-55	78114A
"Bulb"	1955	39010A	(L.H. and R.H.) Later	1951-54	*51017A	1951-55	78106A
.. .. .	1949-55	987	ditto	1955	51344A	SWITCHES		
Coil, ignition	1949-54	*45020A	Head, Export			Horn push and dipper ..	1949-54	*380191
.. .. .	1955	*45053A	R.H.D., dip left ..	1949-51	*50728D	1955	*31418A
.. .. (Petrol Tanker)	1951-52	*45023A Later	1951-54	*51017A	Ignition	1955	31497A
Control box	1949-52	37065E	1955	51344A	Ignition and lighting ..	1949-54	*34018A
.. .. . Later	1952-55	*37138A/D	L.H.D., dip right ..	1949-51	*A50728D	Lighting	1955	31126B
Distributor	1949-53	40129D/F Later	1951-54	50873B	Knob	—	315042
.. .. .	1954-55	40228B/D	1955	*51345B	Panel	1949-54	*31276A
.. .. (Petrol Tanker)	1951-52	40241A/B	Head, Export Europe (not France) ..	1949-51	*B50728D	Starting motor	1949-55	76427A/D
Fuse box	1952-53	033240	1951-54	*51018A (series-parallel, serviced by C.A.V.) ..	1949-55	1820410
.. .. .	1954-55	033239 Later	1955	51346A	Windshield wiper ..	1955	31201D
Generator	1949-52	*22250E/F	1955	51344A	Knob	—	*312850
.. .. . Later	1952-55	22258D	Number plate illumination	1954-55	53101E	Warning lights		
.. .. (Petrol Tanker)	1951-52	*22260A	Side	1949-54	52047A	Ignition	1949-55	*38013B
.. .. . Later	1952	22268A	1955	52139B	Main beam	1949-55	38052B
Horn	1949-55	*069213	Stop tail and number plate	1949-53	*53063B	Windshield wipers		
Inspection lamp sockets ..	1949-50	39507A	Stop tail	1954-55	53178D/E	Motor	1949-55	*75069B
.. .. .	1951-52	39515A	(Petrol Tanker, serviced by C.A.V.) ..	1951-52	*53169H	Arm	1949-55	735156
Junction box	1949-55	78265A	Mirror	1949-54	*062519	Blade	1949-55	727803
.. .. .	1949-55	78266A	Reflex reflector	1955	57052A			

* See Supersession Chart R.H.D. .. Right hand drive L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS COMMERCIAL FVO 1949-53: FVSO 1954: FVSO12/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-54	*36018B	LAMPS			Starting motor (serviced by C.A.V.)	1949-55	BS524K60
"	1955	36125B	Head, Home					
Battery	1949-52	LMCXB	R.H.D., dip left (L.H.)	1949-51	*50728D	SWITCHES		
		EW9A	" non-dip (R.H.)	1949-51	*50729D	Fuel gauge	1949-54	*31071A
		MCX9A	" dip left			Horn push and dipper..	1949-54	*380191
Bulb holder, panel light ..	1949-54	39007A	(L.H. and R.H.) Later	1951-54	*51017A	"	1955	*31418A
Bulb holder, flasher ..	1955	39007A	ditto	1955	51344A	Lighting	1949-54	*34031A
Bulb holder, speedo. ..	1955	39010A	Head, Export			"	1955	31126B
Bulb	1949-55	987	R.H.D., dip left ..	1949-51	*50728D	"	1955	315042
Control box (Home) ..	1949-54	*37076E	" " " Later ..	1951-54	*51017A	Knob	1949-54	*31276A
" " (Export) ..	1949-52	*37076E	ditto	1955	51344A	Panel	1949-54	*31071A
" " " Later ..	1952-54	*37139D	L.H.D., dip right ..	1949-51	*A50728D	Solenoid operating ..	1949-54	*31071A
" " " ..	1955	*37139E	" " " Later ..	1951-54	50873E	"	1955	31107A
Fuse box	1952-55	033240	Head, Export Europe			" " " Later ..	1955	31253A
Generator	1949	*22424A	(not France)	1949-51	*B50728D	Knob	1955	*31736E
"	1950-52	*22441A	ditto	1951-54	*51018A	Windshield wiper ..	1955	31201D
"	1952-55	*22458A/B	ditto	1955	51346A	Knob	1955	*312850
Horn	1949-55	*069213	Number plate illumination	1954-55	53101E	Warning light (main beam)	1949-55	38052B
Inspection lamp sockets ..	1949-50	39507A	Side	1949-54	52047A	Windshield wipers		
"	1951-52	39515A	Stop tail and number plate	1949-53	*53063B	Motor	1949-55	*75069B
Junction box	1949-55	78265A	Mirror	1949-55	53178D/E	Arm	1949-55	735156
"	1949-55	78266A			*062519	Blade	1949-55	727803

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-50	BPE6A60Q320-3S338E	Venturi	1949-55	BEPK60-46-80
Governor	1951-55	BPE6A60S320-3S6222E	Nozzle holder	1949-55	PNH2
"	1949-50	BEPMZ80A83	Nozzle	1949-55	PN150-2
"	1951-55	BEPMZ80A96	Filter	1949-55	BFA5P2
Coupling	1949-55	BZKG31-502			

MORRIS COMMERCIAL NV 1954: NV12/3 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954-55	36125A	LAMPS—continued			SWITCHES—continued		
Battery	1954-55	GT11A	Side	1954-55	52139B	Windshield wiper ..	1955	31201D
Bulb holder, panel light ..	1954-55	39010A	Stop tail	1954-55	53178D/E	Knob	—	318385
Bulb holder, speedo. ..	1954-55	39007A	Reflex reflector ..	1955	57052A	Warning lights		
Coil, ignition	1954	*45020A/B	Starting motor ..	1954-55	26038A	Ignition	1954-55	38049A
Control box	1955	*45053A	Suppressor (distributor) ..	1954	78105A	Main beam	1954-55	38052B
" " " Later ..	1954	37065E	" (plug)	1955	78114A	Windshield wipers		
" " " ..	1954-55	*37138A/D		1954-55	78106A	Motor	1954-55	75146A
Distributor	1954-55	40129D/F	SWITCHES			Wheelbox	1954-55	72624H
Fuse box	1954-55	033239	Horn push and dipper..	1954-55	*31305A	Crosshead and rack assy.		
Generator	1954-55	22258D	Ignition	1954-55	31187D	(Left hand drive) ..	1954-55	738499
Horn	1954-55	*069213	Lighting	1954-55	3126B	(Right hand drive) ..	1954-55	738987
LAMPS			Knob	1954	315042	Outer casing	1954-55	739870
Head, Home			Panel	1954	31192A	Motor to wheelbox ..	1954-55	739870
R.H.D., dip left ..	1954-55	51344A	Knob	1955	315062	Wheelbox to wheelbox		
Head, Export			Panel	1955	31201D	(Left hand drive) ..	1954-55	*739974
R.H.D., dip left ..	1954-55	51344A	Knob	1955	312850	End tube	1954-55	740031
L.H.D., dip right ..	1954-55	*51345A & B	Starting motor ..	1954-55	76423A	Arm, left hand ..	1954-55	737639
Head, Export Europe			Coupling	1954	76442B	" right hand	1954-55	737640
(not France)	1954-55	51346A	Windshield wiper ..	1954	31192A	Blade	1954-55	727803
Number plate illumination	1954-55	53101E	Knob	—	315062			

MORRIS COMMERCIAL NVS 1951-54: NVS12/3 and NVS13/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-55	36125A/B	LAMPS, Head, Export—			SWITCHES—continued		
Battery	1951-55	GT11A	continued			Starting motor	1951-55	76423A
Bulb holder, panel light ..	1951-55	39007A	L.H.D., dip right ..	1951	*A50799D	Coupling	—	76442B
"	1953-55	39010A	" " " Later ..	1951-53	*50528M	Windshield wiper ..	1951-54	*31252A
Coil, ignition	1951-54	*45020A/B	Head, Export Europe	1954-55	*51345A & B	Knob	—	*315094
"	1955	*45053A	(not France)	1951	*B50799D	Windshield wiper ..	1955	31201D
Control box	1951-52	37065E	ditto	1951-54	*50961A	Knob	—	318385
" " " Later ..	1952-55	*37138B	ditto	1954-55	51346A	Warning lights		
Distributor	1951	40228A	Number plate illumination	1953-55	53101E	Ignition	1951-54	*38013B
"	1951-55	40228B/D	Side	1951-55	52139B	"	1955	38049A
Fuse box	1952-55	033239	Stop tail and number plate	1951-55	*53063B	Main beam	1951-55	38052B
Generator	1951-52	*22250E/F	ditto	1953-55	53178D	Windshield wipers		
"	1952-55	22258D	Starting motor ..	1951-55	26038A	Motor	1951-52	*75100D
Horn (low note)	1951-55	*069213	Suppressor (distributor) ..	1951-55	78114A	"	1953-55	75146A
LAMPS			" (plug)	1951-55	78106A	Wheelbox	1951-55	72624A/H
Head, Home			SWITCHES			Crosshead and rack assy.		
R.H.D., dip left (L.H.)	1951	*50799D	Horn push and dipper..	1951-55	*31305A	(Left hand drive) ..	1951-55	738499
" non-dip (R.H.)	1951	*50579K	Ignition	1951-55	31187D	(Right hand drive) ..	1951-55	738987
" dip left			Lighting	1951-54	*31251A	Outer casing	1951-55	739870
(L.H. and R.H.) Later	1951	*50959A	Knob	1951-54	*316117	Motor to wheelbox ..	1951-55	739870
ditto	1952-53	*50992A	Lighting	1955	31126B	Wheelbox to wheelbox		
ditto	1954-55	51344A	Knob	1955	315042	(Left hand drive) ..	1953-55	*739974
Head, Export			Panel	1951-54	*31252A	End tube	1951-55	740031
R.H.D., dip left ..	1951	*50799D	Knob	1951-54	*315098	Arm, left hand ..	1951-55	737639
" " " " ..	1951	*50959A	Panel	1955	31201D	" right hand	1951-55	737640
" " " " ..	1952-53	*50992A	Knob	—	*312850	Blade	1951-55	727803
" " " " ..	1954-55	51344A						

* See Supersession Chart R.H.D. ... Right hand drive § Serviced by C.A.V. Ltd. L.H. ... Left hand R.H. ... Right hand L.H.D. ... Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS COMMERCIAL NVO 1951-54: NVO12/3 and NVO11/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-55	36125A/B	LAMPS, Head, Export—			SWITCHES— <i>continued</i>		
Battery	1951-52	LMCXB	<i>continued</i>			Solenoid, starting motor	1955	*76411E
		EW9A	L.H.D., dip right ..	1951	*A50799D	Solenoid operating ..	1951-52	31253A
	1953-55	MCX9A	" " " Later	1951-53	*50528M	Knob	—	*317366
(NVO12/3) ..	1955	MT19E	" " " ..	1954-55	*51345A & B	Solenoid operating ..	1953-55	31107A
Bulb holder, panel light ..	1951-55	39007A	Head, Export Europe			Starting motor (series-		
" " " ..	1951-55	39010A	(not France)	1951	*B50799D	parallel, serviced by		
Control box	1951-52	*37076E	ditto Later	1951-53	*50961A	C.A.V.)	1951-55	1820410
" " " Later	1952-55	*37139D/E	ditto	1954-55	51346A	Windshield wiper ..	1951-54	*31252A
" " (NVO12/3) ..	1955	*37138D	Number plate illumination			Knob	—	*315094
Fuse box	1952-55	033239	Side	1951-55	52139B	Windshield wiper ..	1955	31201D
Generator	1951-52	*22441A	Stop tail and number plate			Knob	—	*312850
" " " Later	1952-55	*22458A/B	Starting motor (serviced			Windshield wipers		
" " (NVO12/3) ..	1955	22258D	by C.A.V.)	1951-55	BS524K/ L60	Motor	1951-52	*75100D
Horn	1951-55	*069213	Starting motor (NVO12/3)			" " " ..	1953-55	75146A
LAMPS			ditto Later	1955	26051H	Wheelbox	1951-55	72624A/H
Head, Home			SWITCHES			Crosshead and rack assy.		
R.H.D., dip left (L.H.)	1951	*50799D	Horn push and dipper ..	1951-55	*31305A	(Left hand drive) ..	1951-55	738499
" non-dip (R.H.)	1951	*50579K	Lighting	1951-54	*31251A	(Right hand drive) ..	1951-55	738987
" dip left			Knob	—	*316117	Outer casing		
(L.H. and R.H.) Later	1951	*50959A	Lighting	1955	31126B	Motor to wheelbox ..	1951-55	739870
ditto	1952-53	*50992A	Knob	—	315042	Wheelbox to wheelbox		
ditto	1954-55	51344A	Panel	1951-54	*31252A	(Left hand drive) ..	1953-55	*739974
Head, Export			Knob	—	*315098	End tube	1951-55	740031
R.H.D., dip left	1951	*50799D	Panel	1955	31201D	Arm, left hand ..	1951-55	737639
" " " ..	1951	*50959A	Knob	—	*312850	" right hand ..	1951-55	737640
" " " ..	1952-53	*50992A	Panel	1955		Blade	1951-55	727803
" " " ..	1954-55	51344A	Knob	—				

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1951-55	BPE6A60S320-3S6222E	Nozzle holder	1951-55	PNH2
Governor	1951-55	BEPMZ80A96	Nozzle	1951-55	PN150-2
Coupling	1951-55	BZKG31-502	Filter	1951-52	BFA5P2
Venturi	1951-55	BEPK60-46-80	"	1953-55	F2-1

MORRIS COMMERCIAL OP Passenger Chassis 1949-50

Ammeter	1949-50	*36006B	Generator (24 volt,	1949-50	1151020	SWITCHES		
Control box (12 volt)	1949	37065E	serviced by C.A.V.) ..	1949-50	069344	Horn push and dipper ..	1949	*380150
" (24 volt,			Horn (12 volt)	1949	78266A	Ignition and lighting ..	1949-50	34054A
serviced by C.A.V.) ..	1949-50	189-4	Junction box	1950		Panel	1949-50	*314722
Fuse box	1950	*385211	Starting motor (serviced by			Solenoid operating ..	1949-50	*31071A
Generator (12 volt) ..	1949	*22424A	C.A.V.)	1949-50	BS524K60			

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-50	BPE6A60Q320-3S338E	Nozzle holder	1949-50	PNH2
Governor	1949-50	BEPMZ80A83	Nozzle	1949-50	PN150-2
Coupling	1949-50	BZKG31-502	Filter	1949-50	BFA5P2
Venturi	1949-50	BEPK60-46-80			

MORRIS COMMERCIAL PP Coach 1950-52

Ammeter	1950-51	*36006B	Horn	1950-51	*069213	LAMPS— <i>continued</i>		
Battery	1950-51	LMCXB	Inspection lamp sockets ..	1950-51	39507A	Side	1950-52	52047A
		EW9A	Junction box	1950-51	78266A	Stop tail and number plate	1950-52	*53062B
Bulb holder, panel light ..	1950-51	39007A	LAMPS			Starting motor	1950-51	26038A
Bulb	—	987	Head, Home			Suppressor (distributor) ..	1951	78105A
Coil, ignition	1950-51	*45020A	R.H.D., dip left (L.H.)	1950-51	*50728D	" (plug)	1951	78106A
Control box	1950-51	37065E	" non-dip (R.H.)	1950-51	*50729D	SWITCHES		
" " " Later	1951	*37138A/B	dip left			Battery master	1950-51	*768061
" " (heavy duty,			(L.H. and R.H.) ..	1952	*51017E	Horn push and dipper ..	1950-51	*380234
serviced by C.A.V.) ..	1950-51	202-1	Head, Export			Ignition and lighting ..	1950-51	*34018A
Distributor	1950-51	40129D/F	R.H.D., dip left ..	1950-51	*50728D	Panel	1950-51	*314722
Fuse box (standard) ..	1951	033240	L.H.D., dip right ..	1950-51	*A50728D	Starting motor	1950-51	76427A
" (heavy duty) ..	1950-51	*385211	" " " ..	1952	50873B	" (series-		
Generator (standard) ..	1950-51	*22250E/F	Head, Export Europe			parallel, serviced by		
" " " Later	1951	22258D	(not France)	1950-51	*B50728D	C.A.V.)	1950-51	1820410
" " (heavy duty,			ditto	1952	*51018E	Warning light (ignition) ..	1950-51	*38013B
serviced by C.A.V.) ..	1950-51	H5512-7						

MORRIS COMMERCIAL 10 cwt. 'J' Van 1949-57

Ammeter	1949-50	36047D	Control box	1949-54	37065E	Fuse box— <i>continued</i> ..	1954	033239
" " " ..	1951-54	*36113A	" " " ..	1955	*37138D	" " " ..	1955	033240
" " " ..	1955-57	36047E	" " " ..	1956-57	37182A/H	" " " ..	1956-57	033239
Battery	1949-57	GT19A	Distributor	1949-50	40152B	Generator	1949-52	*22250E/F
(G.P.O.)	1951-57	39007A	" " " ..	1951-53	*40237A/B	" " " " Later	1952-56	22258D
Bulb holder, panel light ..	1949-57	39007A	" " " ..	1954-57	40358D/F	" " " " ..	1956-57	22258E
Bulb	—	987	Fuse box	1951-53	033240	Horn	1949-57	*069213
Coil, ignition	1949-55	*45020A/B				Inspection lamp sockets ..	1949-55	39507A
" " " Later	1955-57	*45053A/H						

* See Supersession Chart § Serviced by C.A.V. Ltd. L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive continued